


Panasonic



Hybrid IP-PBX Installation Manual

Model No. **KX-TDA30**

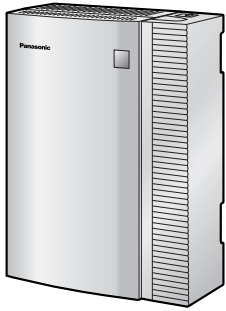

Thank you for purchasing a Panasonic Hybrid IP-PBX.
Please read this manual carefully before using this product and save this manual for future use.

KX-TDA30: MPR Version 2.0



SD Logo is
a trademark.

System Components

System Components Table

	Model	Description
Main Unit	KX-TDA30	Main Unit
Trunk Cards	KX-TDA3180	4-Port Analogue Trunk Card (LCOT4)
	KX-TDA3182	3-Port DID Card (DID3)
	KX-TDA3183	2-Port Analogue Trunk Card (LCOT2)
	KX-TDA3193	4-Port Caller ID Card (CID4)
	KX-TDA3280	2-Port BRI Card (BRI2)
	KX-TDA3283	1-Port BRI Card (BRI1)
	KX-TDA3480	4-Channel VoIP Gateway Card (IP-GW4)
Extension Cards	KX-TDA3171	4-Port Digital Extension Card (DLC4)
	KX-TDA3172	8-Port Digital Extension Card (DLC8)
	KX-TDA3173	4-Port Single Line Telephone Extension Card (SLC4)
	KX-TDA3174	8-Port Single Line Telephone Extension Card (SLC8)
Other Cards	KX-TDA3105	Memory Expansion Card (MEC)
	KX-TDA3161	4-Port Doorphone Card (DPH4)
	KX-TDA3162	2-Port Doorphone Card (German Type) (DPH2)
	KX-TDA3166	8-Channel Echo Canceller Card (ECHO8)
	KX-TDA3168	Extension Caller ID Card (EXT-CID)
	KX-TDA3191	2-Channel Message Card (MSG2)
	KX-TDA3196	Remote Card (RMT)
Optional SD Memory Cards	KX-TDA3820	SD Memory Card for Software Upgrade
	KX-TDA3920	SD Memory Card for Software Upgrade to Enhanced Version
Cell Stations (CSs)	KX-TDA0141CE	2-Channel Cell Station Unit Using a Super Hybrid Port or a DLC Card for DECT Portable Station
	KX-TDA0141	2-Channel Cell Station Unit Using a Super Hybrid Port or a DLC Card for 2.4 GHz Portable Station
Proprietary Equipment	KX-A236	Additional AC Adaptor
	KX-A228	S/M-type Back-up Battery Cable
	KX-T30865	Doorphone

Available Proprietary Telephones

The Hybrid IP-PBX supports Panasonic KX-T7000, KX-TD7000, and KX-TCA series telephones:

- Digital/Analogue proprietary telephones (e.g., KX-T7625, KX-T7630, KX-T7633, KX-T7636)

-
- Portable stations (e.g., KX-TD7590, KX-TD7690, KX-TCA155, KX-TCA255)
 - DSS consoles (e.g., KX-T7640)
 - Single line telephones (e.g., KX-T7710)

Note

The Hybrid IP-PBX does not support the following telephones:

- KX-T30800 series Proprietary Telephones and DSS consoles
- KX-T61600 series Proprietary Telephones and DSS consoles
- KX-T123200 series Proprietary Telephones and DSS consoles
- KX-TD7500 DECT Portable Station

For the equipment (e.g., Add-on Key Module, USB Module, Headset^{*1}) that can be connected to a particular telephone, refer to the telephone's manual.

For other equipment that can be connected to the Hybrid IP-PBX, refer to "1.2.2 System Connection Diagram".

Abbreviations in this manual

Proprietary telephone: PT

Digital proprietary telephone: DPT

Analogue proprietary telephone: APT

Portable station: PS

Single line telephone: SLT

Notice

- There are some optional service cards and features that are not available for certain countries/ areas. Consult your certified Panasonic dealer for detailed instructions.
- The power supply capacity of the Hybrid IP-PBX may differ from the values described in this manual depending on the model number. Please consult your dealer for detailed information.

^{*1} The KX-T7090 headset can be connected to the KX-T7000, KX-T7200, KX-T7300, KX-T7400, and KX-T7500 (except for KX-T7560/KX-T7565) series telephones.

Important Safety Instructions

SAFETY REQUIREMENTS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug the product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean with a damp cloth.
4. Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place the product on an unstable surface, as a fall may cause serious internal damage.
6. Slots and openings in the front, back and bottom of the cabinet are provided for ventilation; to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface while in use. The product should never be placed near or over a radiator or other heat source. This product should not be placed in a sealed environment unless proper ventilation is provided.
7. The product should only be connected to the type of electrical power supply specified on the product label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. For safety purposes this unit is equipped with an earthed plug. If you do not have an earthed outlet, please have one installed. Do not bypass this safety feature by tampering with the plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where the power cord may be stepped on or tripped on.
10. To reduce the risk of fire or electric shock, do not overload wall outlets and extension cords.
11. Do not insert objects of any kind into this product through its slots and openings, as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on or in the product.
12. To reduce the risk of electric shock, do not disassemble this product. Only qualified personnel should service this product. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock.
13. Unplug this product from the wall outlet and have it serviced by qualified service personnel in the following cases:
 - a) When the power supply cord or plug is damaged or frayed.
 - b) If liquid has been spilled into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate according to the operating instructions. Adjust only the controls that are explained in the operating instructions. Improper adjustment of other controls may result in damage and may require service by a qualified technician to restore the product to normal operation.
 - e) If the product has been dropped or the cabinet has been damaged.
 - f) If product performance deteriorates.
14. Avoid using wired telephones during an electrical storm. There is a remote risk of electric shock from lightning.
15. Do not use a telephone in the vicinity of a gas leak to report the leak.

SAVE THESE INSTRUCTIONS

Precaution

- Keep the unit away from heating appliances and devices that generate electrical noise such as fluorescent lamps, motors and televisions. These noise sources can interfere with the performance of the Hybrid IP-PBX.
- This unit should be kept free of dust, moisture, high temperature (more than 40 °C) and vibration, and should not be exposed to direct sunlight.
- If you are having problems making calls to outside destinations, follow this procedure to test the trunks:
 1. Disconnect the Hybrid IP-PBX from all trunks.
 2. Connect known working SLTs to those trunks.
 3. Make a call to an external destination using those SLTs.

If a call cannot be carried out correctly, there may be a problem with the trunk that the SLT is connected to. Contact your telephone company.

If all SLTs operate properly, there may be a problem with your Hybrid IP-PBX. Do not reconnect the Hybrid IP-PBX to the trunks until it has been serviced by an authorised Panasonic Factory Service Centre.
- Wipe the unit with a soft cloth. Do not clean with abrasive powders or with chemical agents such as benzene or thinner.

For users in Germany only

- When the unit is working, the noise is less than 70 dB (A) according to DIN 45635 Part 19.

For users in New Zealand only

- This equipment shall not be set to make automatic calls to the Telecom '111' Emergency Service.
- The grant of a Telepermit for any item of terminal equipment indicates only that Telecom has accepted that the item complies with minimum conditions for connection to its network. It indicates no endorsement of the product by Telecom, nor does it provide any sort of warranty. Above all, it provides no assurance that any item will work correctly in all respects with another item of Telepermitted equipment of a different make or model, nor does it imply that any product is compatible with all of Telecom's network services.
- This equipment is not capable, under all operating conditions, of correct operation at the higher speeds for which it is designed. Telecom will accept no responsibility should difficulties arise in such circumstances.
- Some parameters required for compliance with Telecom's Telepermit requirements are dependent on the equipment (PBX) associated with this modem. In order to operate within the limits for compliance with Telecom's Specifications, the associated PBX equipment shall be set to ensure that modem calls are answered between 3 and 30 seconds of receipt of ringing.
- **IMPORTANT NOTICE**
Under power failure conditions, the connected telephones may not operate. Please ensure that a separate telephone, not dependent on local power, is available for emergency use.

For users in Australia only

- No External TRC Terminal is provided due to an Internal Link between PE and TRC.

WARNING

- **THIS UNIT MAY ONLY BE INSTALLED AND SERVICED BY QUALIFIED SERVICE PERSONNEL.**

-
- IF DAMAGE TO THE UNIT EXPOSES ANY INTERNAL PARTS, DISCONNECT THE POWER SUPPLY CORD IMMEDIATELY AND RETURN THE UNIT TO YOUR DEALER.
 - WHEN RELOCATING THE EQUIPMENT, FIRST DISCONNECT THE TELECOM CONNECTION BEFORE DISCONNECTING THE POWER CONNECTION. WHEN THE UNIT IS INSTALLED IN THE NEW LOCATION, RECONNECT THE POWER FIRST, AND THEN RECONNECT THE TELECOM CONNECTION.
 - TO PREVENT POSSIBLE FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
 - THE POWER SUPPLY CORD IS USED AS THE MAIN DISCONNECT DEVICE. ENSURE THAT THE AC OUTLET IS LOCATED NEAR THE EQUIPMENT AND IS EASILY ACCESSIBLE.

CAUTION

DANGER OF EXPLOSION EXISTS IF A BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE BATTERY MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

For Future Reference

Please print, record, and retain the following information for future reference.

Note

The serial number of this product can be found on the label affixed to the unit. You should record the model number and the serial number of this unit as a permanent record of your purchase to aid in identification in the event of theft.

MODEL NO.	_____
SERIAL NO.	_____
DATE OF PURCHASE	_____
NAME OF DEALER	_____
DEALER'S ADDRESS	_____ _____ _____
DEALER'S TEL. NO.	_____



The KX-TDA30E, KX-TDA30NE, KX-TDA30GR, and KX-TDA30CE are designed to interwork with the:

- Analogue Public Switched Telephone Network (PSTN) of European countries
- Pan-European Integrated Services Digital Network (ISDN) using ISDN basic rate access

Panasonic Communications Co., Ltd./Panasonic Communications Company (U.K.) Ltd. declares that this equipment is in compliance with the essential requirements and other relevant provisions of Radio & Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC.

Declarations of Conformity for the relevant Panasonic products described in this manual are available for download by visiting:

<http://doc.panasonic.de>

Contact:

Panasonic Services Europe GmbH

Panasonic Testing Centre

Winsbergring 15, 22525 Hamburg, F.R. Germany

Introduction

This Installation Manual is designed to serve as an overall technical reference for the Panasonic Hybrid IP-PBX, KX-TDA30. It provides instructions for installing the hardware, and programming the Hybrid IP-PBX using the KX-TDA30 Maintenance Console.

The Structure of this Manual

This manual contains the following sections:

Section 1 System Outline

Provides general information on the Hybrid IP-PBX, including the system capacity and specifications.

Section 2 Installation

Describes the procedures to install the Hybrid IP-PBX. Detailed instructions for planning the installation site, installing the optional service cards, and cabling of peripheral equipment are provided. Further information on system expansion and peripheral equipment installation is included.

Section 3 Guide for the KX-TDA30 Maintenance Console

Explains the installation procedure, structure, and basic information of the KX-TDA30 Maintenance Console.

Section 4 Troubleshooting

Provides information on the Hybrid IP-PBX and telephone troubleshooting.

About the Other Manuals

Along with this Installation Manual, the following manuals are available:

Feature Guide

Describes all basic, optional and programmable features of the Hybrid IP-PBX, and step-by-step instruction for performing system programming using a proprietary telephone or a personal computer (PC).

User Manual

Provides operating instructions for end users using a PT, SLT, PS, or DSS Console.

Trademarks

- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- All other trademarks identified herein are the property of their respective owners.
- Screen shots reprinted with permission from Microsoft Corporation.

Precautions for Users in the United Kingdom

FOR YOUR SAFETY, PLEASE READ THE FOLLOWING TEXT CAREFULLY.

This appliance is supplied with a moulded three-pin mains plug for your safety and convenience. A 5 amp fuse is fitted in this plug. Should the fuse need to be replaced, please ensure that the replacement fuse has a rating of 5 amps and that it is approved by ASTA or BSI to BS1362.

Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover, you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover, the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local Panasonic dealer.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE AC OUTLET IN YOUR PREMISES, THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT-OFF PLUG IS INSERTED INTO ANY 13 AMP SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below. If in any doubt, please consult a qualified electrician.

WARNING

THIS APPLIANCE MUST BE EARTHED.


IMPORTANT: The wires in the mains lead are coloured as follows:

Green-and-yellow: Earth

Blue: Neutral

Brown: Live


As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire that is coloured GREEN-AND-YELLOW must be connected to the terminal in the plug that is marked with the letter E or by the safety earth symbol  or coloured GREEN or GREEN-AND-YELLOW.

The wire that is coloured BLUE must be connected to the terminal that is marked with the letter N or coloured BLACK.

The wire that is coloured BROWN must be connected to the terminal that is marked with the letter L or coloured RED.

How to replace the fuse: Open the fuse compartment with a screwdriver and replace the fuse and fuse cover.

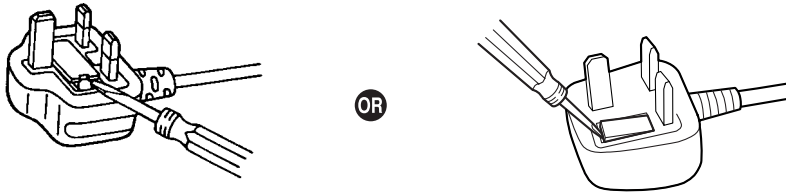

The equipment must be connected to direct extension lines, and a payphone should not be connected as an extension.

999 and 112 can be dialled on the apparatus after accessing the Exchange line for the purpose of making outgoing calls to the BT emergency services.

During dialling, this apparatus may tinkle the bells of other telephones using the same line. This is not a fault and we advise you not to call the Fault Repair Service.

Table of Contents

1	System Outline	15
1.1	System Highlights.....	16
1.1.1	System Highlights	16
1.2	Basic System Construction	18
1.2.1	Main Unit.....	18
1.2.2	System Connection Diagram	19
1.3	Options	21
1.3.1	Options.....	21
1.4	Specifications.....	23
1.4.1	General Description	23
1.4.2	Characteristics	25
1.4.3	System Capacity	26
2	Installation.....	31
2.1	Before Installation.....	32
2.1.1	Before Installation	32
2.2	Installation of the Hybrid IP-PBX.....	34
2.2.1	Unpacking	34
2.2.2	Names and Locations	35
2.2.3	Opening/Closing the Covers	36
2.2.4	Installation of the SD Memory Card.....	39
2.2.5	Frame Earth Connection	40
2.2.6	Backup Batteries Connection.....	41
2.2.7	Installing/Removing the Optional Service Cards.....	42
2.2.8	Types of Connectors	52
2.2.9	Wall Mounting (KX-TDA30)	54
2.2.10	Wall Mounting (AC Adaptor).....	57
2.2.11	Surge Protector Installation.....	60
2.3	Installation of the Trunk Cards	63
2.3.1	LCOT4 Card.....	63
2.3.2	LCOT2 Card.....	65
2.3.3	CID4 Card	66
2.3.4	DID3 Card	67
2.3.5	BRI2 Card	68
2.3.6	BRI1 Card	71
2.3.7	IP-GW4 Card.....	74
2.4	Installation of the Extension Cards	76
2.4.1	DLC4 Card	76
2.4.2	SLC4 Card	78
2.4.3	DLC8 Card	79
2.4.4	SLC8 Card	80
2.5	Installation of the Other Cards.....	81
2.5.1	DPH4 Card.....	81
2.5.2	DPH2 Card.....	84
2.5.3	ECHO8 Card.....	87
2.5.4	MSG2 Card	88
2.5.5	EXT-CID Card	89

2.5.6	MEC Card.....	90
2.5.7	RMT Card.....	92
2.6	Connection of Extensions	94
2.6.1	Maximum Cabling Distances of the Extension Wiring (Twisted Cable)	94
2.6.2	Parallel Connection of the Extensions.....	95
2.6.3	Digital EXtra Device Port (Digital XDP) Connection	97
2.6.4	First Party Call Control CTI Connection	102
2.7	Connection of DECT Portable Stations	103
2.7.1	Overview.....	103
2.7.2	Procedure Overview	105
2.7.3	Site Planning	107
2.7.4	Before Site Survey.....	111
2.7.5	Site Survey Using the KX-TCA255/KX-TD7590	115
2.7.6	After Site Survey.....	119
2.7.7	Connecting a Cell Station to the Hybrid IP-PBX.....	120
2.7.8	Wall Mounting.....	127
2.8	Connection of 2.4 GHz Portable Stations.....	129
2.8.1	Overview.....	129
2.8.2	Procedure Overview	130
2.8.3	Site Planning	132
2.8.4	Before Site Survey.....	136
2.8.5	Site Survey	138
2.8.6	After Site Survey.....	142
2.8.7	Connecting a Cell Station to the Hybrid IP-PBX.....	143
2.8.8	Wall Mounting.....	150
2.9	Connection of Doorphones, Door Openers, External Sensors, and External Relays ...	152
2.9.1	Connection of Doorphones, Door Openers, External Sensors, and External Relays	152
2.10	Connection of Peripherals	163
2.10.1	Connection of Peripherals	163
2.11	Power Failure Connections	167
2.11.1	Power Failure Connections.....	167
2.12	Starting the Hybrid IP-PBX	169
2.12.1	Starting the Hybrid IP-PBX.....	169
3	Guide for the KX-TDA30 Maintenance Console	173
3.1	Overview	174
3.1.1	Overview.....	174
3.2	Connection.....	175
3.2.1	Connection	175
3.3	Installation of the KX-TDA30 Maintenance Console	177
3.3.1	Installing and Starting the KX-TDA30 Maintenance Console.....	177
4	Troubleshooting	181
4.1	Troubleshooting	182
4.1.1	Installation	182
4.1.2	Connection	184
4.1.3	Operation.....	186
4.1.4	Using the Reset Button	187
4.1.5	Troubleshooting by Error Log	188
5	Appendix.....	197

5.1	Revision History	198
5.1.1	MPR Version 1.1	198
5.1.2	MPR Version 2.0	199
	Index	201

Section 1

System Outline

This section provides general information on the Hybrid IP-PBX, including the system capacity and specifications.

1.1 System Highlights

1.1.1 System Highlights

Networking Features

This Hybrid IP-PBX supports the following networking features:

Virtual Private Network (VPN)

VPN is a service provided by the telephone company. It uses an existing line as if it were a private line.

Voice over Internet Protocol (VoIP) Network

The PBX can connect to another PBX via a private IP network. In this case, voice signals are converted into IP packets and sent through this network.

Built-in Small Call Centre Features

An incoming call distribution group can be used as a small call centre with the following features:

Queuing Feature

When a preprogrammed number of extensions in an incoming call distribution group are busy, additional incoming calls can wait in a queue. While calls are waiting in the queue, the calls are handled by the Queuing Time Table, which can be assigned for each time mode (day/lunch/break/night).

Log-in/Log-out

Incoming call distribution group members can join (**Log-in**) or leave (**Log-out**) the groups manually. While logged-in, a member extension can have a preprogrammed time period automatically for refusing calls after completing the last call (**Wrap-up**).

VIP Call

It is possible to assign a priority to incoming call distribution groups. If an extension belongs to multiple groups and the extension becomes idle, queuing calls in the groups will be distributed to the extension in priority order.

Computer Telephony Integration (CTI) Features

Connecting a personal computer (PC) to a DPT, or connecting a Server PC to this Hybrid IP-PBX allows function of the PC, PBX and extension to be integrated so that, for example, detailed caller information can be taken from a database and displayed on the PC as a call arrives, or the PC can dial numbers for the extension automatically.

Voice Mail Features

This Hybrid IP-PBX supports Voice Processing Systems (VPS) with DTMF Integration as well as DPT (Digital) Integration.

Paralleled Telephone Features

By connecting telephones in parallel, you can increase the number of telephones connected to the PBX without adding additional extension cards.

Parallel Mode

An SLT can be connected to an APT or DPT which is connected to a Super Hybrid Port of the PBX. The SLT shares the same extension number with the APT or DPT.

EXtra Device Port (XDP) Mode

An SLT can be connected to a DPT which is connected to a Super Hybrid Port of the PBX. Unlike parallel mode, XDP mode allows each telephone to act as an independent extension with its own extension number.

Digital XDP

A DPT can be connected to another DPT which is connected to a DPT port or a Super Hybrid Port of the PBX. Similar to XDP mode, each DPT acts as an independent extension with its own extension number.

Portable Station (PS) Features

PSs (e.g., KX-TCA155, KX-TCA255, KX-TD7690) can be connected to this Hybrid IP-PBX. It is possible to use the Hybrid IP-PBX features using the PS like a PT. A PS can also be used in parallel with a wired telephone (**Wireless XDP Parallel Mode**). In this case, the wired telephone is the main telephone and the PS is the sub telephone.

PC Phone/PC Console Features

This Hybrid IP-PBX supports PC Phone and PC Console. These Panasonic CTI applications provide advanced features combining telephone and PC, such as the ability to display detailed caller information, including a photograph, on the screen of the PC when a call is received, or to dial a telephone number automatically just by selecting a name.

Hospitality Features

This Hybrid IP-PBX has several features that support its use in a hotel-type environment. Extensions corresponding to guest rooms can be "checked in" or "checked out" by a designated hotel operator, who can also check or set wake-up calls, and print out records of guest charges.


1.2 Basic System Construction

1.2.1 Main Unit


The main unit is equipped with 4 Super Hybrid Ports. For system expansion, optional service cards can be installed, and an additional AC adaptor can also be connected.




Construction of Main Unit

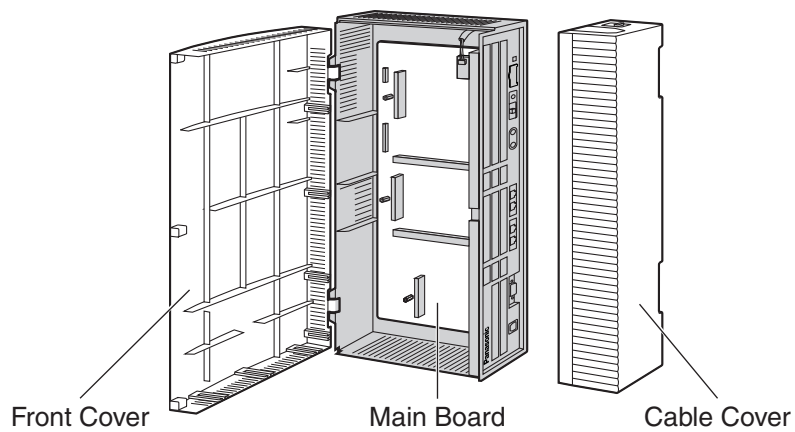

1.2.2 System Connection Diagram

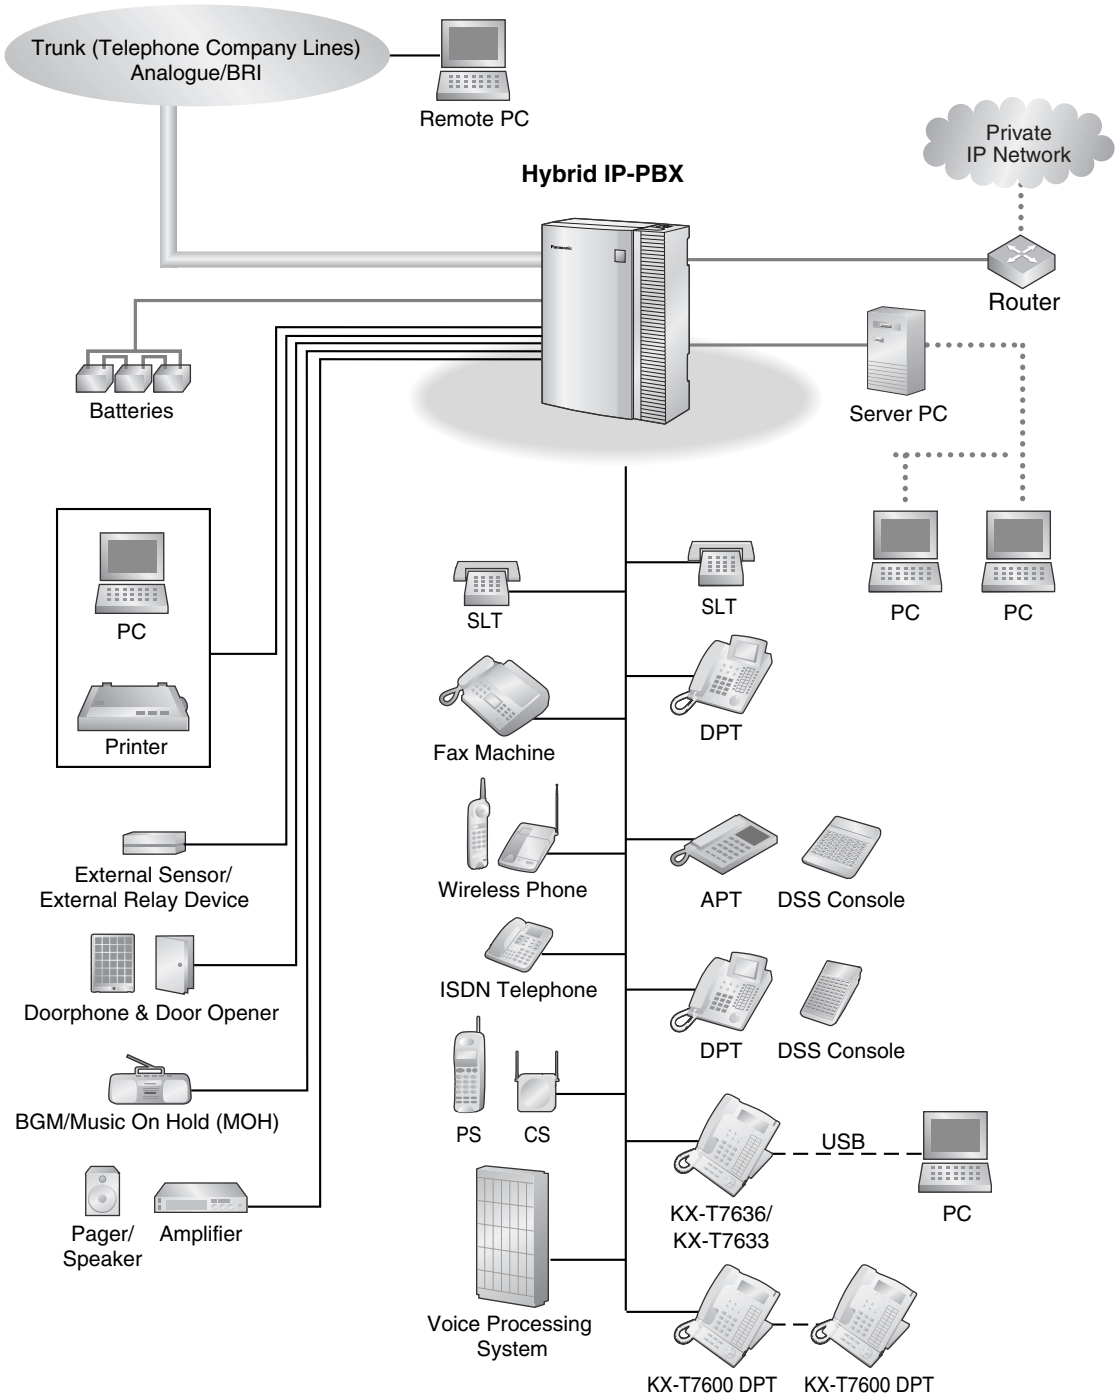

1.2 Basic System Construction

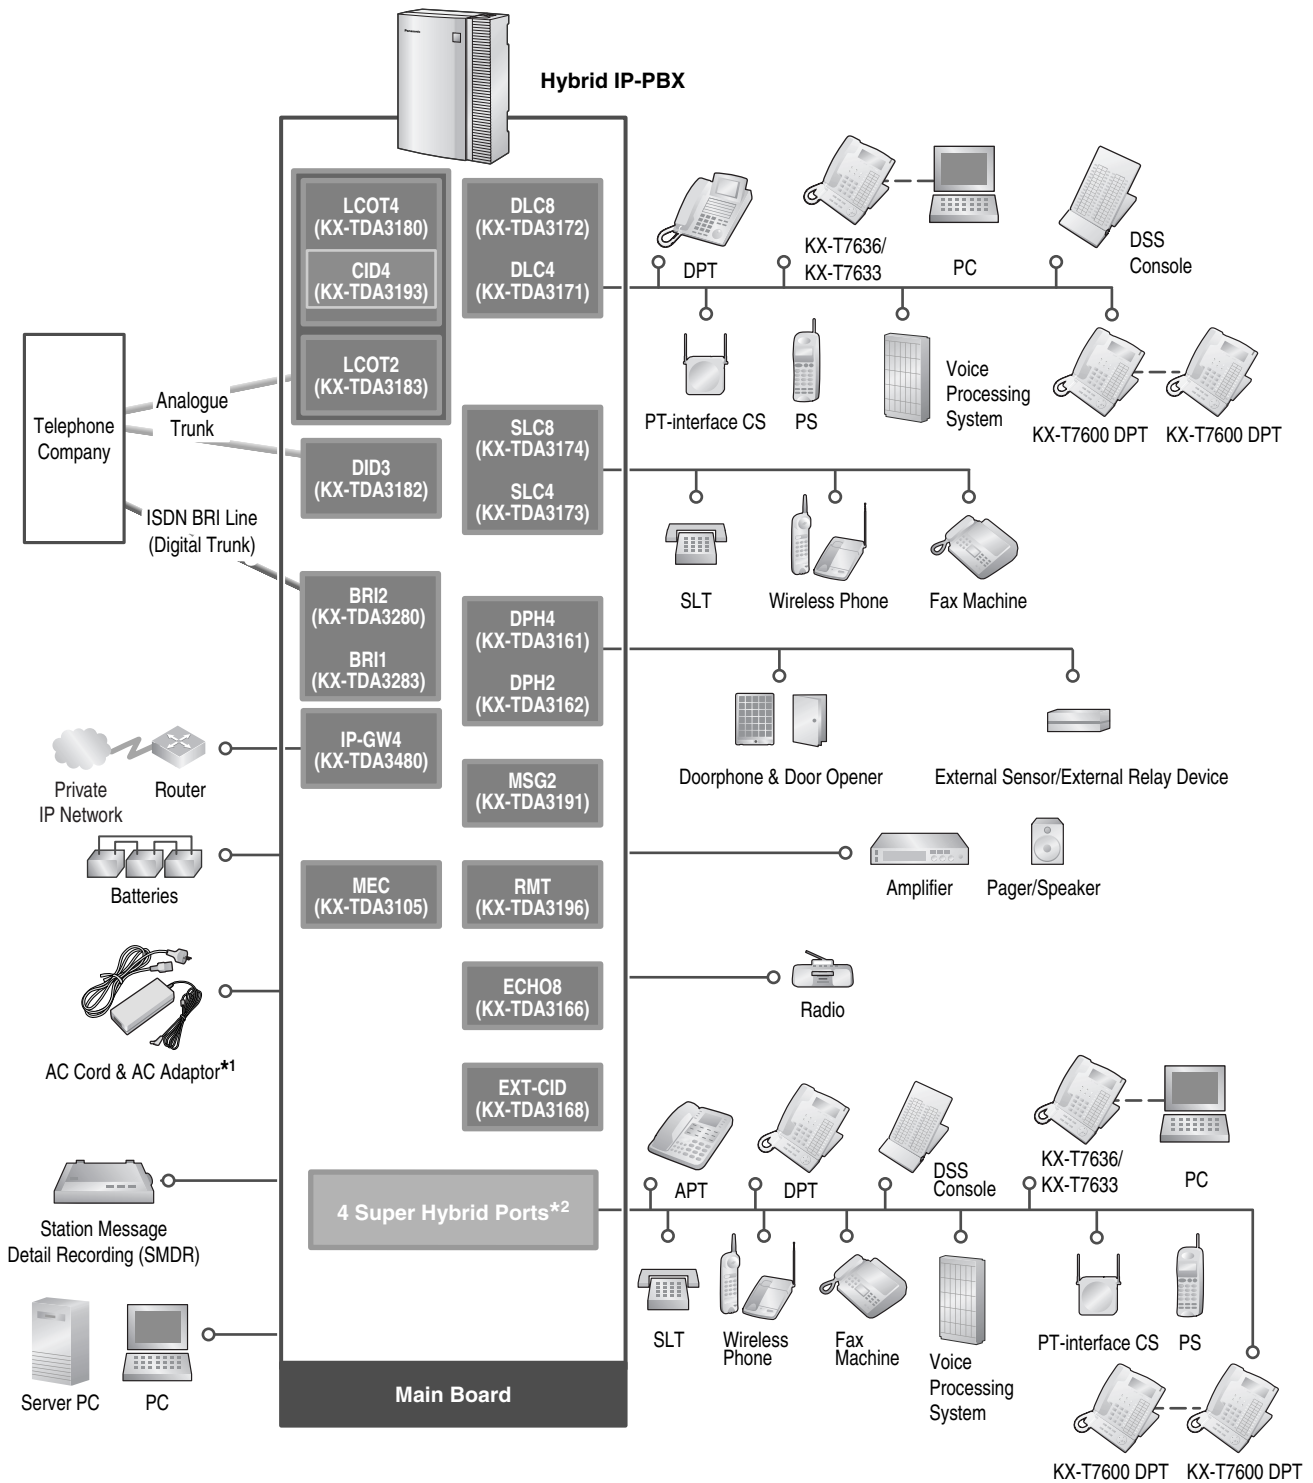

*1 In addition to the supplied AC adaptor, an additional AC adaptor can be connected to the Hybrid IP-PBX.

*2 The Hybrid IP-PBX has 4 Super Hybrid Ports pre-installed.

1.3 Options

1.3.1 Options

Model No.	Model Name	Description	Maximum Quantity
KX-TDA3105	Memory Expansion Card (MEC)	Memory expansion card to increase Personal/System Speed Dialling number storage space, double the number of DPTs (using Digital XDP connection), and enable Broadcasting, display language selection for VM Menu, and Call Billing for Guest Room features. To be installed in the MEC slot.	1
KX-TDA3161	4-Port Doorphone Card (DPH4)	4-port doorphone card for 4 doorphones, 4 door openers or external relays, and 4 external sensors.	1
KX-TDA3162	2-Port Doorphone Card (German Type) (DPH2)	2-port doorphone card for 2 German type doorphones, 2 door openers, 4 external sensors, and 4 external relays.	1
KX-TDA3166	8-Channel Echo Canceller Card (ECHO8)	8-channel card for echo cancellation during conferences.	1
KX-TDA3168	Extension Caller ID Card (EXT-CID)	Sends Caller ID signals to extension ports.	1
KX-TDA3171	4-Port Digital Extension Card (DLC4)	4-port digital extension card for DPTs, DSS consoles, a Voice Processing System (VPS), and PT-interface CSs.	1
KX-TDA3172	8-Port Digital Extension Card (DLC8)	8-port digital extension card for DPTs, DSS consoles, a VPS, and PT-interface CSs.	2
KX-TDA3173	4-Port Single Line Telephone Extension Card (SLC4)	4-port extension card for SLTs.	1
KX-TDA3174	8-Port Single Line Telephone Extension Card (SLC8)	8-port extension card for SLTs.	2
KX-TDA3180	4-Port Analogue Trunk Card (LCOT4)	4-port analogue trunk card with 2 power failure transfer (PFT) ports.	3
KX-TDA3182	3-Port DID Card (DID3)	3-port DID analogue trunk card.	2
KX-TDA3183	2-Port Analogue Trunk Card (LCOT2)	2-port analogue trunk card with 2 power failure transfer (PFT) ports.	3
KX-TDA3191	2-Channel Message Card (MSG2)	2-channel message card.	2
KX-TDA3193	4-Port Caller ID Card (CID4)	4-port Caller ID signal type FSK/FSK (with Call Waiting Caller ID [Visual Caller ID])/DTMF. To be mounted on the LCOT4 card.	3

1.3 Options

Model No.	Model Name	Description	Maximum Quantity
KX-TDA3196	Remote Card (RMT)	Analogue modem card for remote communication with the Hybrid IP-PBX. V90 support. To be installed in the RMT slot.	1
KX-TDA3280	2-Port BRI Card (BRI2)	2-port ISDN Basic Rate Interface card with 1 power failure transfer (PFT) port. EURO-ISDN/ETSI compliant.	3
KX-TDA3283	1-Port BRI Card (BRI1)	1-port ISDN Basic Rate Interface card. EURO-ISDN/ETSI compliant.	3
KX-TDA3480	4-Channel VoIP Gateway Card (IP-GW4)	4-channel VoIP gateway card. Compliant with VoIP H.323 V.2 protocol, and ITU-T G.729a, G.723.1, and G.711 CODEC methods.	1
KX-TDA3820	SD Memory Card for Software Upgrade	Optional SD Memory Card to upgrade the Hybrid IP-PBX with MPR version 1 or 1.1 to version 2.0.	1
KX-TDA3920	SD Memory Card for Software Upgrade to Enhanced Version	Optional SD Memory Card to upgrade the Hybrid IP-PBX with MPR version 1 or 1.1 to version 2.0, and for NDSS feature and CTI enhancement.	1
KX-A236	Additional AC Adaptor	AC adaptor and AC cord for system expansion.	1

1.4 Specifications

1.4.1 General Description

Switching		Non-blocking
AC Adaptor	AC Input	100 V AC to 240 V AC, 1.5 A, 50 Hz/60 Hz
	DC Output	40 V, 1.38 A (55.2 W)
DC Input		<ul style="list-style-type: none"> DC IN 1: 40 V, 1.38 A (55.2 W) DC IN 2: 40 V, 1.38 A (55.2 W)
External Battery		+36 V DC (+12 V DC × 3, battery capacity of 14 Ah or below recommended for each external battery)
Maximum Power Failure Tolerance		300 ms (without using backup batteries)
Memory Backup Duration		7 years
Dialling	Trunk	Dial Pulse (DP) 10 pps, 20 pps Tone (DTMF) Dialling
	Extension	Dial Pulse (DP) 10 pps, 20 pps Tone (DTMF) Dialling
Connectors	Trunk	RJ45/RJ11 (2 wire) × each trunk port
	Extension	RJ45/RJ11 (4 wire) × each extension port
	Paging Output	1 conductor jack
	External MOH (Music on Hold) Output	1 conductor jack
Mode Conversion		DP-DTMF, DTMF-DP
Ring Frequency		20 Hz/25 Hz (selectable)
Trunk Loop Limit		1600 Ω maximum
Operating Environment	Temperature	0 °C to 40 °C
	Humidity	10 % to 90 % (non-condensing)
Conference Call Trunk		From 10 × 3-party conference call to 4 × 8-party conference call
Music on Hold		1 port (Level Control: -11 dB to +11 dB in 1 dB steps) Selectable Tone/External Music Source port
Paging	Internal	Level Control: -15 dB to +6 dB in 3 dB steps
	External	1 port (Volume Control: -15 dB to +15 dB in 1 dB steps)
Serial Interface Port	RS-232C	1 (maximum 115.2 kbps)
	USB	1

1.4 Specifications

Extension Connection Cable	SLT	1-pair wire (T, R)
	DPT	1-pair wire (D1, D2) or 2-pair wire (T, R, D1, D2)
	APT	2-pair wire (T, R, D1, D2)
	PT-interface CS	1-pair wire (D1, D2)
	DSS Console and Add-on Key Module	1-pair wire (D1, D2)
Dimension	275 mm (W) × 376 mm (H) × 117 mm (D)	
Weight (when fully mounted)	Under 3.5 kg	

1.4.2 Characteristics

Terminal Equipment Loop Limit	<ul style="list-style-type: none"> • PT: KX-T7600 series: 90 Ω; all other DPTs/APTs: 40 Ω • SLT: 600 Ω including set • Doorphone: 20 Ω • PT-interface CS: 65 Ω
Minimum Leakage Resistance	15 000 Ω minimum
Maximum Number of Extension Instruments per Line	<p>1 for PT or SLT</p> <p>2 by Parallel or eXtra Device Port connection of a PT and an SLT</p> <p>3 by Digital eXtra Device Port connection of two DPTs and an SLT</p>
Ring Voltage	75 Vrms at 20 Hz/25 Hz depending on the Ringing Load
Trunk Loop Limit	1600 Ω maximum
Hookswitch Flash/Recall Timing Range	24 ms to 2032 ms
BRI Cards Internal ISDN Mode	<p>Supply Voltage: 40 V</p> <p>Power Supply: 4.5 W per 1 line, 5 W per 2 lines</p> <p>Power Supply Method: Phantom Power Supply</p>
Door Opener Current Limit	24 V DC/30 V AC, 1 A maximum
External Relay Current Limit	24 V DC/30 V AC, 1 A maximum
External Sensor Current Limit	Power to the external sensor is provided from the DPH4 or DPH2 card and must be grounded through the DPH4 or DPH2 card. For the connection diagram, refer to "2.5.1 DPH4 Card" or "2.5.2 DPH2 Card". The Hybrid IP-PBX detects input from the sensor when the signal is under 100 Ω .
Paging Terminal Impedance	600 Ω
MOH Terminal Impedance	10 000 Ω

1.4.3 System Capacity

Maximum Trunk and VoIP Line

The Hybrid IP-PBX supports the following number of trunk lines and VoIP lines.

Line Type	Maximum Number
Trunk Line	12
VoIP Line	4

Maximum Terminal Equipment

The following number of items of terminal equipment can be supported by the Hybrid IP-PBX. For how to count the total number of items of equipment to be connected, refer to "MEC Card Calculation".

Terminal Equipment Type	Without Additional AC Adaptor	With Additional AC Adaptor	
	Without MEC Card	Without MEC Card	With MEC Card
SLT	24	24	
KX-T7600 series DPT/DSS console, and KX-T7560/KX-T7565 DPT	Total 24	Total 24	Total 48
KX-T7600 series DPT	24	24	48
KX-T7600 series DSS console	4	4	
KX-T7560/KX-T7565 DPT	24	24	
Other DPT/DSS console and APT	Total 4	Total 24	
Other DPT	4	24	
Other DSS console	4	4	
APT	4	4	
DSS console	4	4	
CS	4	8	
PS	28	28	
VPS	4 ports (1 VPS)*1	4 ports (1 VPS)*1	
SLT, PT, DSS console, and VPS	Total 28	Total 28	Total 52
Doorphone	4	4	
Door Opener	4	4	
External Sensor	4	4	
External Relay	4	4	

Terminal Equipment Type	Without Additional AC Adaptor	With Additional AC Adaptor	
	Without MEC Card	Without MEC Card	With MEC Card
Add-on Key Module	Total 24	Total 24	48
USB Module			24

*1 A maximum of 4 ports (8 channels) of a single VPS can be connected to the Hybrid IP-PBX.

Note

Devices connected to the Hybrid IP-PBX that exceed the system capacity will not function.

MEC Card Calculation

Calculate the MEC figure from the type and total number of items of equipment to be connected. If the MEC figure exceeds 28, you need to install an MEC card. Note that you also need to connect an additional AC adaptor in this case.

MEC Card Calculation

Equipment Type		MEC Figure
PT	KX-T7600 series DPT/DSS console	1
	KX-T7560/KX-T7565 DPT	1
	Other DPT/DSS console	1
	APT	1
Pre-installed 4 Super Hybrid Ports		4
Extension Card*1	SLC4	4
	SLC8	8
CS (1 unit)		0
VPS (1 port)		1
ISDN Telephone		0

*1 Only the extension cards that can support SLTs count for the MEC figures.

Calculation Example

Equipment Type		MEC Figure
KX-T7600 series DPT	16 units	16
SLC4	1 card	4
SLC8	1 card	8
VPS	4 ports	4
Total		32

The total MEC figure is 32. As this exceeds 28, you need to install an MEC card and connect an additional AC adaptor for this configuration.

AC Adaptor Selection (Without BRI Extension Port)

You must connect an additional AC adaptor in any of the following conditions:

- A total of more than 4 APTs, DPTs (except KX-T7600 series, KX-T7560, or KX-T7565), and DSS console (except KX-T7600 series) are connected.
- More than 4 CSs are connected.
- An MEC card is required to support a configuration with a total MEC figure exceeding 28.
- Both the DID3 card and the SLC4 or DLC4 card are installed in any of Slots 2 to 4.

Note

For how to connect an AC adaptor or additional AC adaptor, refer to "2.12.1 Starting the Hybrid IP-PBX".

AC Adaptor Selection (With BRI Extension Port)

If the Hybrid IP-PBX has a BRI extension port, you must connect an additional AC adaptor in any of the following conditions:

- A total of more than 4 APTs, DPTs (except KX-T7600 series, KX-T7560/KX-T7565), and DSS consoles (except KX-T7600 series) are connected.
- More than 4 CSs are connected.
- An MEC card is required to support a configuration with a total MEC figure exceeding 28.
- Both the DID3 card and the SLC4 or DLC4 card are installed in any of Slots 2 to 4.
- The total load figure exceeds 32.

Note

For how to connect an AC adaptor or additional AC adaptor, refer to "2.12.1 Starting the Hybrid IP-PBX".

Load Figure Calculation

Equipment Type		Load Figure
PT	KX-T7600 series DPT/DSS console	0
	KX-T7560/KX-T7565 DPT	0
	Other DPT/DSS console	4
	APT	4
Pre-installed 4 Super Hybrid Ports		0
Extension Card	SLC4	0
	SLC8	0
CS (1 unit)		4
VPS (1 port)		0
ISDN Telephone		1 ^{*1}

*1 If the connected ISDN telephone has an external power source, its load figure is 0.

AC Adaptor Capability

The following load figures can be supported.

Connected AC Adaptor	Maximum Load Figures
Supplied AC Adaptor only	32
Supplied AC Adaptor and Additional AC Adaptor	96* ¹

*¹ If the load figure exceeds 96, it cannot be supported by the KX-TDA30. In this case, use the KX-TDA100 with M-Type Power Supply Unit (PSU-M), or the KX-TDA200 with either PSU-M or L-Type Power Supply Unit (PSU-L).

Calculation Example

Equipment Type		Load Figure
Other DPT/DSS console (except KX-T7600 series, KX-T7560/KX-T7565)	4 units	16
CS	3 units	12
ISDN Telephone	5 units	5
Total		33

The total load figure is 33. As this exceeds 32, you need to connect an additional AC adaptor.

1.4 Specifications

Section 2

Installation

This section describes the procedures to install the Hybrid IP-PBX. Detailed instructions for planning the installation site, installing the optional service cards, and cabling of peripheral equipment are provided. Further information on system expansion and peripheral equipment installation is included.

2.1 Before Installation

2.1.1 Before Installation

Please read the following notes concerning installation and connection before installing the Hybrid IP-PBX and terminal equipment.

Be sure to comply with all applicable laws, regulations, and guidelines.

Safety Installation Instructions

When installing telephone wiring, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

Installation Precautions

This Hybrid IP-PBX is designed for wall mounting only, and should be installed in a location where it is accessible for inspections and maintenance.

To prevent malfunction, noise, or discolouration, avoid installing the system in the following locations:

1. In direct sunlight and hot, cold, or humid places. (Temperature range: 0 °C to 40 °C)
2. Areas where sulfuric gases may be present, such as near thermal springs.
3. Areas where shocks or vibrations are frequent or strong.
4. High-dust areas, or places the system may come into contact with water or oil.
5. Near devices that generate high frequencies, such as sewing machines or electric welders.
6. On or near computers, telexes, or other office equipment, as well as microwave ovens or air conditioners. (It is preferable not to install the system in the same room as the above equipment.)
7. Within 1.8 m of radios and televisions. (Both the Hybrid IP-PBX and PTs should be at least 1.8 m away from such devices).
8. Locations where other objects will obstruct the area around the Hybrid IP-PBX. Be especially careful to leave at least 20 cm of space above and 10 cm to the sides of the Hybrid IP-PBX for ventilation.
9. Do not stack up the optional service cards. To avoid damage to the optional service cards, always use the extension bolts.

Wiring Precautions

Be sure to follow these instructions when wiring the unit:

1. Do not run unshielded telephone cables near AC power cables, computer cables, AC power sources, etc. When running cables near other noise-generating devices or cables, use shielded telephone cables or shield the telephone cables with metal tubing.
2. If cables are run on the floor, use protectors to prevent the cables from being stepped on. Avoid running cables under carpets.
3. Avoid using the same AC outlet for computers, telexes, and other office equipment, as noise generated by such equipment may hamper system performance or interrupt the system.

4. Use 2-pair telephone cables when connecting PTs.
Use 1-pair telephone cables when connecting SLTs, data terminals, answering machines, computers, Voice Processing Systems, etc.
5. Unplug the system from its power source when wiring, and plug the system back in only after all wiring is completed.
6. Mis-wiring may cause the Hybrid IP-PBX to operate improperly. Refer to Section 2 "Installation" when wiring the system.
7. If an extension does not operate properly, disconnect the telephone from the extension line and connect it again, or turn off the Hybrid IP-PBX using power switch then turn it on again.
8. For safety purposes this unit is equipped with an earthed plug. if you do not have an earthed outlet, please have one installed. Do not bypass this safety feature by tampering with the plug.
9. Use twisted pair cable for trunk connection.
10. Trunks should be installed with surge protectors. For details, refer to "2.2.11 Surge Protector Installation".


2.2 Installation of the Hybrid IP-PBX

2.2.1 Unpacking

Unpack the box and check the items below:

Main Unit	1
AC Cord	1
AC Adaptor	1
Screws for Wall Mounting	5
Washers for Wall Mounting	5
Mini Plug (for pager and music source)	2
SD Memory Card	1
Main Strap	1
Optional Card Label Sheet	1


2.2.2 Names and Locations

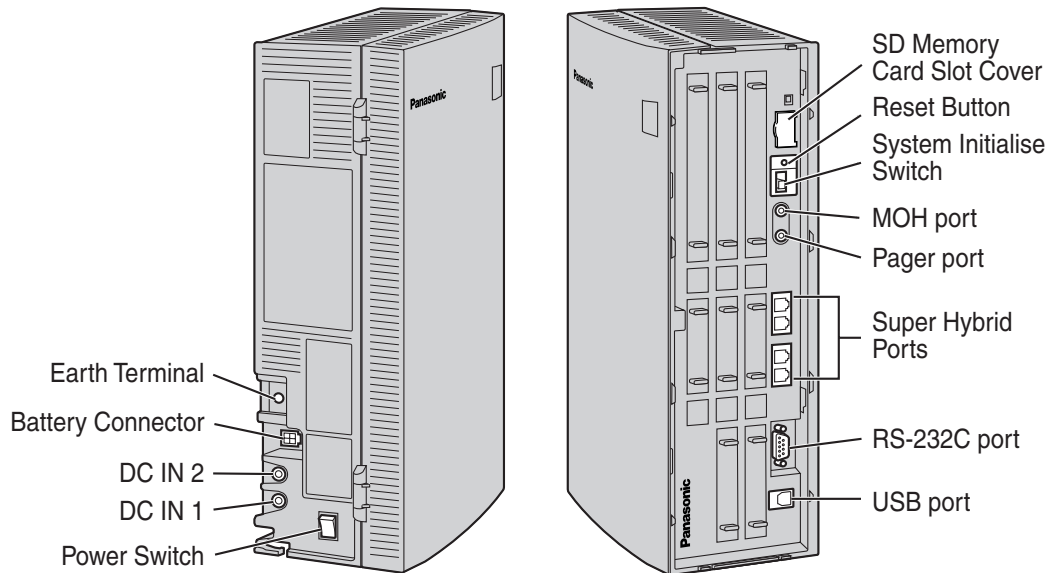


2.2.3 Opening/Closing the Covers

Opening the Covers


1. Pull the slide button to the right and, holding it, slide the cable cover upwards. Then turn the cable cover slightly to remove it.

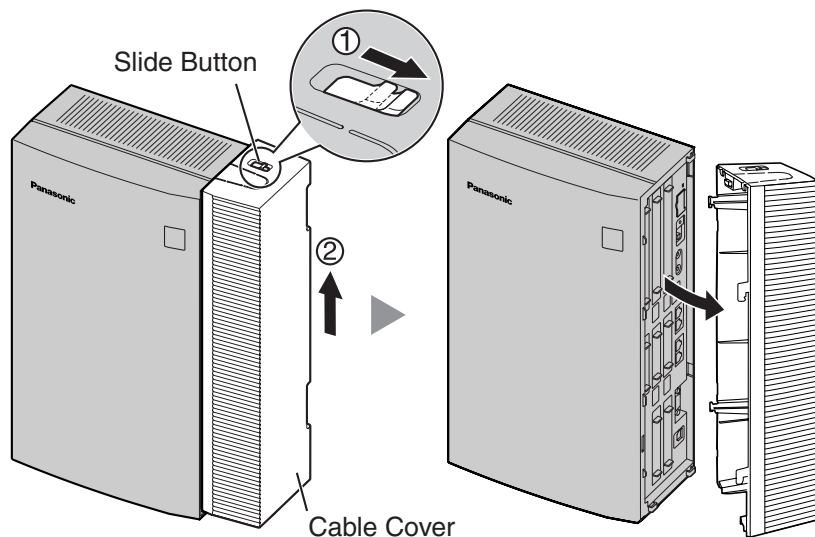

2. Remove the three screws.

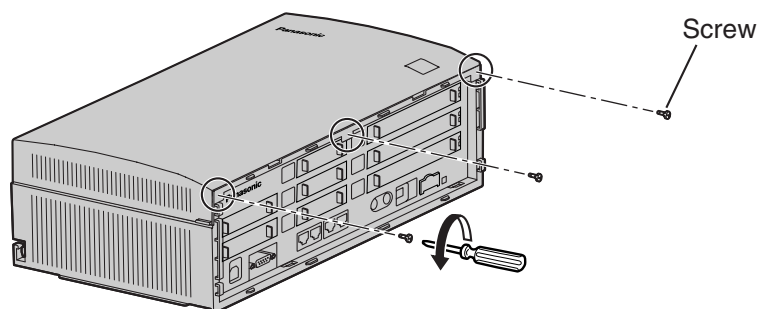

3. Holding the protrusions on both sides of the front cover, swing the cover open.

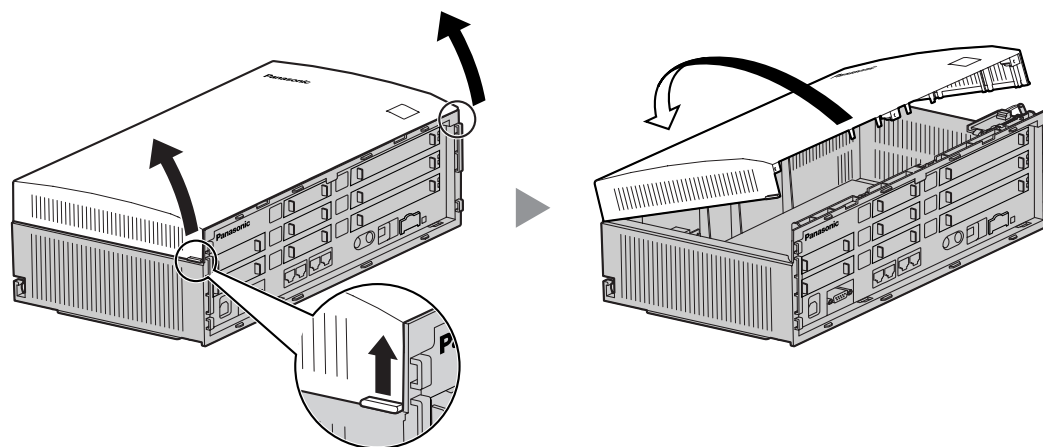


Removing/Attaching the Front Cover

If you prefer, you can remove the front cover.


Removing the Front Cover

Holding the front cover open at about a 45° angle, remove the front cover by pushing it in the direction of the arrow as shown below.

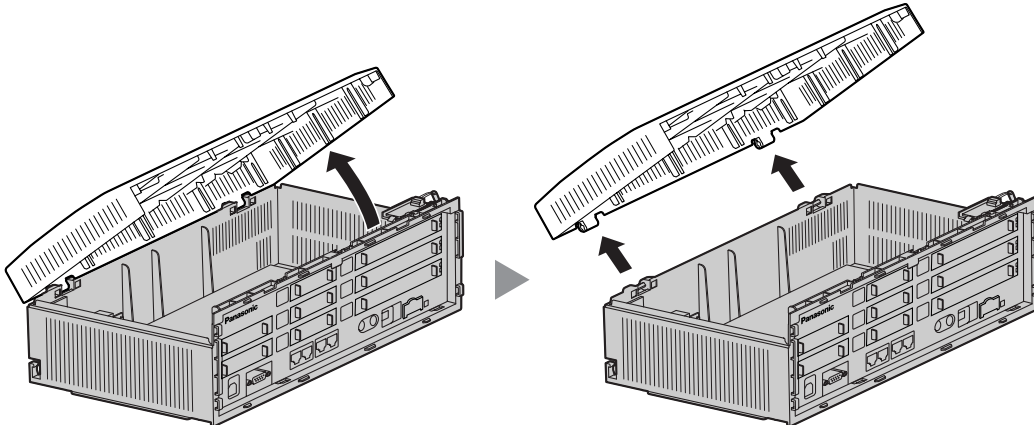


Attaching the Front Cover

Fit the front cover to the main unit as shown below, and then close the front cover.

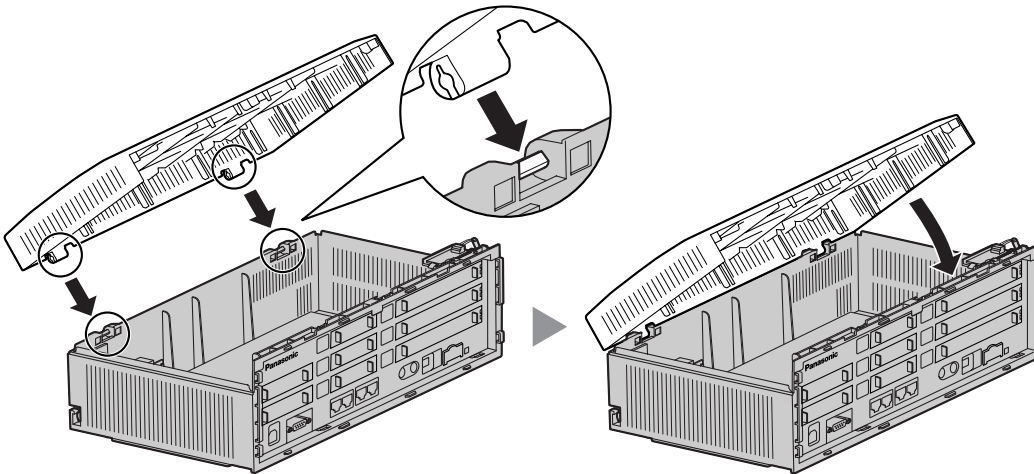


Closing the Covers


1. Close the front cover, then tighten the three screws.

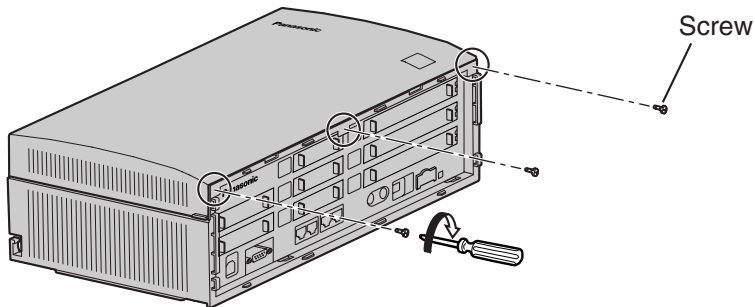


2. Attach the rear hooks on the cable cover to the main unit, then swing the cable cover closed so that the front hooks fit in place.

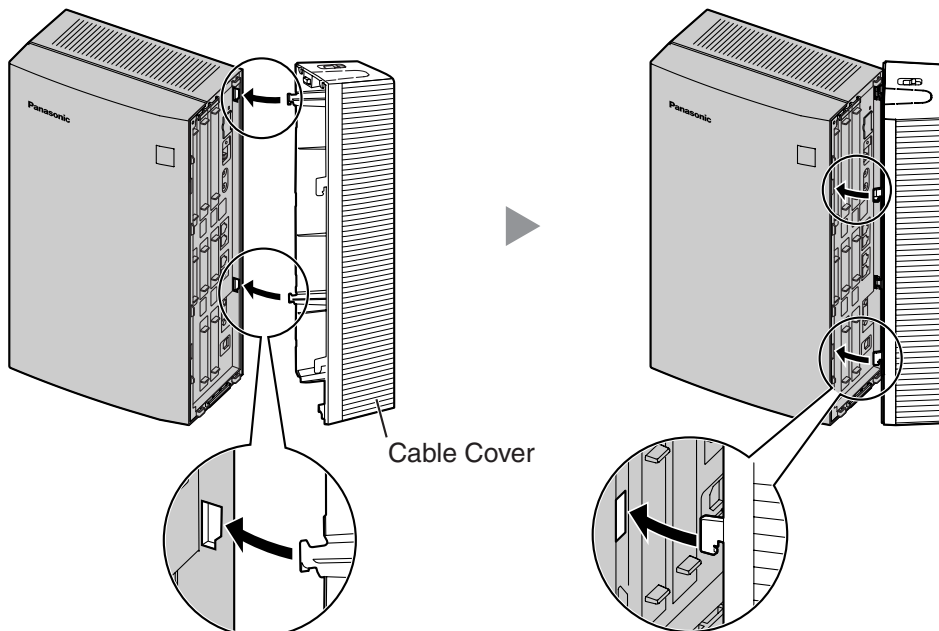

3. Slide the cable cover down until it locks.

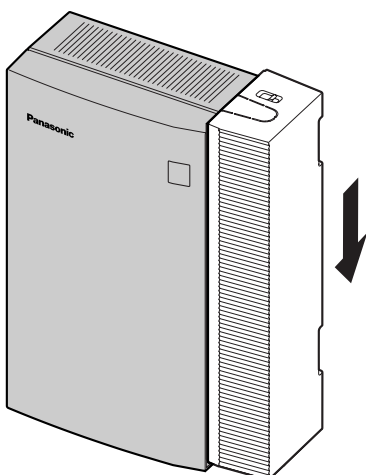

2.2.4 Installation of the SD Memory Card

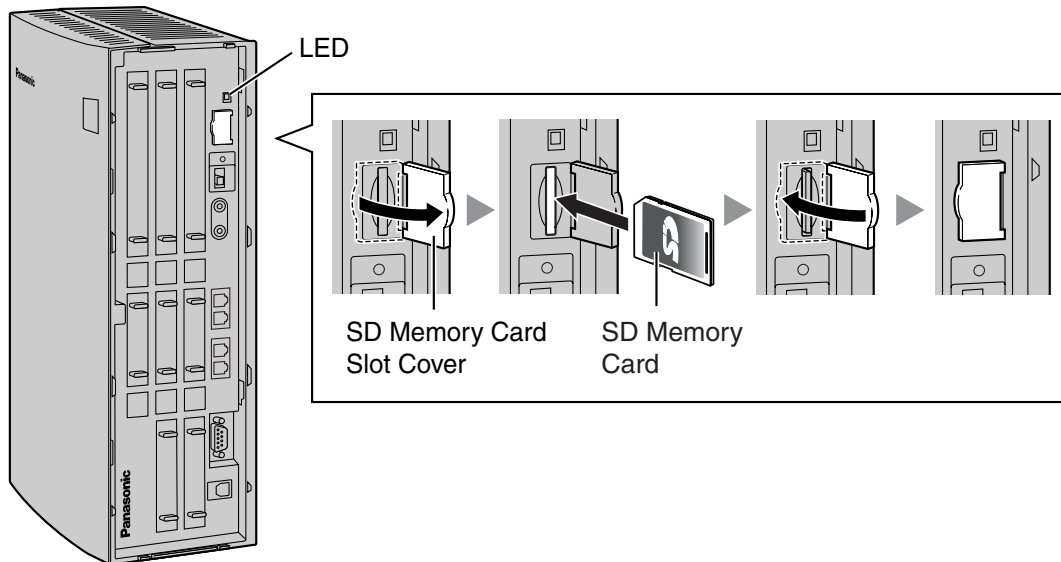

CAUTION


- Use only the SD Memory Card included with the Hybrid IP-PBX, or a Panasonic optional upgrade SD Memory Card.
- The SD Memory Card contains software for all the processes of the Hybrid IP-PBX and all the customer data. The SD Memory Card must be inserted before start up.
- Do not remove the SD Memory Card while power is supplied to the Hybrid IP-PBX. Doing so may cause the Hybrid IP-PBX to fail to start when you try to restart the system.

LED Indications

Indication	Colour	Description
SD ACCESS	Green	SD memory card status <ul style="list-style-type: none"> • ON: Accessing

Note

If you need to remove the SD Memory Card:

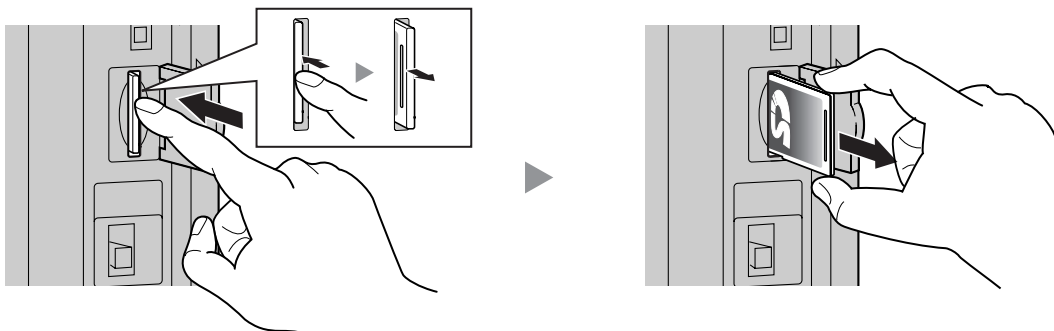


2.2.5 Frame Earth Connection

IMPORTANT

Connect the frame of the Hybrid IP-PBX to earth.

1. Loosen the screw.
2. Insert an earthing wire (user-supplied)*.
3. Tighten the screw.
4. Connect the earthing wire to earth.

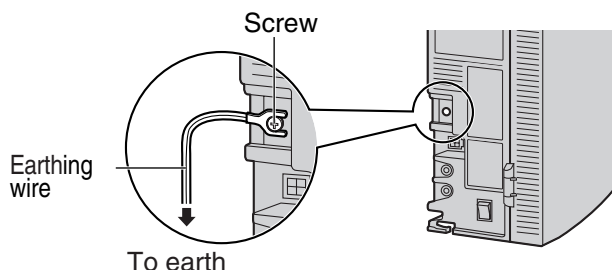


* For earthing wire, green-and-yellow insulation is required, and the cross-sectional area of the conductor must be more than 0.75 mm² or 18 AWG.

- Be sure to comply with applicable local regulations (e.g., law, guidelines).
- Proper earthing (connection to earth) is very important to protect the Hybrid IP-PBX from the bad effects of external noise or to reduce the risk to the user of electrocution in the case of lightning strike.
- The earthing wire of the AC cable has an effect against the external noise and lightning strikes, but it may not be enough to protect the Hybrid IP-PBX. A permanent connection between earth and the earth terminal of the Hybrid IP-PBX must be made.

2.2.6 Backup Batteries Connection

The backup batteries and Back-up Battery Cable provide a backup power supply to allow full use of the Hybrid IP-PBX in the event of a power failure. In case of power failure, the backup batteries automatically maintain the power to the Hybrid IP-PBX without interruption.

1. Turn off the power switch of the Hybrid IP-PBX.
2. Connect the Back-up Battery Cable with 3 identical VRLA (Valve Regulated Lead Acid) batteries (12 V DC x 3).

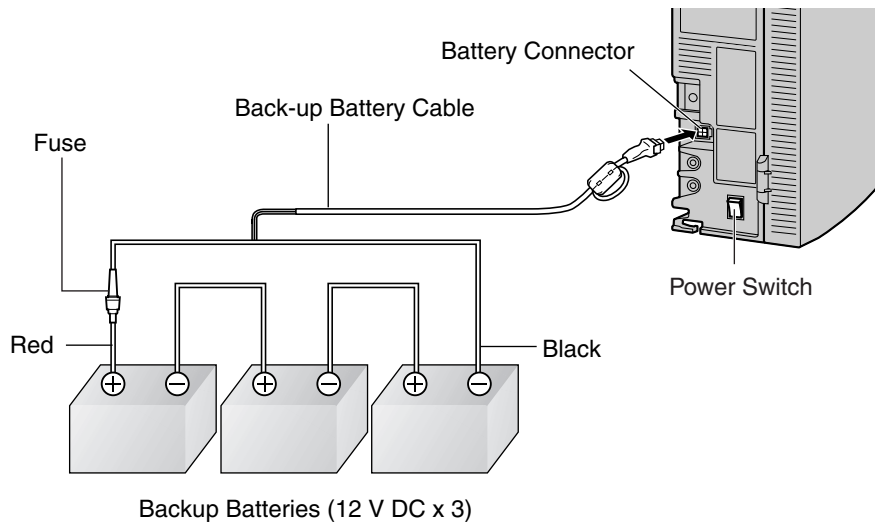


- Turn on the power switch of the Hybrid IP-PBX only after the installation of the Hybrid IP-PBX is finished and AC power is available.
- For each backup battery, battery capacity of 14 Ah or below is recommended (otherwise, the battery charge may not be maintained).
- Make sure that the type and capacity of the 3 backup batteries are identical.
- The Back-up Battery Cable should not be exposed to direct sunlight. Keep the Back-up Battery Cable and the backup batteries away from heating appliances and fire. Place the backup batteries in ventilated place.
- For details about the backup batteries, refer to the manual intended for the batteries.

CAUTION

- Be sure to comply with applicable local regulations (e.g., law, guidelines).
- Make sure that the polarities of the backup batteries and wiring are correct.
- Make sure that you do not short the backup batteries or cables.
- There is a danger of explosion if backup batteries are incorrectly replaced. Replace only with the same or equivalent type recommended by the battery manufacturer. Dispose of used batteries according to the manufacturer's instructions.

2.2.7 Installing/Removing the Optional Service Cards

Slot Position

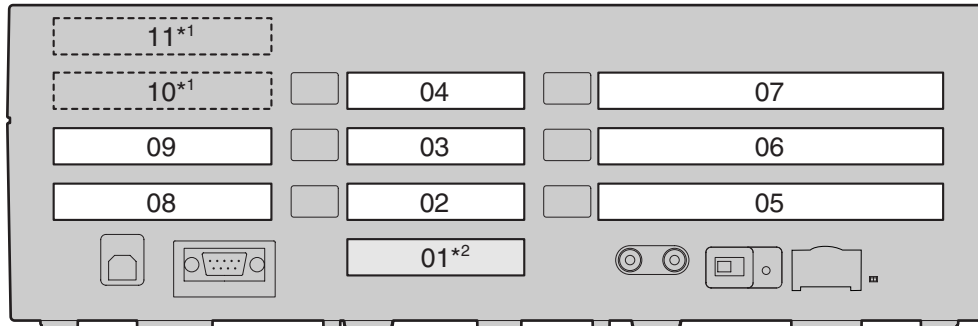

*1 Slots 10 and 11 accept only cards which do not have external ports. Therefore, these slots do not have removable cover plates.

*2 Slot 01 contains the pre-installed Super Hybrid Ports. No optional service card can be installed.

Slot Restrictions

The following table shows the slot restrictions. "✓" indicates that the slot supports the optional service card.

Card		Slot Number									
Type	Max	02	03	04	05	06	07	08	09	10	11
LCOT4	3	✓	✓	✓							
LCOT2	3	✓	✓	✓							
DID3	2	✓	✓	✓							
BRI2	3	✓	✓	✓							
BRI1	3	✓	✓	✓							
DLC4	1*1	✓	✓	✓							
SLC4		✓	✓	✓							
IP-GW4	1				✓	✓	✓				
DLC8	2*2				✓	✓	✓				
SLC8					✓	✓	✓				
DPH4	1*3							✓	✓		
DPH2								✓	✓		
ECHO8	1							✓	✓	✓	✓
EXT-CID	1							✓	✓	✓	✓

Card		Slot Number									
Type	Max	02	03	04	05	06	07	08	09	10	11
MSG2	2							✓	✓	✓	✓

*1 Only one of either DLC4 or SLC4 card can be installed.

*2 A maximum of two DLC8 cards, two SLC8 cards, or one of each card can be installed.

*3 Only one of either DPH4 or DPH2 card can be installed.

CAUTION


To protect the main board from static electricity, do not touch parts on the main board or on the optional service cards. To discharge static electricity, touch ground or wear an earthing strap.

Notes

- When installing or removing the optional service cards, the power switch of the Hybrid IP-PBX must be in the off position.
- For each card, the maximum number that can be installed in the Hybrid IP-PBX is listed in "1.3.1 Options".
- Any card that exceeds the capacity of the Hybrid IP-PBX will be ignored.
- When the Hybrid IP-PBX starts up with an invalid configuration, some cards will be ignored.

Installing Optional Service Cards

1. Before installing the optional service cards, cut and remove the appropriate dummy cover plates from the main unit.

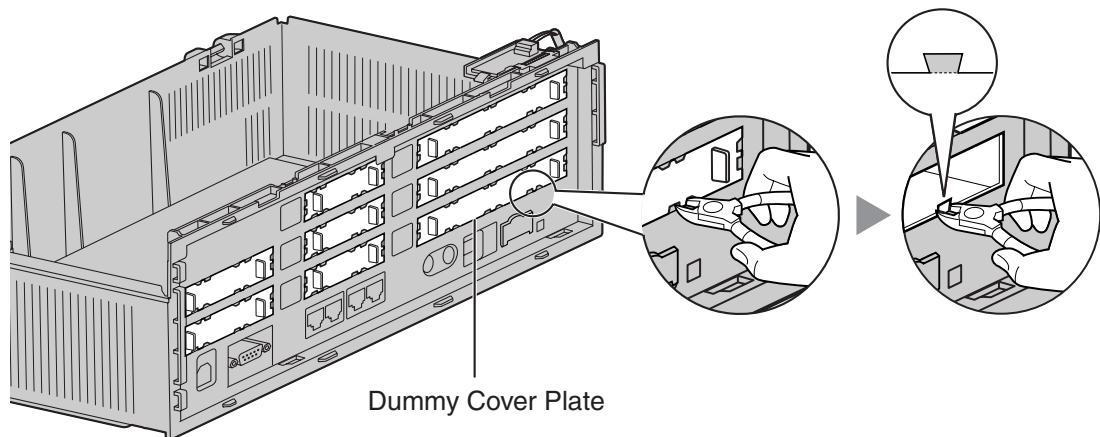


CAUTION

For safety reasons, smooth the cut edges after removing the dummy cover plates.

2.2 Installation of the Hybrid IP-PBX


2. Position the card in the open slot, making sure that the tabs on the both sides of the card fit into place. Then, holding the card firmly in place, lower the rear end so that the hole of the card fits over the extension bolt.

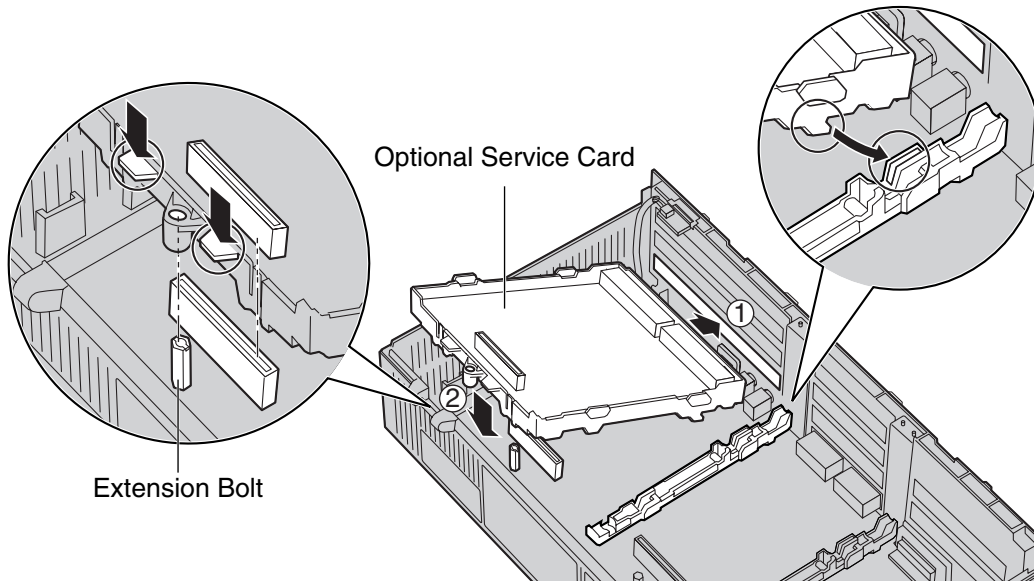


CAUTION

When installing the optional service cards, do not put pressure on any parts of the main board. Doing so may result in damage to the Hybrid IP-PBX.


3. Insert the new extension bolt (included with the card) into the hole on the card, and tighten it to secure the card.

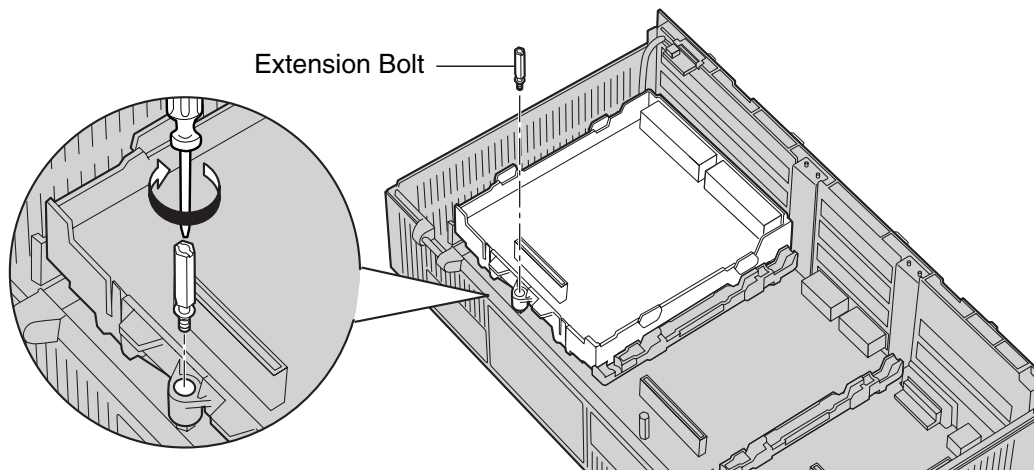

4. Stick an appropriate optional card label (included) to the left side of the corresponding card.

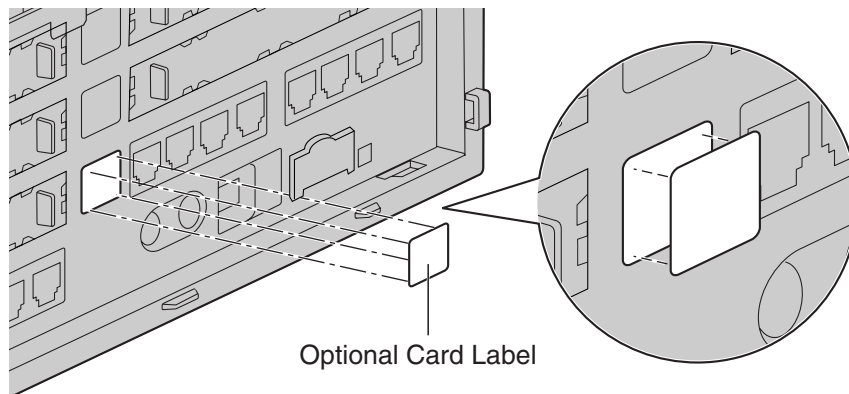

5. Connect a cable to an appropriate port of the card.
For details about pin assignments, refer to the appropriate section in "2.3 Installation of the Trunk Cards" and "2.4 Installation of the Extension Cards".

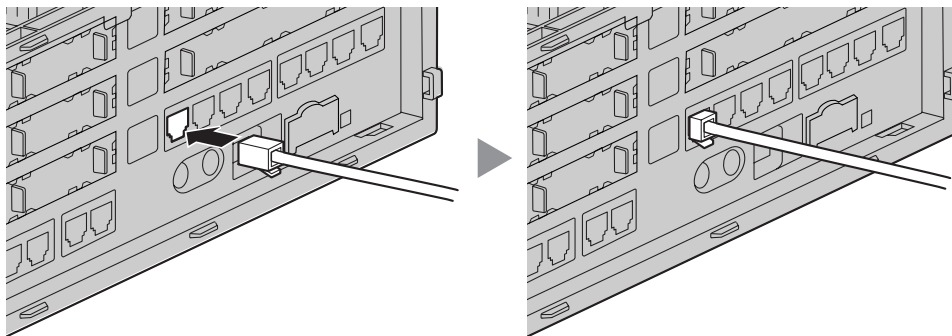

Note


Make sure to connect cables after installing the card in the Hybrid IP-PBX, not before.

2.2 Installation of the Hybrid IP-PBX


6. Repeat the procedure for other cards.

A. When installing a card in Slot 07, make sure to detach the LED holder first. After installing the card, reattach the LED holder.


To detach the LED holder

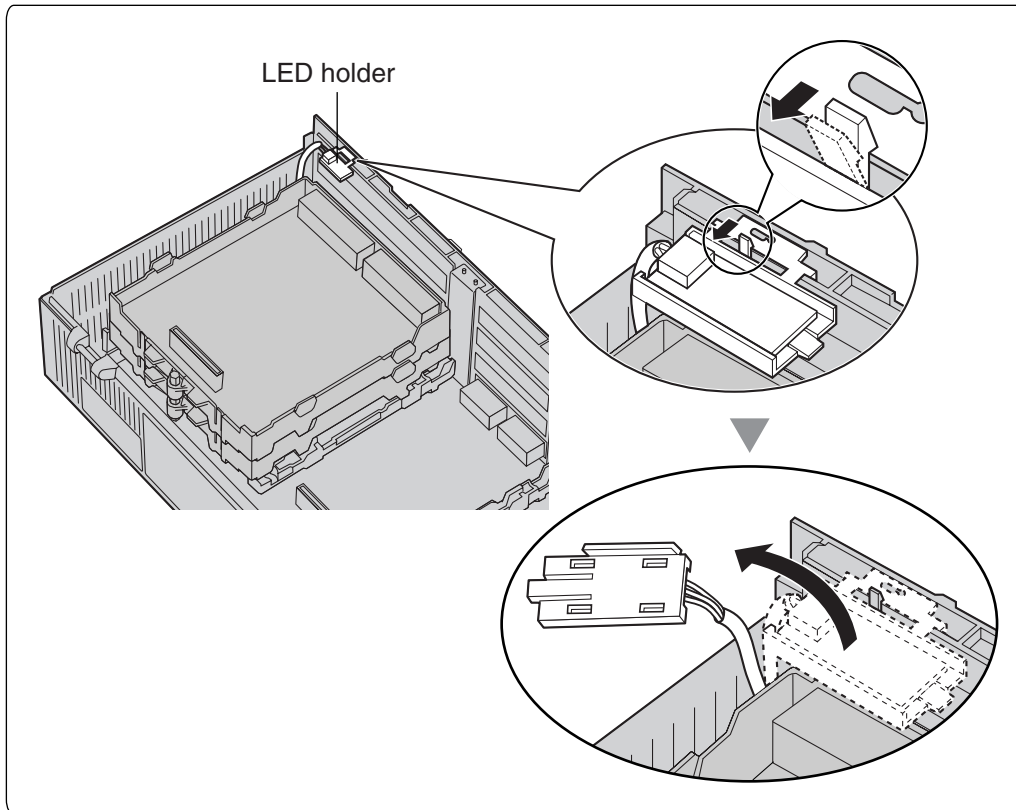

To attach the LED holder

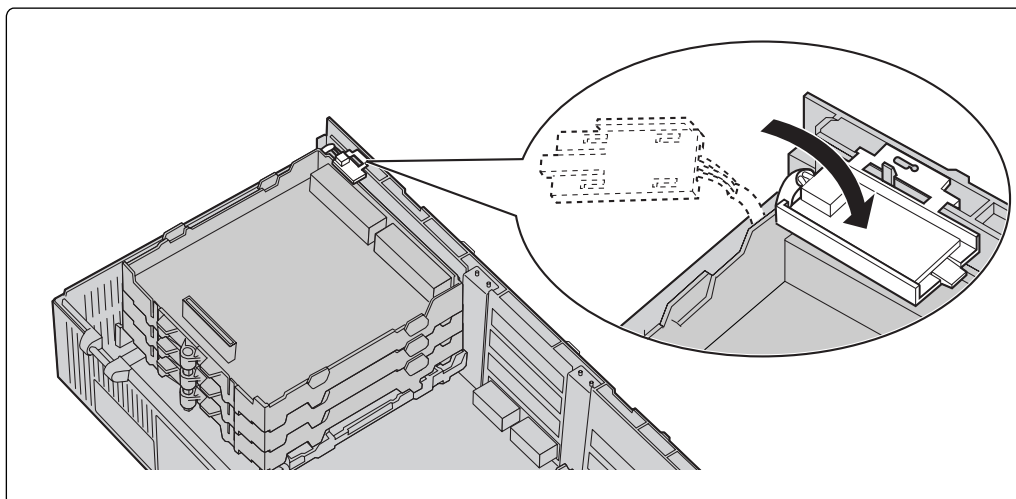


- B. When installing a card in Slot 11, tighten the card using the screw included with the card, instead of the extension bolt.

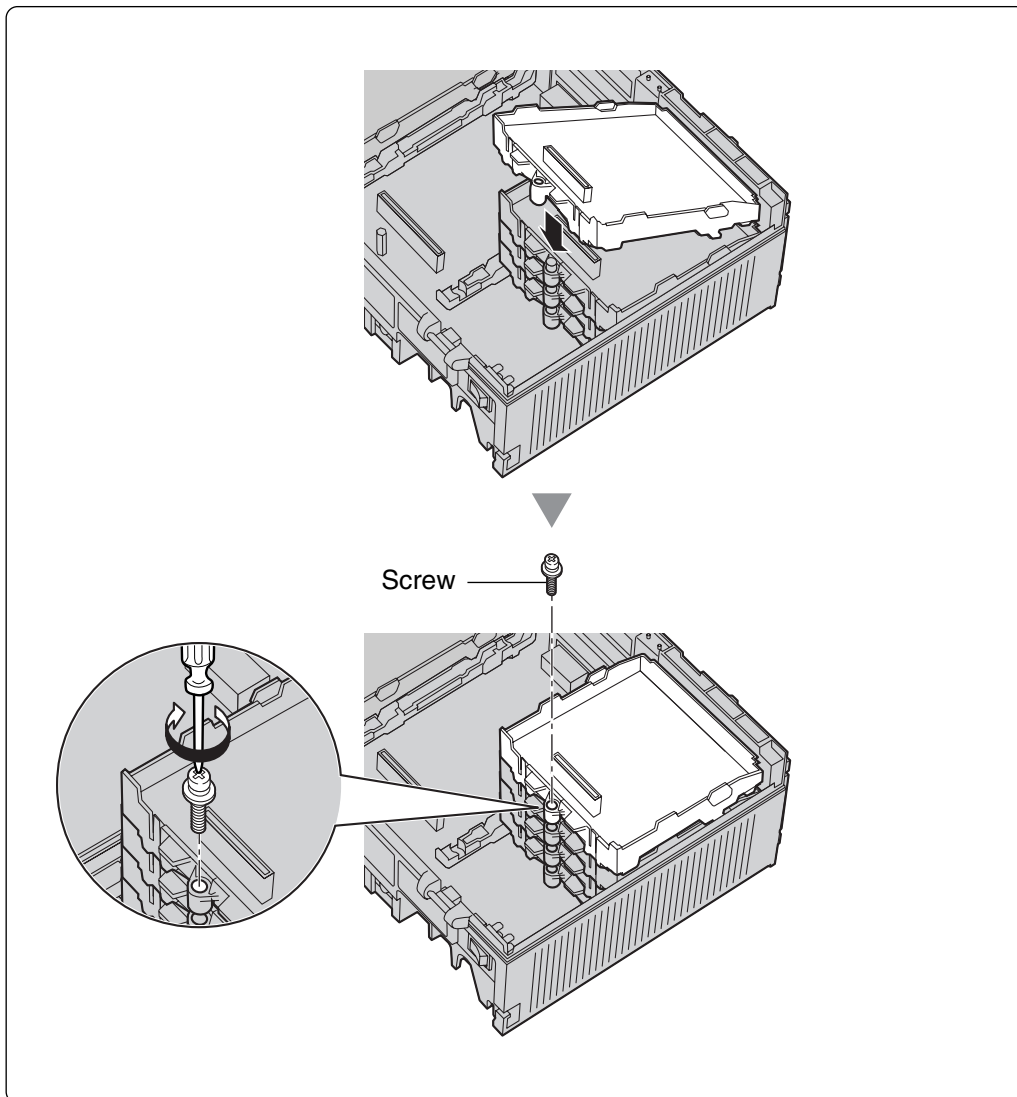


Handling of the Cables

1. Attach the strap included with the card to one of the connected cables.

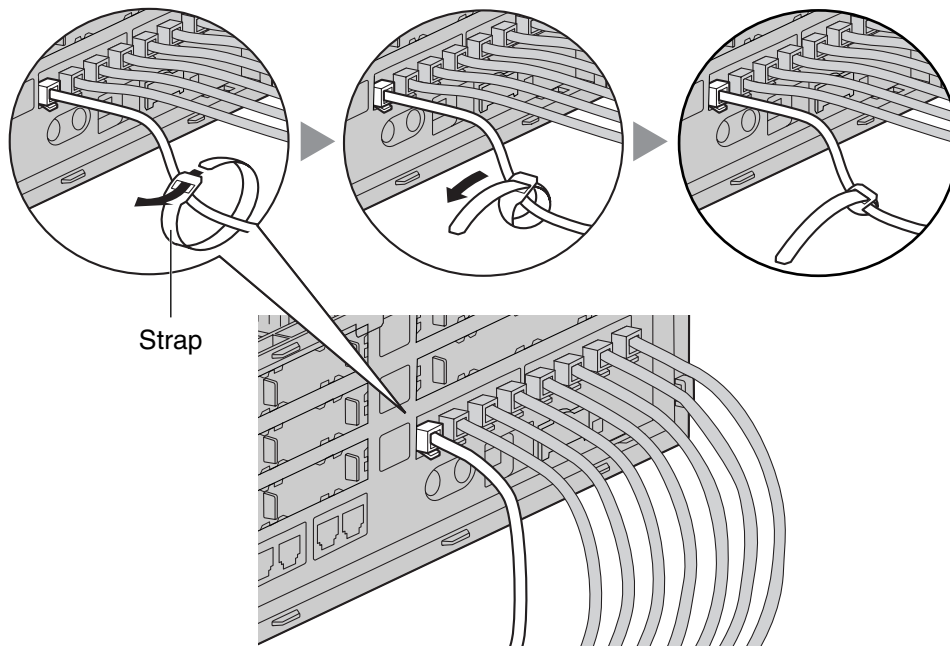


2. Bind all the connected cables together using the strap.

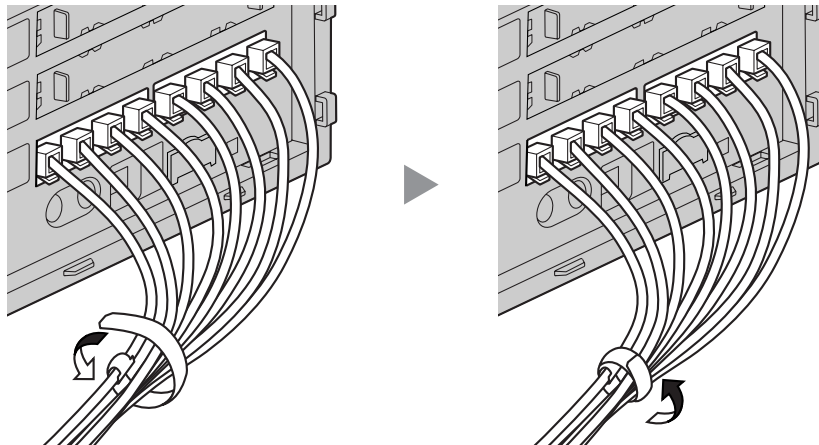


3. Repeat the procedure for other cards.

4. Attach the main strap (included with the Hybrid IP-PBX) to any of the 5 rails depending on your preference.

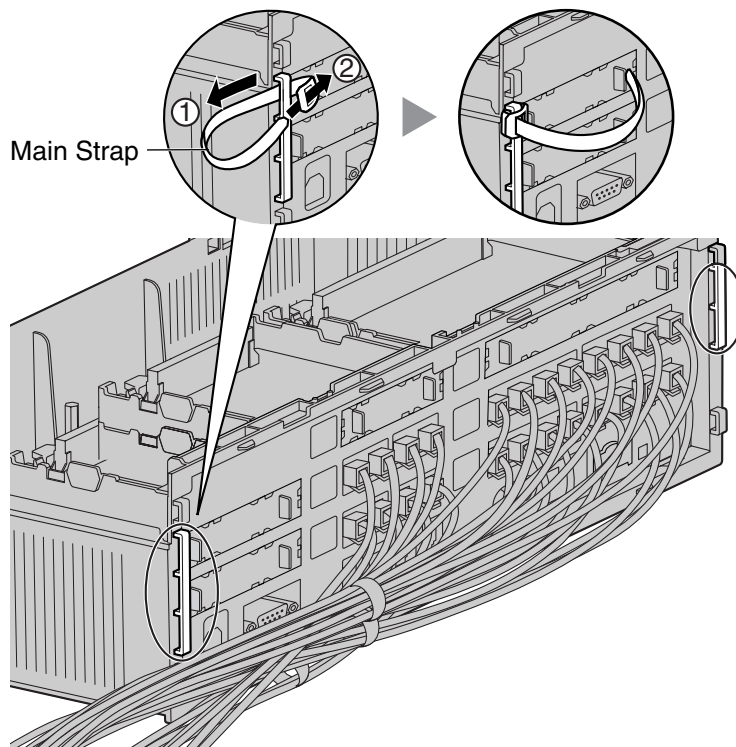


2.2 Installation of the Hybrid IP-PBX

5. Bind all the connected cables together using the main strap, and then close the cable cover. For how to close the cable cover, refer to "2.2.3 Opening/Closing the Covers".

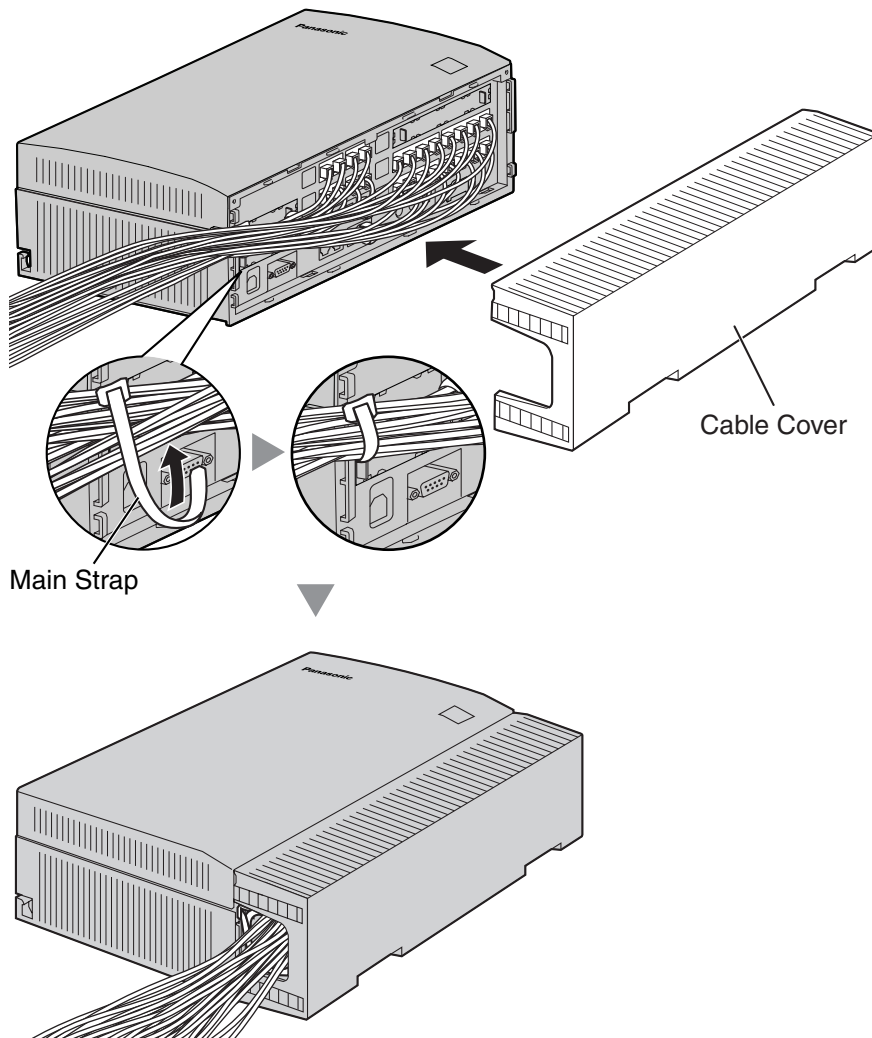


Notes

- For safety reasons, do not stretch, bend, or pinch the cables.
- If you prefer, you can cut the other side of the cable cover and run the cables through that opening. For safety reasons, smooth the cut edges.

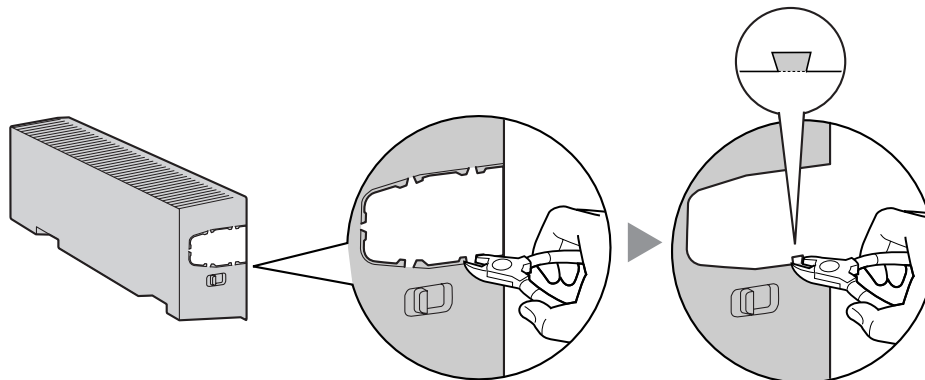


Removing the Optional Service Cards

1. Loosen and remove the extension bolt.

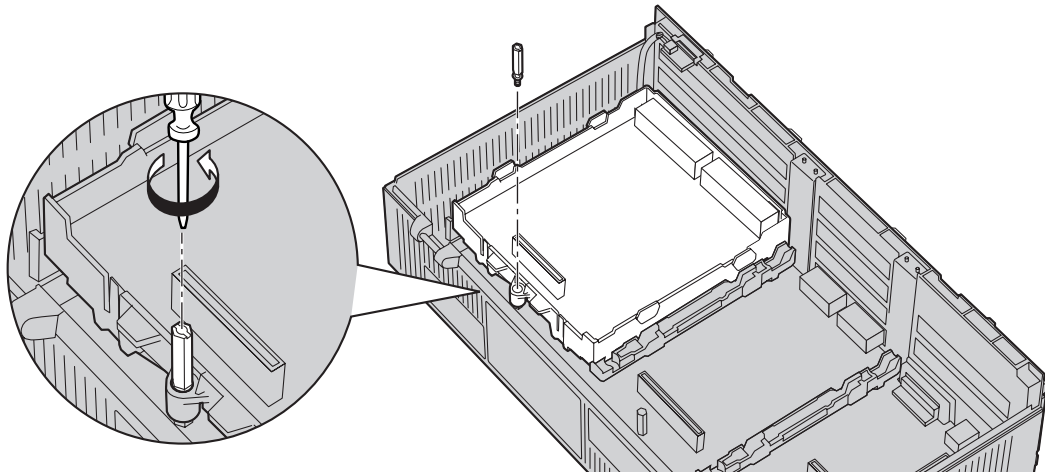













2. Holding the protrusions of the card, pull the card in the direction of the arrows.

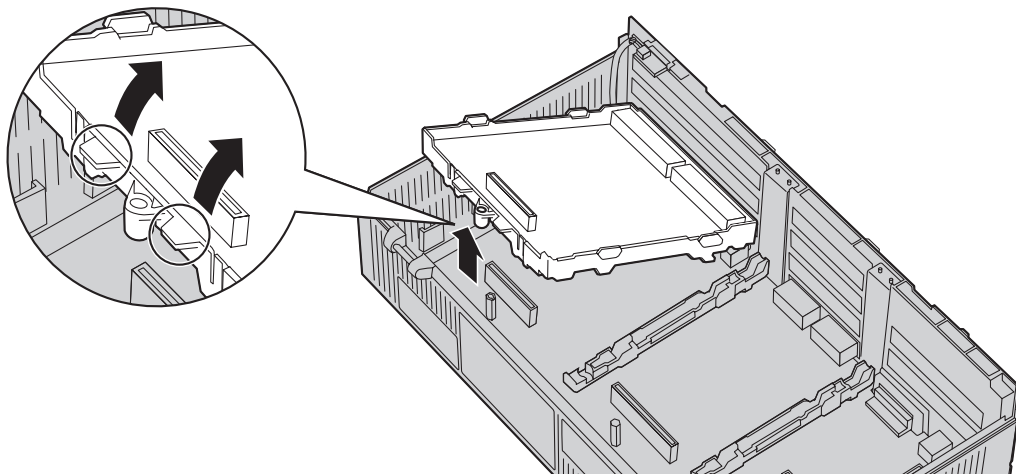

CAUTION

When removing the optional service cards, do not put pressure on any parts of the main board. Doing so may result in damage to the Hybrid IP-PBX.

2.2.8 Types of Connectors

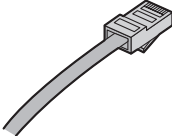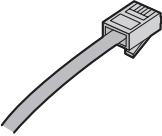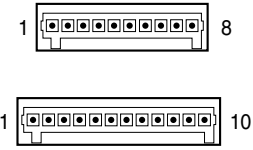
Connector Type	Pin Number	Used for
<p>RJ45</p>  <p>(Twisted pair cable)</p>		<ul style="list-style-type: none"> • DPH4 (KX-TDA3161NE) • DPH2 (KX-TDA3162) • DLC4 (KX-TDA3171NE) • DLC8 (KX-TDA3172NE) • SLC4 (KX-TDA3173NE) • SLC8 (KX-TDA3174NE) • LCOT4 (KX-TDA3180NE) • LCOT2 (KX-TDA3183) • BRI2 (KX-TDA3280) • BRI1 (KX-TDA3283) • IP-GW4 (KX-TDA3480) • Super Hybrid Ports (Main Board)*¹
<p>RJ11</p>  <p>(Twisted pair cable)</p>		<ul style="list-style-type: none"> • DPH4 (KX-TDA3161) • DLC4 (KX-TDA3171) • DLC8 (KX-TDA3172) • SLC4 (KX-TDA3173) • SLC8 (KX-TDA3174) • LCOT4 (KX-TDA3180) • DID3 (KX-TDA3182) • Super Hybrid Ports (Main Board)*²
<p>10-pin Terminal Block</p> <p>8-pin Terminal Block</p> 		<ul style="list-style-type: none"> • DPH4 (KX-TDA3161) • DPH2 (KX-TDA3162)
<p>RS-232C</p> 		<ul style="list-style-type: none"> • Main Board
<p>USB</p> 		<ul style="list-style-type: none"> • Main Board
<p>Mini Plug</p> 		<ul style="list-style-type: none"> • Main Board (Pager port, MOH port)

- *1 The KX-TDA30E, KX-TDA30NE, and KX-TDA30GR have the Super Hybrid Ports with RJ45 connectors.
- *2 Other models of the KX-TDA30 (other than the KX-TDA30E, KX-TDA30NE, and KX-TDA30GR) have the Super Hybrid Ports with RJ11 connectors.


2.2.9 Wall Mounting (KX-TDA30)

Mounting on Wooden Wall

1. Place the reference for wall mounting (on the last page of this manual) on the wall to mark the 3 screw positions.

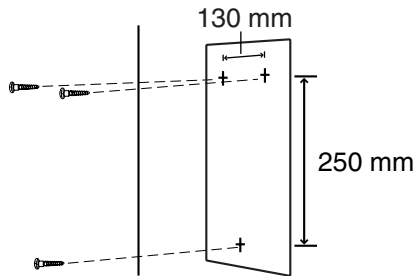


2. Install the screws and washers (included) in the wall.

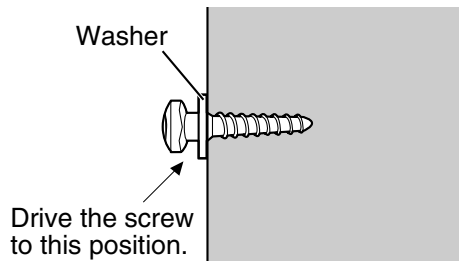

Notes

- Make sure that the screw heads are at the same distance from the wall.
 - Install the screws perpendicular to the wall.
3. Hook the main unit on the screw heads.

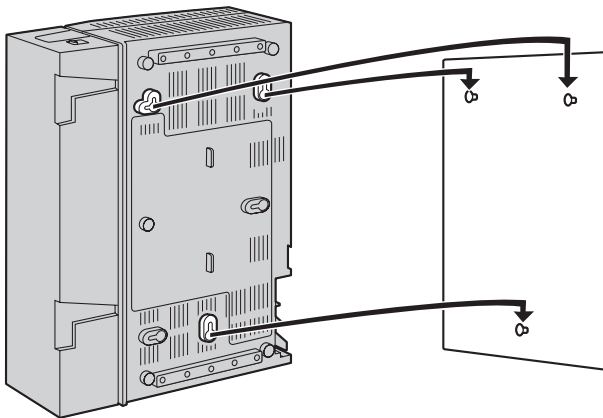

Notes


- Do not block the openings of the cabinet. Leave at least 20 cm of space above and 10 cm to the sides of the Hybrid IP-PBX for ventilation.
- Make sure that the wall behind the cabinet is flat and free of obstacles, so that the openings on the back of the cabinet will not be blocked.
- Be careful not to drop the cabinet.

Mounting on Concrete or Mortar Wall


CAUTION

Drive mounting screws into the wall. Be careful to avoid touching any metal laths, wire laths or metal plates in the wall.


1. Place the reference for wall mounting (on the last page of this manual) on the wall to mark the 3 screw positions.

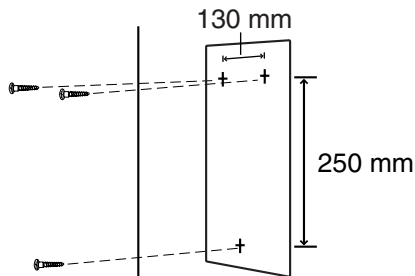


2. Install three anchor plugs (user-supplied) in the wall.

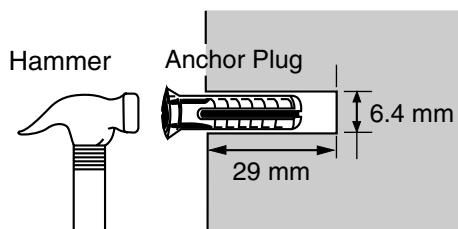

3. Install the screws (included) in the wall.

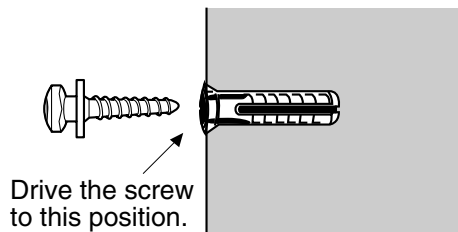

4. Hook the main unit on the screw heads.

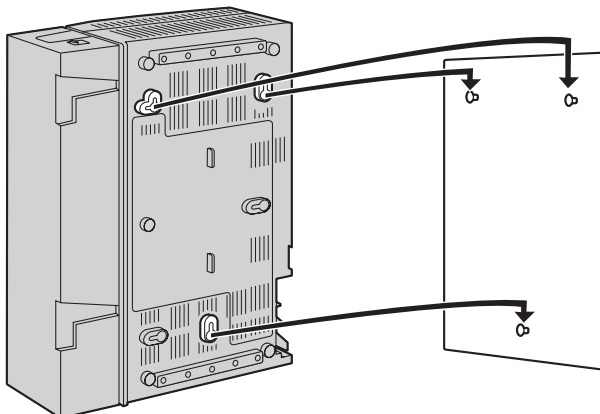

2.2 Installation of the Hybrid IP-PBX


Notes

- Do not block the openings of the cabinet. Leave at least 20 cm of space above and 10 cm to the sides of the Hybrid IP-PBX for ventilation.
- Make sure that the wall behind the cabinet is flat and free of obstacles, so that the openings on the back of the cabinet will not be blocked.
- Be careful not to drop the cabinet.


2.2.10 Wall Mounting (AC Adaptor)

Mounting on Wooden Wall

1. Place the reference for wall mounting (on the following page) on the wall to mark the 2 screw positions.

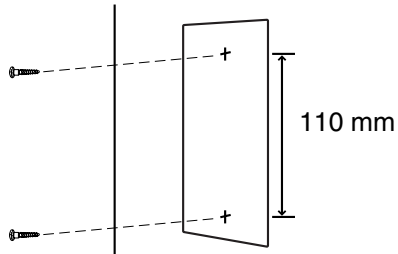


2. Install the screws and washers (included) in the wall.

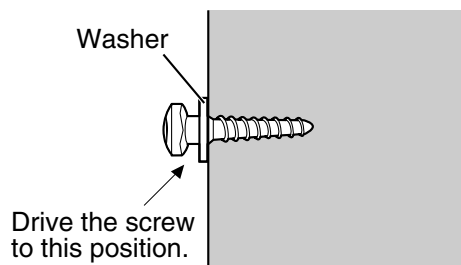

Notes

- Make sure that the screw heads are at the same distance from the wall.
 - Install the screws perpendicular to the wall.
3. Hook the AC adaptor on the screw heads.

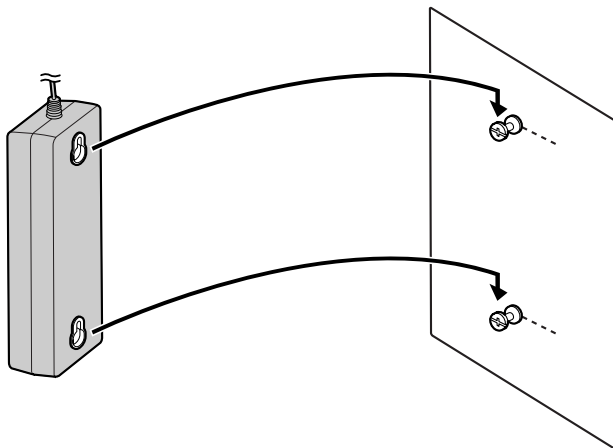

Note


Be careful not to drop the AC adaptor.

Mounting on Concrete or Mortar Wall


CAUTION

Drive mounting screws into the wall. Be careful to avoid touching any metal laths, wire laths or metal plates in the wall.


1. Place the reference for wall mounting (on the following page) on the wall to mark the 2 screw positions.

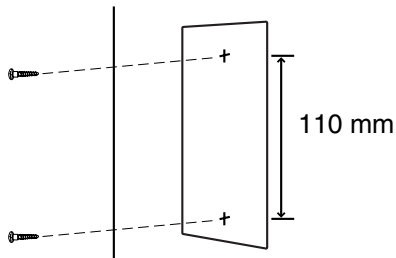


2. Install two anchor plugs (user-supplied) in the wall.

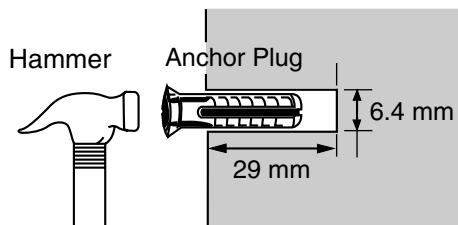

3. Install the screws (included) in the wall.

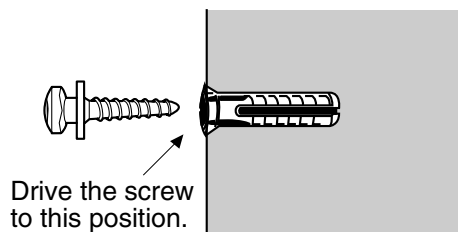

4. Hook the AC adaptor on the screw heads.

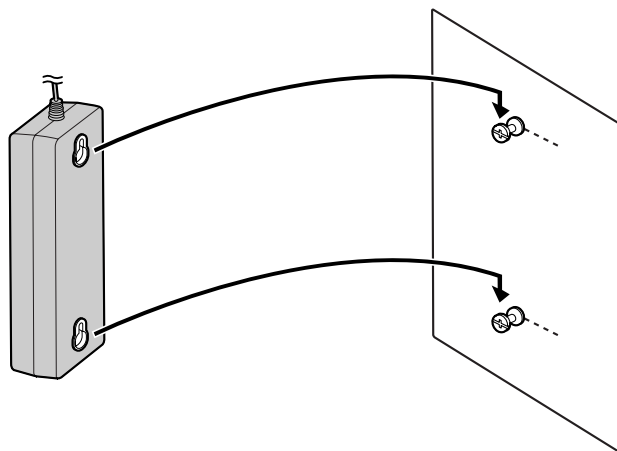


Note

Be careful not to drop the AC adaptor.

Reference for Wall Mounting

Please copy this page and use as a reference for wall mounting.

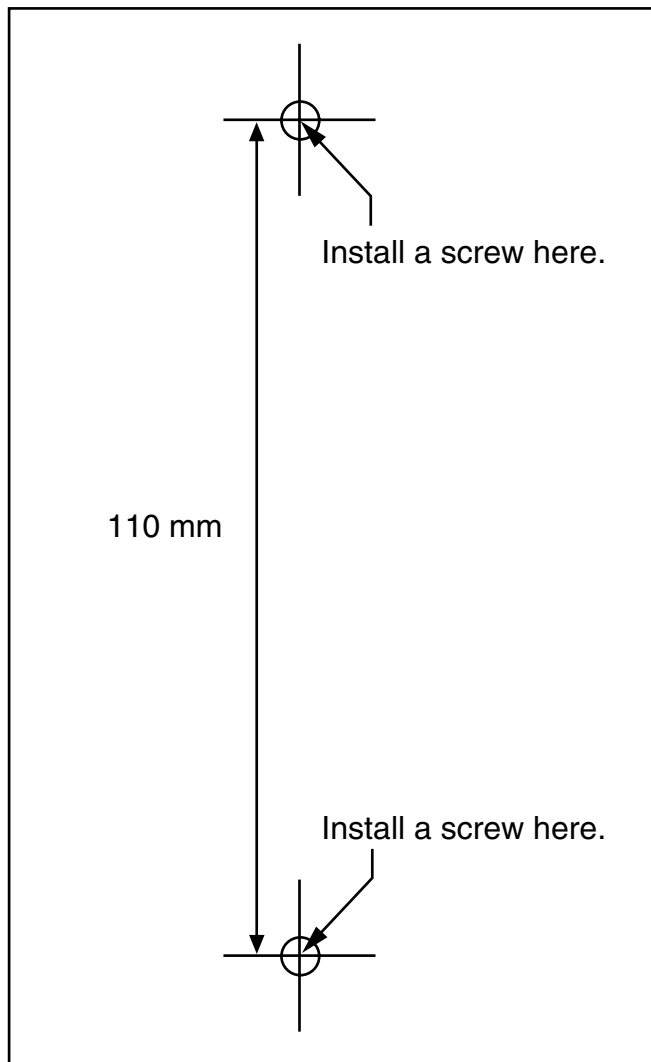

Note

Make sure to set the print size to correspond with the size of this page. If the dimension of the paper output still deviates slightly from the measurement indicated here, use the measurement indicated here.

2.2.11 Surge Protector Installation

Overview

A massive electrical surge can be caused if lightning strikes a telephone cable 10 m above ground, or if a telephone line comes into contact with a power line. A surge protector is a device that is connected to a trunk to prevent potentially dangerous electrical surges from entering the building via the trunk and damaging the Hybrid IP-PBX and connected equipment.


To protect the system from electrical surges, we strongly recommend connecting the system to a surge protector that meets the following specifications:

- Surge arrester type: 3-electrode arrester
- DC spark-over voltage: 230 V
- Maximum peak current: at least 10 kA


Additionally, proper earthing is very important for the protection of the system (refer to "2.2.5 Frame Earth Connection").

Many countries/areas have regulations requiring surge protection. Be sure to comply with all applicable laws, regulations, and guidelines.

Installation

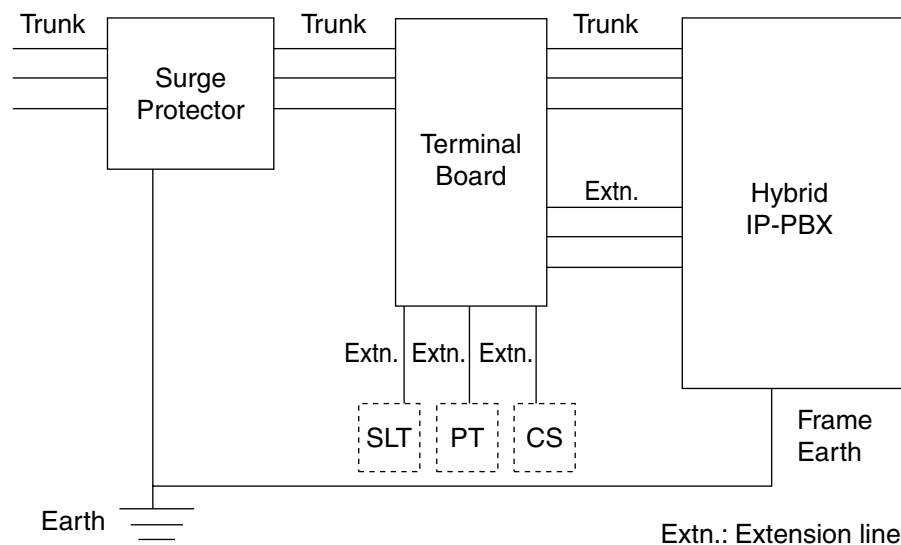

Outside Installation

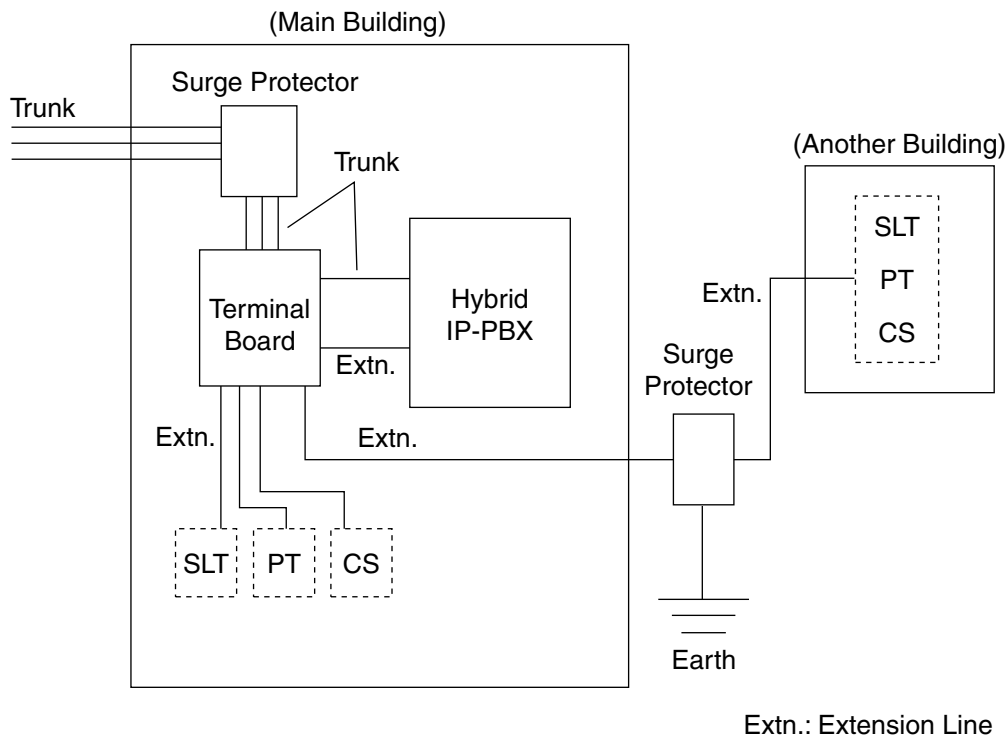


If you install an extension outside of the building, the following precautions are recommended:

- a. Install the extension wire underground.
- b. Use a conduit to protect the wire.

Note

The surge protector for an extension and CS is different from that for trunks.

Installation of an Earth Rod

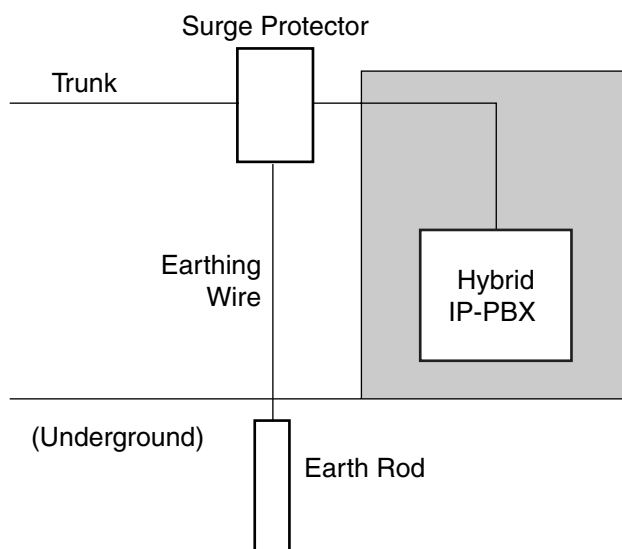

2.2 Installation of the Hybrid IP-PBX

1. Connect the earth rod to the surge protector using an earthing wire with a cross-sectional area of at least 1.3 mm².
2. Bury the earth rod near the protector. The earthing wire should be as short as possible.
3. The earthing wire should run straight to the earth rod. Do not run the wire around other objects.
4. Bury the earth rod at least 50 cm underground.

Notes


- The above figures are recommendations only.
- The length of earth rod and the required depth depend on the composition of the soil.

2.3 Installation of the Trunk Cards

2.3.1 LCOT4 Card

Function

4-port analogue trunk card with 2 power failure transfer (PFT) ports. One CID4 card can be mounted on the LCOT4 card (refer to "2.3.3 CID4 Card").

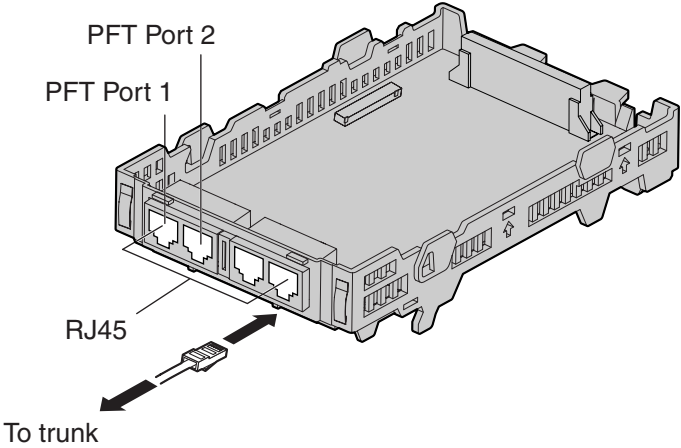

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector or RJ11 connector

Notice


The connector type may be RJ45 or RJ11 depending on the country/area.

Notes

- To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".
- For details about power failure transfer, refer to "2.11.1 Power Failure Connections".


Pin Assignments

RJ45 Connector

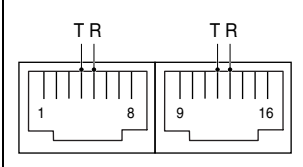	Signal Name	Function
	R	Ring
	T	Tip
	-	Reserved

2.3 Installation of the Trunk Cards


RJ11 Connector

	Signal Name	Function
	R	Ring
	T	Tip
	—	Reserved

2.3.2 LCOT2 Card

Function

2-port analogue trunk card with 2 power failure transfer (PFT) ports.

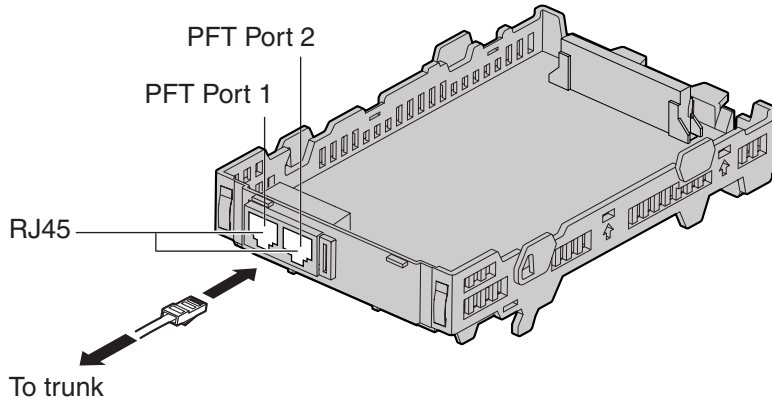

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1


User-supplied (not included): RJ45 connector

Notes

- To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".
- For details about power failure transfer, refer to "2.11.1 Power Failure Connections".

Pin Assignments


RJ45 Connector

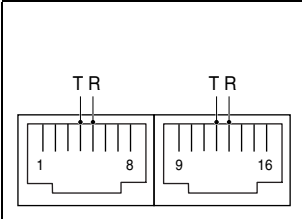	Signal Name	Function
	R	Ring
	T	Tip
	-	Reserved

2.3.3 CID4 Card

Function

4-port Caller ID signal type FSK/FSK (with Call Waiting Caller ID [Visual Caller ID])/DTMF. To be mounted on the LCOT4 card.

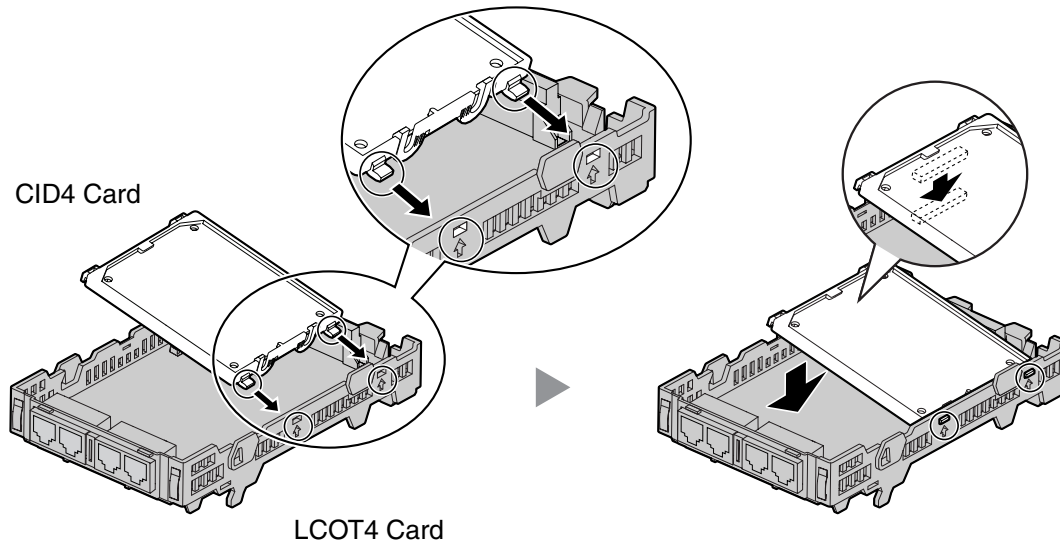


Accessory and User-supplied Items

Accessory (included): none

User-supplied (not included): none

Note


If you need to remove the CID4 Card:

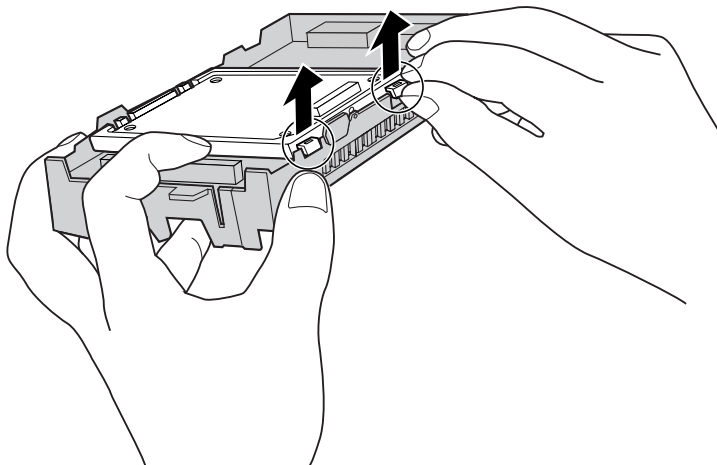

2.3.4 DID3 Card

Function

3-port DID analogue trunk card.

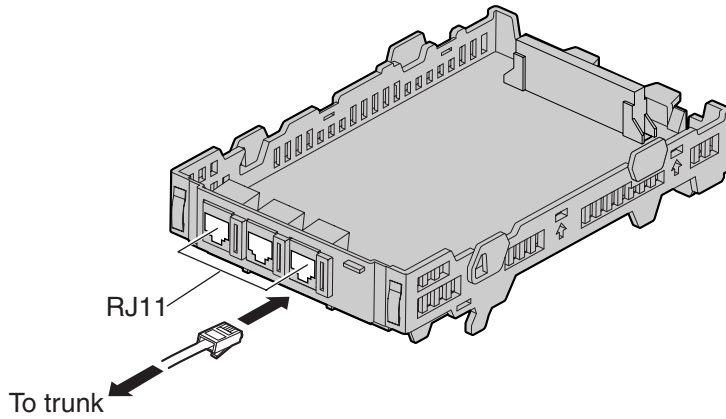

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1, Optional Card Label × 1

User-supplied (not included): RJ11 connector

Note

To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".

Pin Assignments


RJ11 Connector

	Signal Name	Function
	R	Ring
	T	Tip

2.3.5 BRI2 Card

Function

2-port ISDN Basic Rate Interface card with 1 power failure transfer (PFT) port. EURO-ISDN/ETSI compliant.

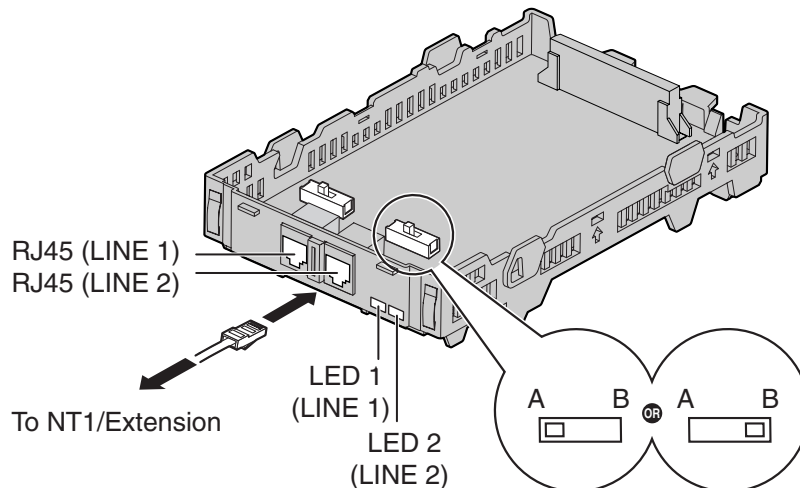

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector

Notes

- When connecting this optional service card to the trunk, connect through an NT1; do not connect to the U interface of the trunk directly.
- This optional service card has 100 Ω of terminal resistance. For use in point to multi-point connection, the card must be placed at the end of the bus.
- This optional service card can be used for either trunk or extension connection, by setting the A/B switch or using the connector with appropriate pin assignments.
- For details about power failure transfer, refer to "2.11.1 Power Failure Connections".
- To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".

Notice

If the connected ISDN terminal has no external power source, make sure that the power is supplied from the BRI2 card by programming the Hybrid IP-PBX accordingly.

However, if there is an external power source to the terminal, make sure that there is no power supplied to the terminal from the BRI2 card. Failure to do so may cause damage to the power supply circuit of the BRI2 card or the terminal.

Switch Settings

Switch	Type	Usage and Status Definition
A/B	Slide	Select A (default) for trunk or B for extension use.

Pin Assignments

RJ45 Connector for Trunk Use

	Signal Name	Level [V]	Function
	TX1	(+)	Transmit data 1
	RX2	(+)	Receive data 2
	RX1	(-)	Receive data 1
	TX2	(-)	Transmit data 2
	–	–	Reserved

RJ45 Connector for Extension Use

	Signal Name	Level [V]	Function
	RX2	(+)	Receive data 2
	TX1	(+)	Transmit data 1
	TX2	(-)	Transmit data 2
	RX1	(-)	Receive data 1
	–	–	Reserved

LED Indications

Indication	Colour	Description
LINE 1	Green	LINE 1 status indication: Refer to "LINE LED Pattern" below for details.
LINE 2	Green	LINE 2 status indication: Refer to "LINE LED Pattern" below for details.

LINE LED Pattern

Layer 1	Layer 2	Master Clock	LED Pattern
OFF	OFF	OFF	
ON	OFF	OFF	

2.3 Installation of the Trunk Cards

Layer 1	Layer 2	Master Clock	LED Pattern
ON	ON	OFF	
ON	OFF	ON	
ON	ON	ON	


Layer 1: ON (Synchronous)

Layer 2: ON (Link established)/OFF (Link not established)

Master Clock: ON (Master)/OFF (Slave)

Maximum Cabling Distance of S0 Bus Connection


The maximum distance of the extension cable that connects the Hybrid IP-PBX and the ISDN terminal equipment (TE) is shown below:

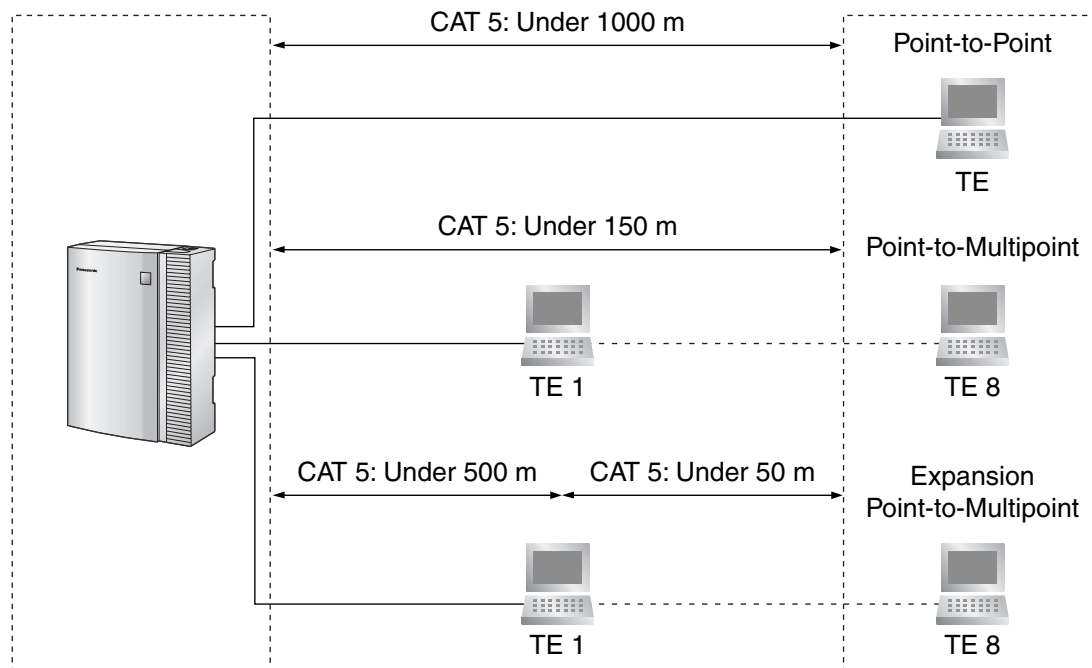

2.3.6 BRI1 Card

Function

1-port ISDN Basic Rate Interface card. EURO-ISDN/ETSI compliant.

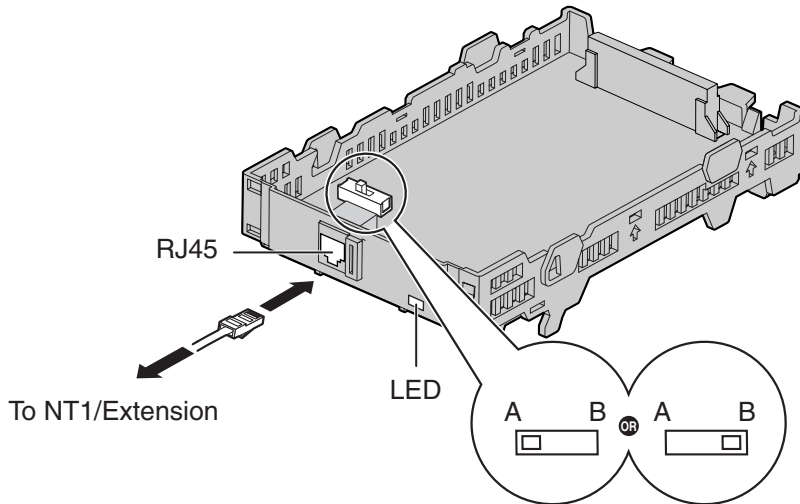

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1, Optional Card Label × 1

User-supplied (not included): RJ45 connector

Notes

- When connecting this optional service card to the trunk, connect through an NT1; do not connect to the U interface of the trunk directly.
- This optional service card has 100 Ω of terminal resistance. For use in point to multi-point connection, the card must be placed at the end of the bus.
- This optional service card can be used for either trunk or extension connection, by setting the A/B switch or using the connector with appropriate pin assignments.
- To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".

Notice

If the connected ISDN terminal has no external power source, make sure that the power is supplied from the BRI1 card by programming the Hybrid IP-PBX accordingly.

However, if there is an external power source to the terminal, make sure that there is no power supplied to the terminal from the BRI1 card. Failure to do so may cause damage to the power supply circuit of the BRI1 card or the terminal.

Switch Settings

Switch	Type	Usage and Status Definition
A/B	Slide	Select A (default) for trunk or B for extension use.

Pin Assignments

RJ45 Connector for Trunk Use

	Signal Name	Level [V]	Function
	TX1	(+)	Transmit data 1
	RX2	(+)	Receive data 2
	RX1	(-)	Receive data 1
	TX2	(-)	Transmit data 2
	–	–	Reserved

RJ45 Connector for Extension Use



	Signal Name	Level [V]	Function
	RX2	(+)	Receive data 2
	TX1	(+)	Transmit data 1
	TX2	(-)	Transmit data 2
	RX1	(-)	Receive data 1
	–	–	Reserved

LED Indications

Indication	Colour	Description
LINE 1	Green	LINE 1 status indication: Refer to "LINE LED Pattern" below for details.

LINE LED Pattern


Layer 1	Layer 2	Master Clock	LED Pattern
OFF	OFF	OFF	
ON	OFF	OFF	
ON	ON	OFF	

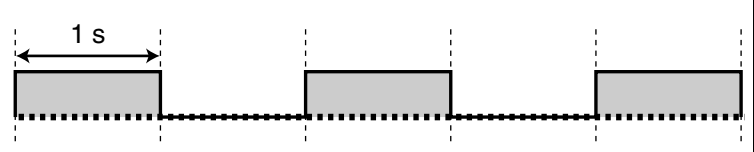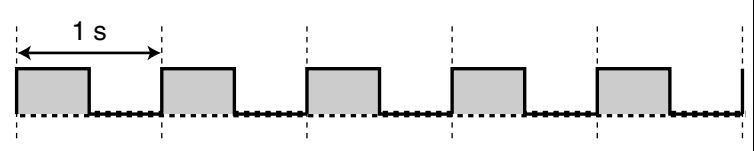Layer 1	Layer 2	Master Clock	LED Pattern
ON	OFF	ON	
ON	ON	ON	

Layer 1: ON (Synchronous)
 Layer 2: ON (Link established)/OFF (Link not established)
 Master Clock: ON (Master)/OFF (Slave)

Maximum Cabling Distance of S0 Bus Connection


The maximum distance of the extension cable that connects the Hybrid IP-PBX and the ISDN terminal equipment (TE) is shown below:

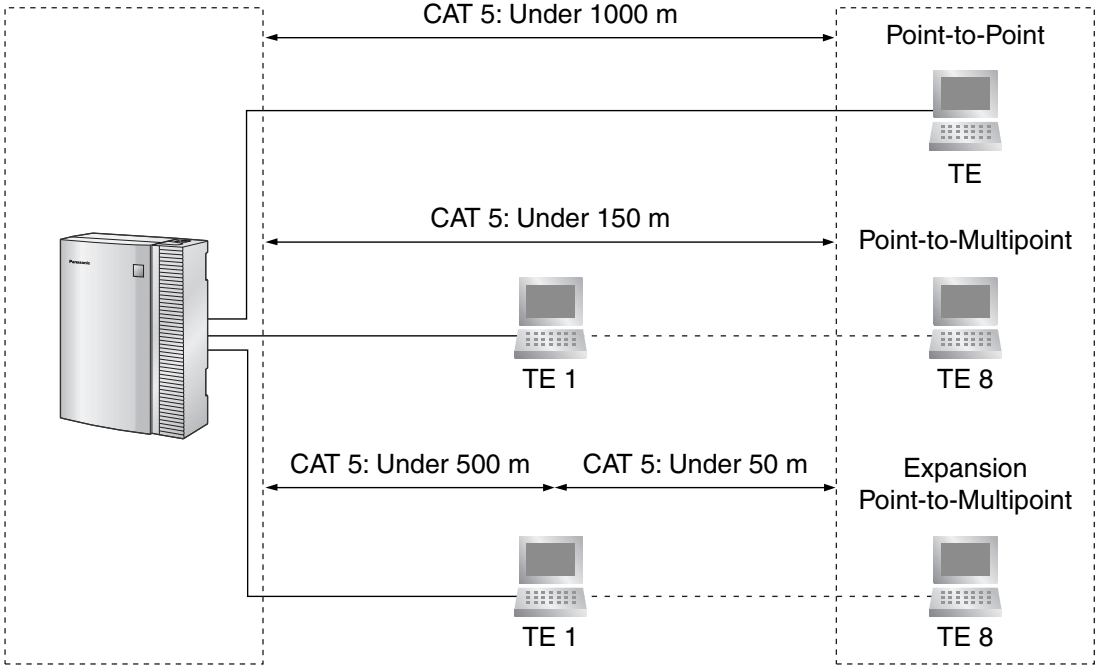

2.3.7 IP-GW4 Card

Function

4-channel VoIP gateway card. Compliant with VoIP H.323 V.2 protocol, and ITU-T G.729a, G.723.1, and G.711 CODEC methods.

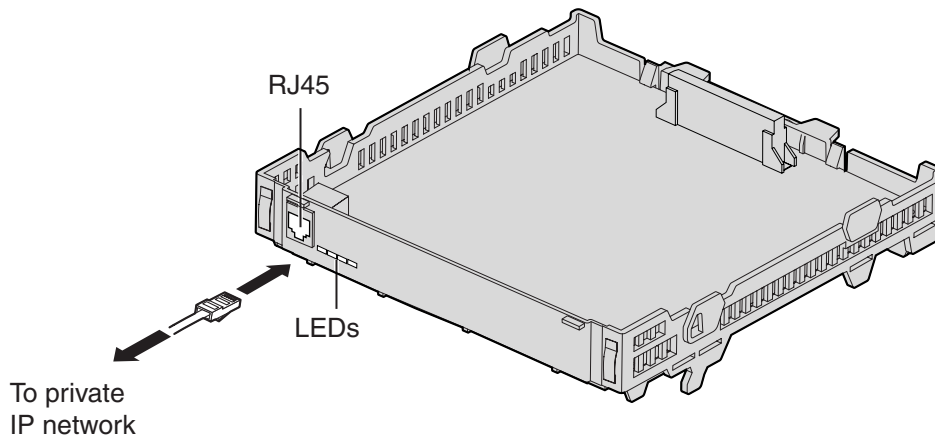

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector

Notes

- Maximum length of the cable to be connected to this optional service card is 100 m.
- For programming instructions and other information about the IP-GW4 card, refer to the documentation for the IP-GW4 card.
- To confirm the trunk connection, refer to "Confirming the Trunk Connection" in "2.12.1 Starting the Hybrid IP-PBX".

Pin Assignments

RJ45 Connector (10BASE-T/100BASE-TX)

	Signal Name	Input (I)/Output (O)	Function
	TPO+	O	Transmit data+
	TPO-	O	Transmit data-
	TPI+	I	Receive data+
	TPI-	I	Receive data-
	-	-	Reserved

LED Indications


Indication	Colour	Description
ON LINE	Green	On-line status indication <ul style="list-style-type: none"> • ON: On-line mode • OFF: Off-line mode • Flashing: Maintenance mode <p>Note</p> If the LINK indicator is OFF, the ON LINE indicator will also be OFF.
ALARM	Red	Alarm indication <ul style="list-style-type: none"> • ON: Alarm • OFF: Normal
LINK	Green	Link status indication <ul style="list-style-type: none"> • ON: Normal Connection • OFF: Connection Error
DATA	Green	Data transmission indication <ul style="list-style-type: none"> • ON: Data transmitting • OFF: No data transmitted

2.4 Installation of the Extension Cards

2.4.1 DLC4 Card

Function

4-port digital extension card for DPTs, DSS consoles, a Voice Processing System (VPS), and PT-interface CSs.

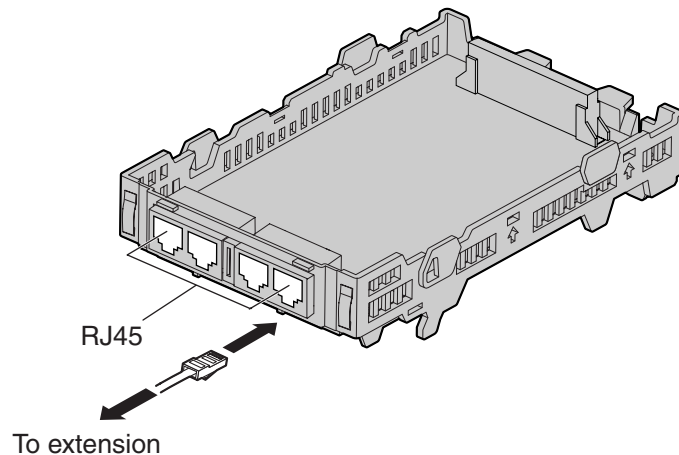

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector or RJ11 connector

Notice

The connector type may be RJ45 or RJ11 depending on the country/area.

Note


For details about connecting the CS, refer to "2.8.7 Connecting a Cell Station to the Hybrid IP-PBX".

Pin Assignments

RJ45 Connector

	Signal Name	Function
	D1	Data port (High)
	D2	Data port (Low)
	-	Reserved


RJ11 Connector

	Signal Name	Function
	D1	Data port (High)
	D2	Data port (Low)
	-	Reserved

2.4.2 SLC4 Card

Function

4-port extension card for SLTs.

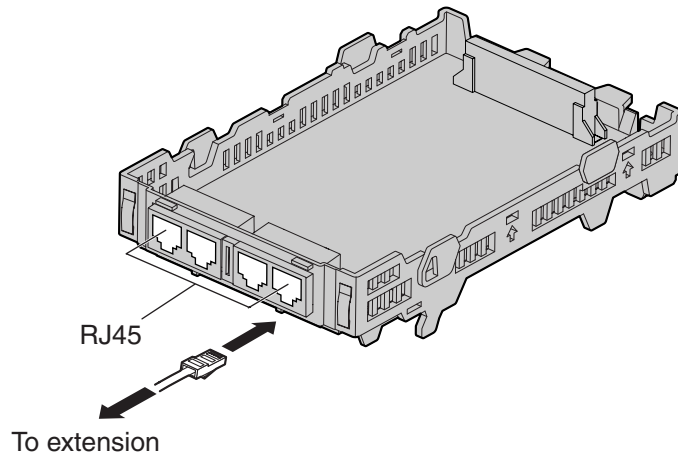

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector or RJ11 connector

Notice

The connector type may be RJ45 or RJ11 depending on the country/area.

Pin Assignments

RJ45 Connector

	Signal Name	Function
	T	Tip
	R	Ring
	—	Reserved


RJ11 Connector

	Signal Name	Function
	T	Tip
	R	Ring
	—	Reserved

2.4.3 DLC8 Card

Function

8-port digital extension card for DPTs, DSS consoles, a VPS, and PT-interface CSs.

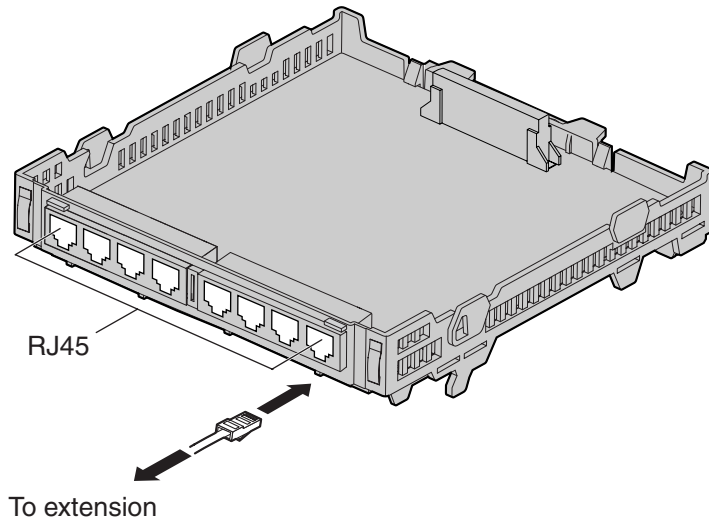

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1

User-supplied (not included): RJ45 connector or RJ11 connector

Notice


The connector type may be RJ45 or RJ11 depending on the country/area.

Note


For details about connecting the CS, refer to "2.8.7 Connecting a Cell Station to the Hybrid IP-PBX".

Pin Assignments

RJ45 Connector

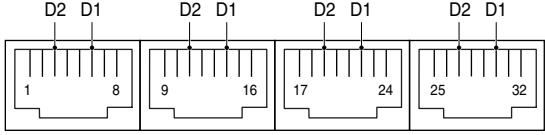	Signal Name	Function
	D1	Data port (High)
	D2	Data port (Low)
	—	Reserved


RJ11 Connector

	Signal Name	Function
	D1	Data port (High)
	D2	Data port (Low)
	—	Reserved

2.4.4 SLC8 Card

Function

8-port extension card for SLTs.

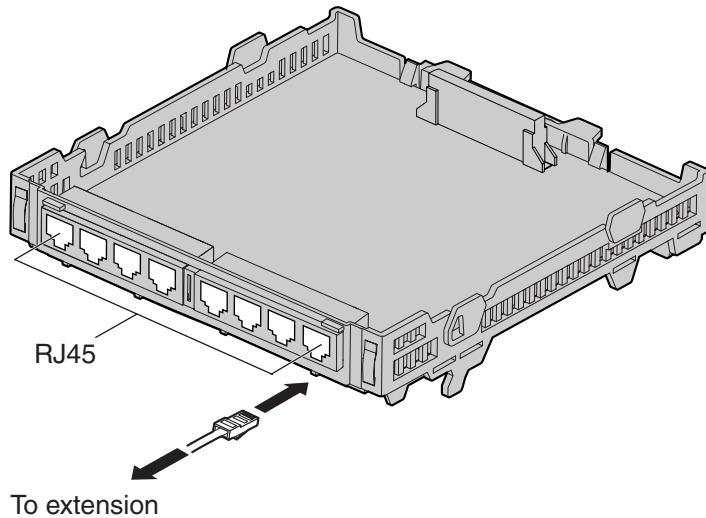

Accessory and User-supplied Items

Accessory (included): Extension Bolt x1, Strap x 1









User-supplied (not included): RJ45 connector or RJ11 connector

Notice


The connector type may be RJ45 or RJ11 depending on the country/area.

Pin Assignments

RJ45 Connector

	Signal Name	Function
	T	Tip
	R	Ring
	–	Reserved
		
		
		
		
		

RJ11 Connector


	Signal Name	Function
	T	Tip
	R	Ring
	–	Reserved
		

2.5 Installation of the Other Cards

2.5.1 DPH4 Card

Function

4-port doorphone card for 4 doorphones, 4 door openers or external relays, and 4 external sensors.

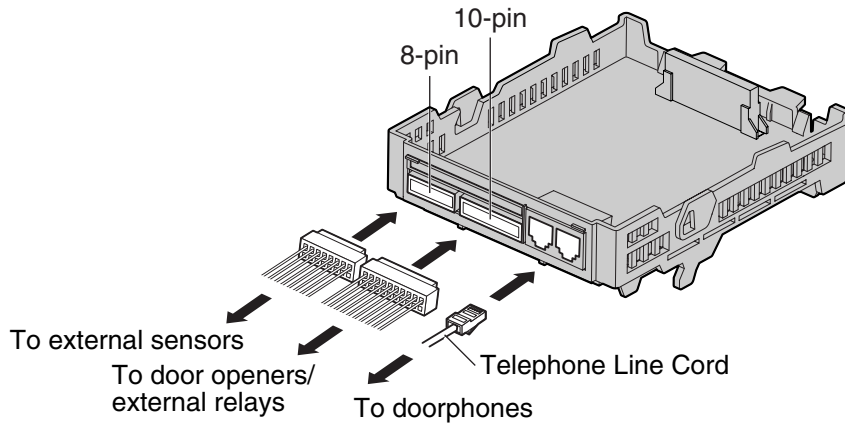

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1, 8-pin terminal block × 1, 10-pin terminal block × 1, Telephone Line Cord × 2, Terminal Box × 1 (for DPH4 card with RJ45 connectors) or 2 (for DPH4 card with RJ11 connectors)

User-supplied (not included): Copper wire

Notice

The connector type may be RJ45 or RJ11 depending on the country/area.
Shown above is a card having the RJ45 connectors.

Note

For details about connection to doorphones and door openers, refer to "2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays".

Pin Assignments

RJ45 Connector

	Signal Name	Function
		DP2
	DP1	Doorphone 1 transmit
	com1	Doorphone 1 receive
	com2	Doorphone 2 receive
	DP4	Doorphone 4 transmit
	DP3	Doorphone 3 transmit
	com3	Doorphone 3 receive
	com4	Doorphone 4 receive
	–	Reserved

RJ11 Connector

	Signal Name	Function
		DP2
	DP1	Doorphone 1 transmit
	com1	Doorphone 1 receive
	com2	Doorphone 2 receive
	DP4	Doorphone 4 transmit
	DP3	Doorphone 3 transmit
	com3	Doorphone 3 receive
	com4	Doorphone 4 receive

8-pin Terminal Block


	Signal Name	Function
		SENS 1a
	SENS 1b	com 1
	SENS 2a	Sensor Input 2
	SENS 2b	com 2
	SENS 3a	Sensor Input 3
	SENS 3b	com 3
	SENS 4a	Sensor Input 4
	SENS 4b	com 4

10-pin Terminal Block

	Signal Name	Function
	OP1b (RL1b)	Door opener 1 (Relay 1)
	OP1a (RL1a)	Door opener 1 com (Relay 1 com)
	OP2b (RL2b)	Door opener 2 (Relay 2)
	OP2a (RL2a)	Door opener 2 com (Relay 2 com)
	OP3b (RL3b)	Door opener 3 (Relay 3)
	OP3a (RL3a)	Door opener 3 com (Relay 3 com)
	OP4b (RL4b)	Door opener 4 (Relay 4)
	OP4a (RL4a)	Door opener 4 com (Relay 4 com)
	–	Reserved

Connection Diagram for External Sensors and External Relays


Power to the external sensor is provided from the DPH4 card and must be grounded through the DPH4 card as indicated in the diagram below. A pair of "sensor" and "common" lines must be connected to the DPH4 card for each external sensor. The Hybrid IP-PBX detects input from the sensor when the signal is under 100 Ω.

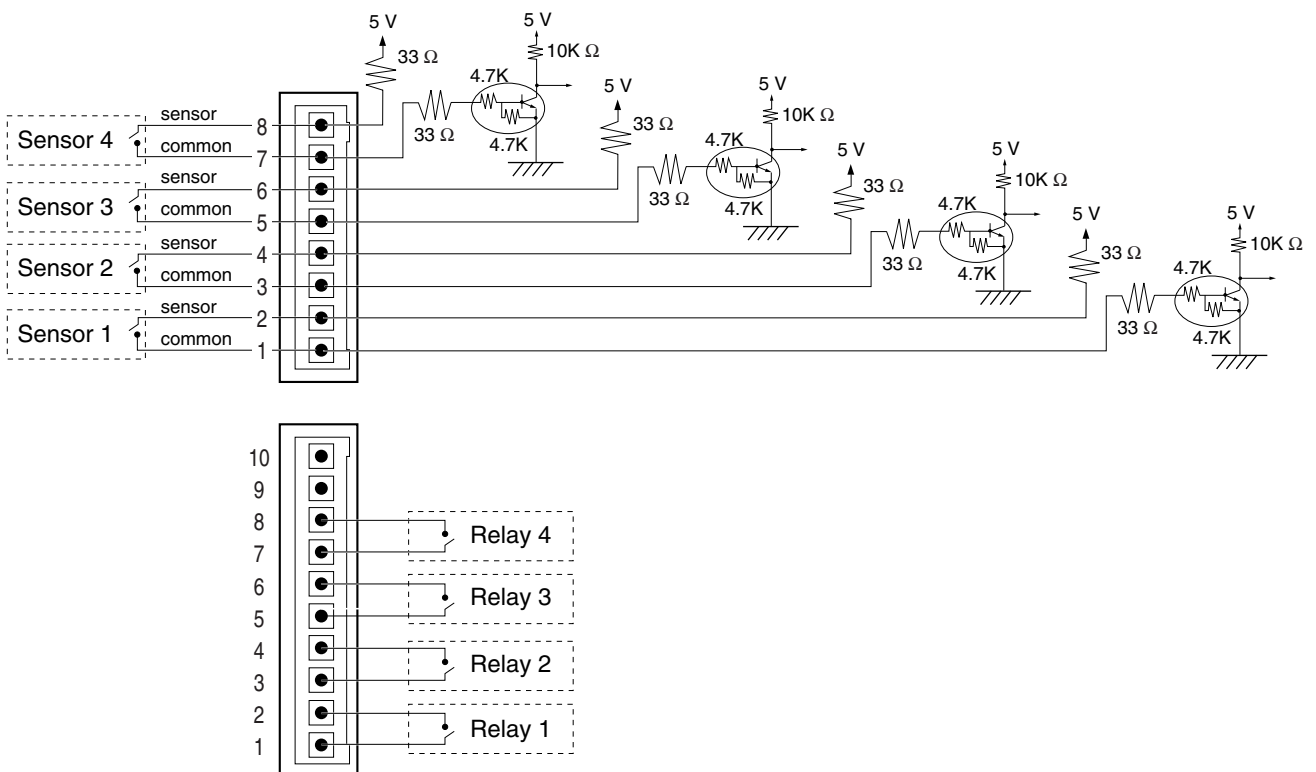

2.5.2 DPH2 Card

Function

2-port doorphone card for 2 German type doorphones, 2 door openers, 4 external sensors, and 4 external relays.

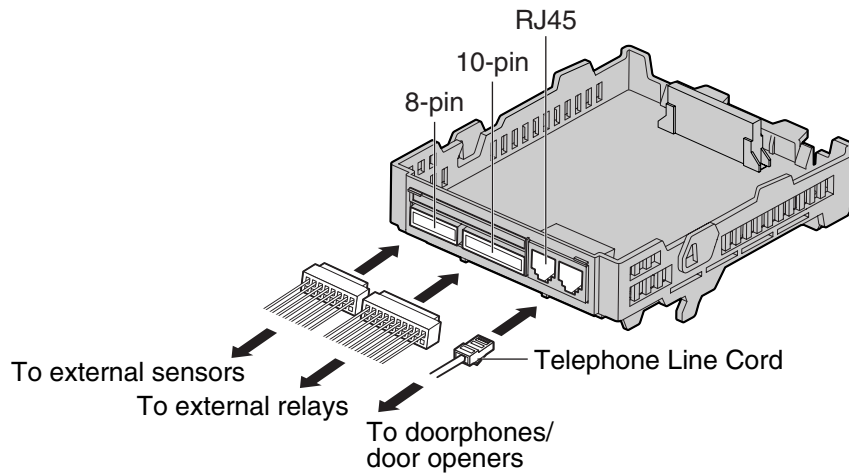

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1, 8-pin terminal block × 1, 10-pin terminal block × 1, Telephone Line Cord × 2, Terminal Box × 1


User-supplied (not included): Copper wire

Note


For details about connection to doorphones and door openers, refer to "2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays".

Pin Assignments

RJ45 Connector

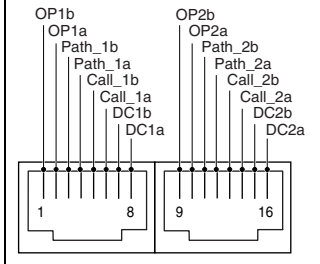
	Signal Name	Function
	OP1b	Door opener 1
	OP1a	Door opener 1 com
	Path_1b	Doorphone 1 transmit
	Path_1a	Doorphone 1 receive
	Call_1b	Doorphone 1 call button
	Call_1a	Doorphone 1 call button com
	DC1b	Doorphone control 1
	DC1a	Doorphone control 1 com
	OP2b	Door opener 2
	OP2a	Door opener 2 com
	Path_2b	Doorphone 2 transmit
	Path_2a	Doorphone 2 receive
	Call_2b	Doorphone 2 call button
	Call_2a	Doorphone 2 call button com
	DC2b	Doorphone control 2
	DC2a	Doorphone control 2 com

8-pin Terminal Block

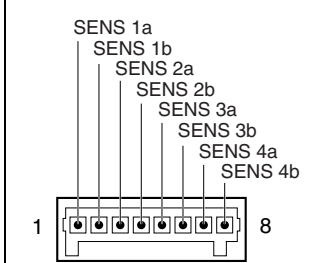	Signal Name	Function
	SENS 1a	Sensor Input 1
	SENS 1b	com 1
	SENS 2a	Sensor Input 2
	SENS 2b	com 2
	SENS 3a	Sensor Input 3
	SENS 3b	com 3
	SENS 4a	Sensor Input 4
	SENS 4b	com 4


2.5 Installation of the Other Cards

10-pin Terminal Block

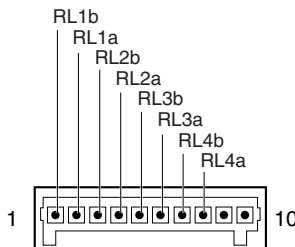	Signal Name	Function
	RL1b	Relay 1
	RL1a	Relay 1 com
	RL2b	Relay 2
	RL2a	Relay 2 com
	RL3b	Relay 3
	RL3a	Relay 3 com
	RL4b	Relay 4
	RL4a	Relay 4 com
	-	Reserved

Connection Diagram for External Sensors and External Relays


Power to the external sensor is provided from the DPH2 card and must be grounded through the DPH2 card as indicated in the diagram below. A pair of "sensor" and "common" lines must be connected to the DPH2 card for each external sensor. The Hybrid IP-PBX detects input from the sensor when the signal is under $100\ \Omega$.

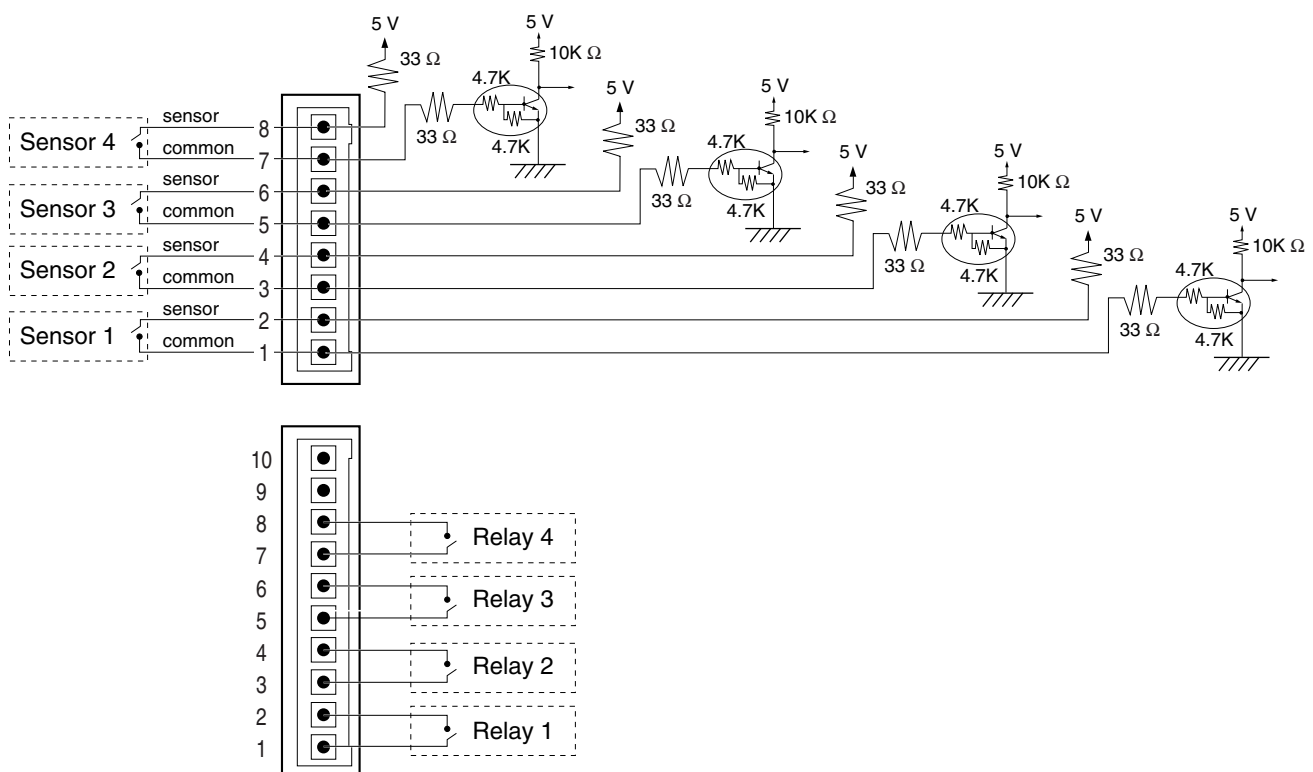

2.5.3 ECHO8 Card

Function

8-channel card for echo cancellation during conferences.

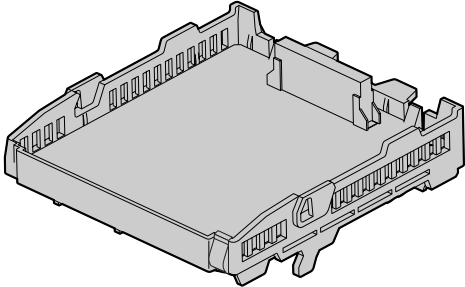

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Screw × 1

User-supplied (not included): none


Note

To establish a conference call involving 6 to 8 parties, install an ECHO8 card and enable the echo cancellation for conference using the KX-TDA30 Maintenance Console. For details, refer to the on-line help of the KX-TDA30 Maintenance Console.

2.5.4 MSG2 Card

Function

2-channel message card.

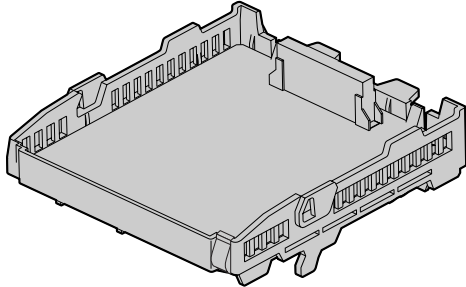

Accessory and User-supplied Items


Accessory (included): Extension Bolt × 1, Screw × 1

User-supplied (not included): none

2.5.5 EXT-CID Card

Function

Sends Caller ID signals to extension ports.

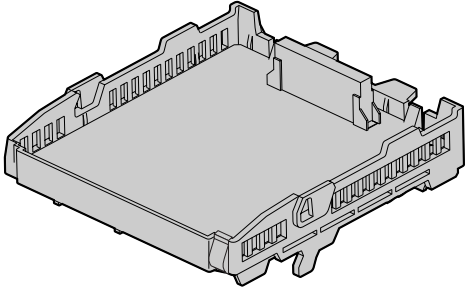

Accessory and User-supplied Items


Accessory (included): Extension Bolt × 1, Screw × 1

User-supplied (not included): none

2.5.6 MEC Card

Function

Memory expansion card to increase Personal/System Speed Dialling number storage space, double the number of DPTs (using Digital XDP connection), and enable Broadcasting, display language selection for VM Menu, and Call Billing for Guest Room features. To be installed in the MEC slot.

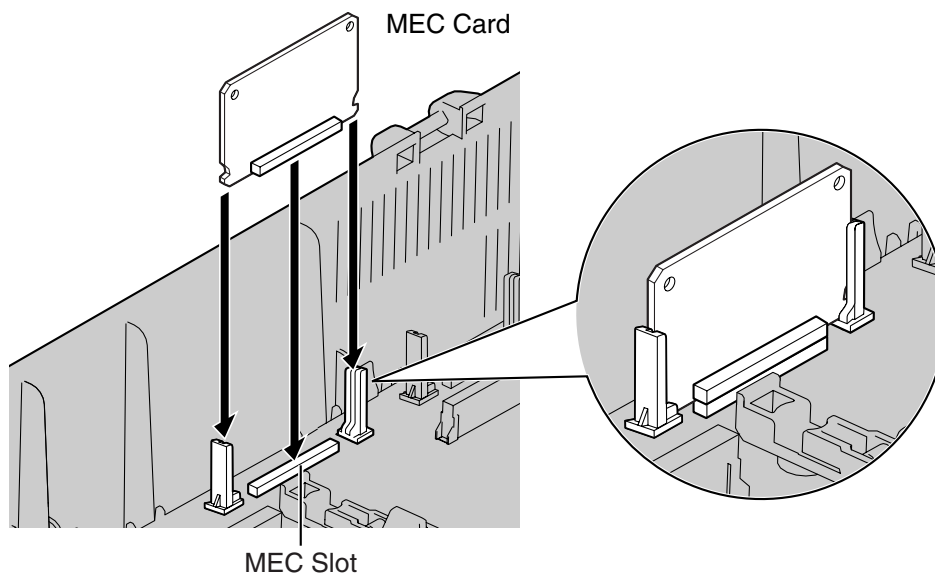

Accessory and User-supplied Items

Accessory (included): none


User-supplied (not included): none

CAUTION

Make sure to insert the MEC card between the guide rails until it locks into the MEC slot. Push the card firmly into place until you hear a clicking sound.

Removing the MEC Card


Pull open the guide rails using a flathead screwdriver and, while holding them open, remove the MEC card.

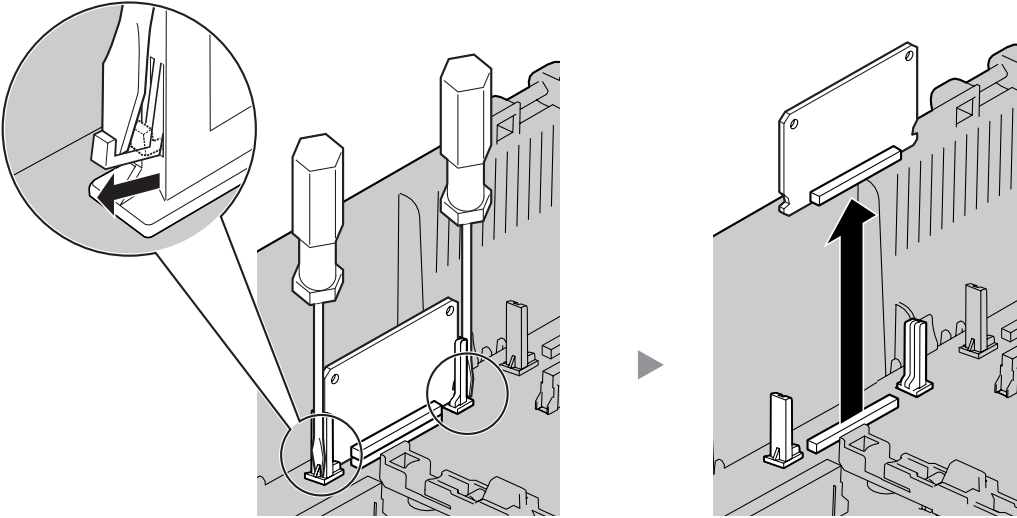

2.5.7 RMT Card

Function

Analogue modem card for remote communication with the Hybrid IP-PBX. V90 support. To be installed in the RMT slot.

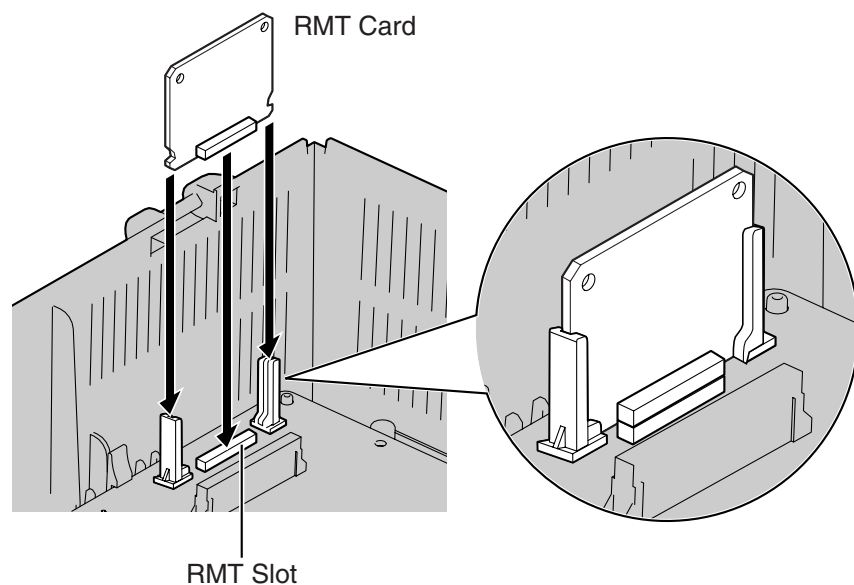

Accessory and User-supplied Items

Accessory (included): none


User-supplied (not included): none

CAUTION

Make sure to insert the RMT card between the guide rails until it locks into the RMT slot. Push the card firmly into place until you hear a clicking sound.


Removing the RMT Card

Pull open the guide rails using a flathead screwdriver and, while holding them open, remove the RMT card.

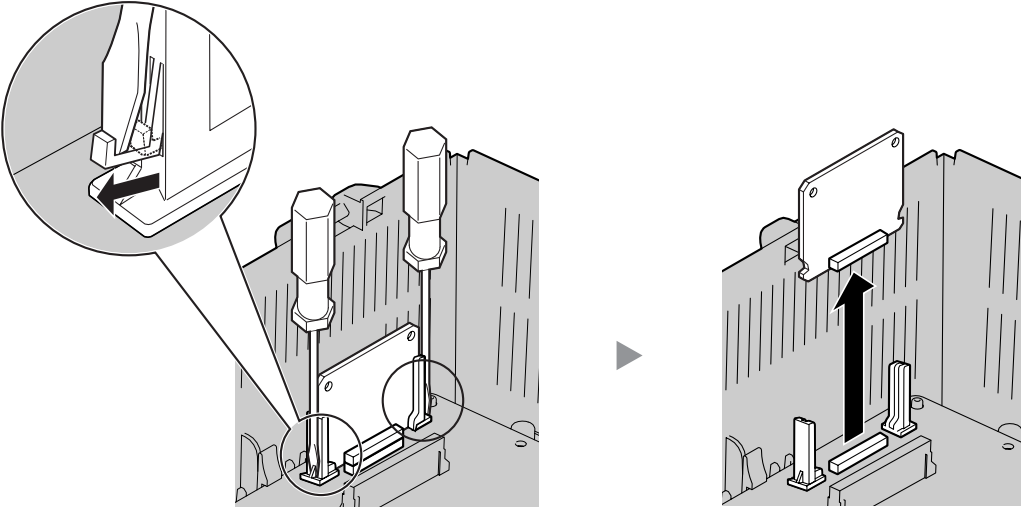

2.6 Connection of Extensions

2.6.1 Maximum Cabling Distances of the Extension Wiring (Twisted Cable)

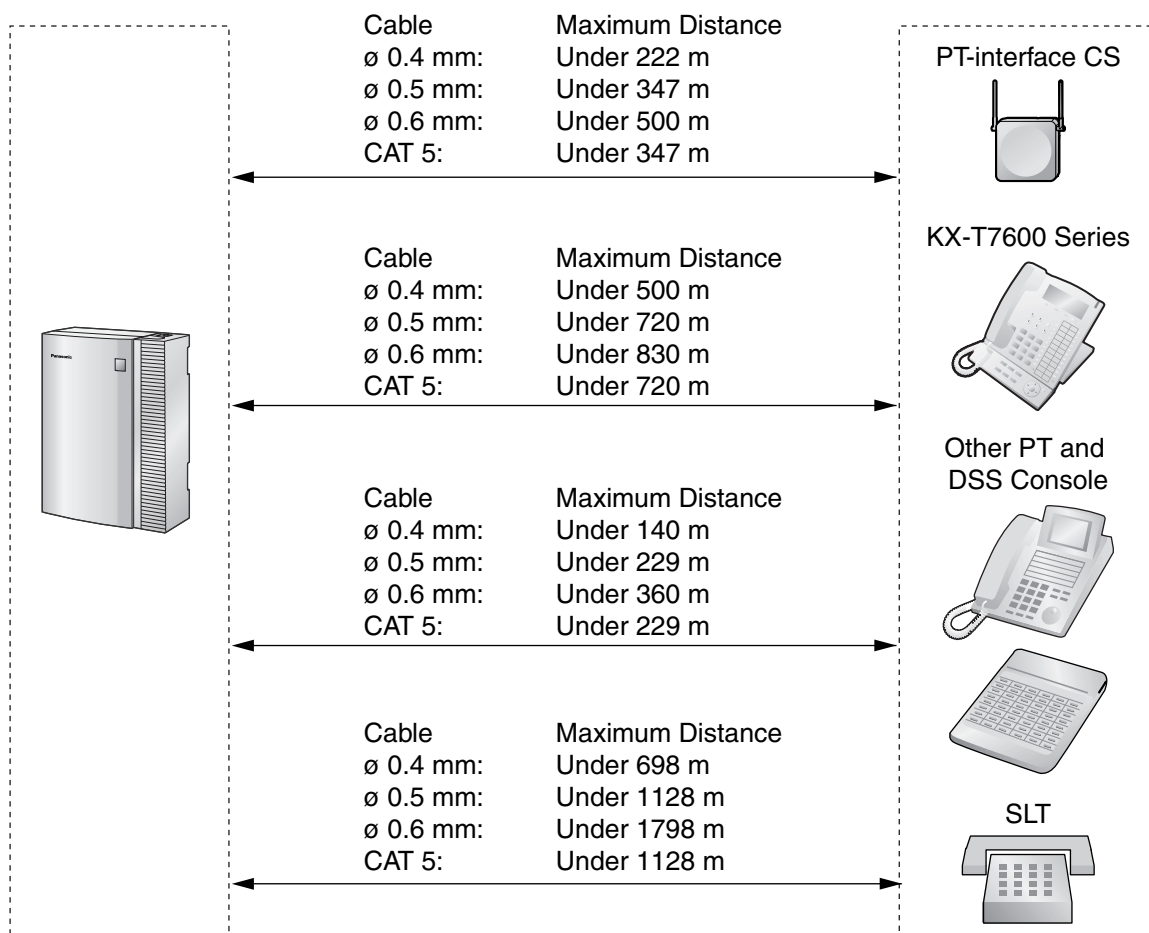

Notice

The maximum cabling distance may vary depending on the conditions.

	PT-interface CS	DPT	APT	DSS Console	SLT
Super Hybrid Ports (Main Board)	✓	✓	✓	✓	✓
SLC4, SLC8 Cards					✓
DLC4, DLC8 Cards	✓	✓		✓	

" ✓ " indicates that the extension card or Super Hybrid Ports support the terminal.


2.6.2 Parallel Connection of the Extensions

Any SLT can be connected in parallel with an APT or a DPT as follows.

Note

In addition to an SLT, an answering machine, a fax machine or a modem (PC) can be connected in parallel with an APT or a DPT.

With APT

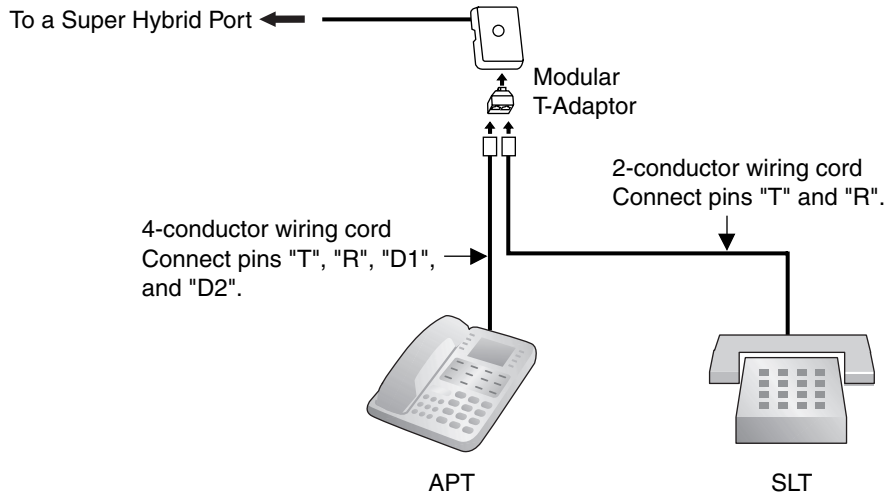


With DPT

Parallel mode or eXtra Device Port (XDP) mode can be selected through system programming.

If the XDP mode is enabled through system programming, parallel connection is not possible. Refer to "1.10.9 Paralleled Telephone" and "2.1.1 Extension Port Configuration" in the Feature Guide for further information.


Using a Modular T-Adaptor

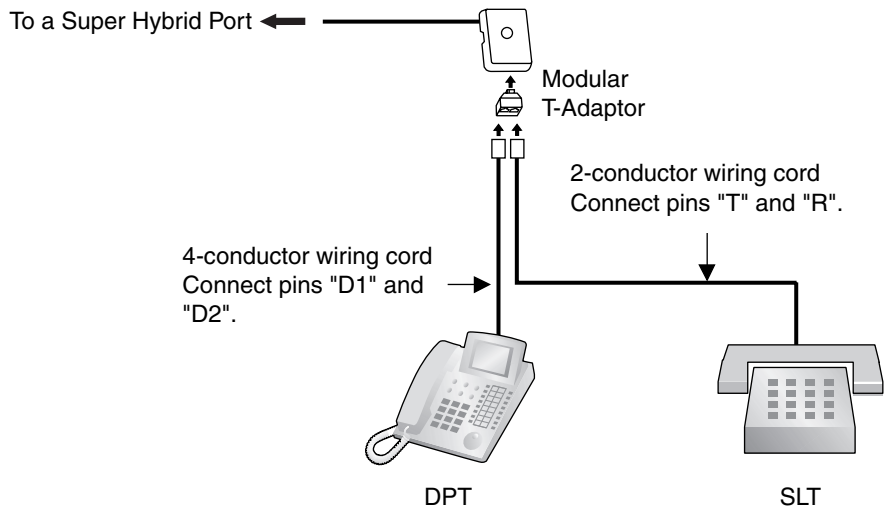

Using an EXtra Device Port


With KX-T7600 Series DPT (except KX-T7665)

To a Super Hybrid Port ←

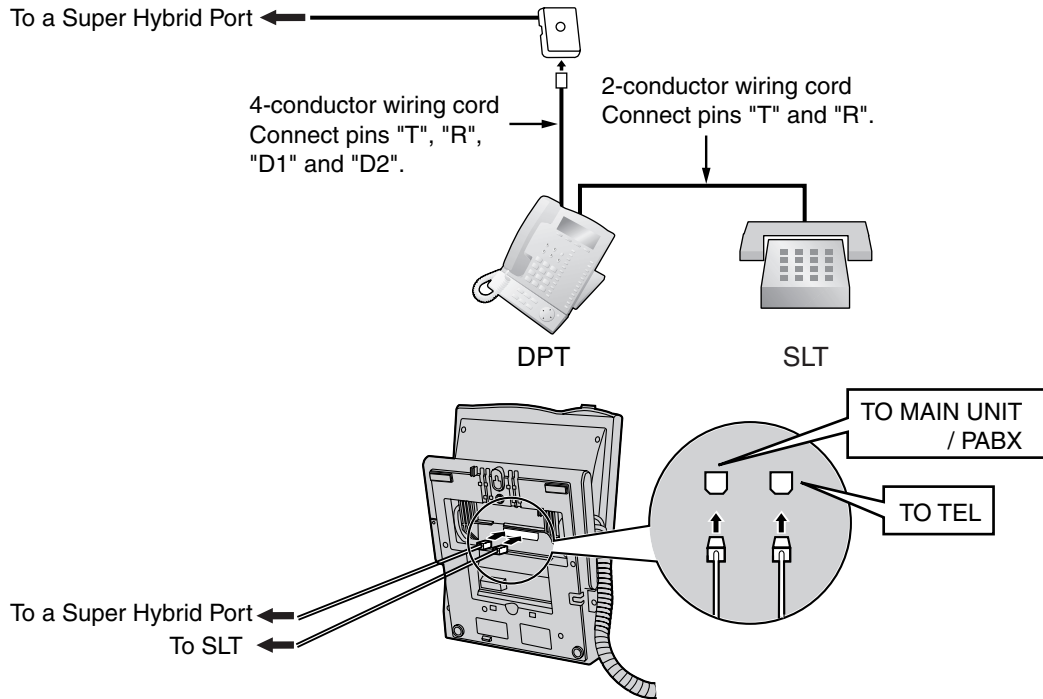

With Other DPT (except KX-T7560 and KX-T7565)

To a Super Hybrid Port ←

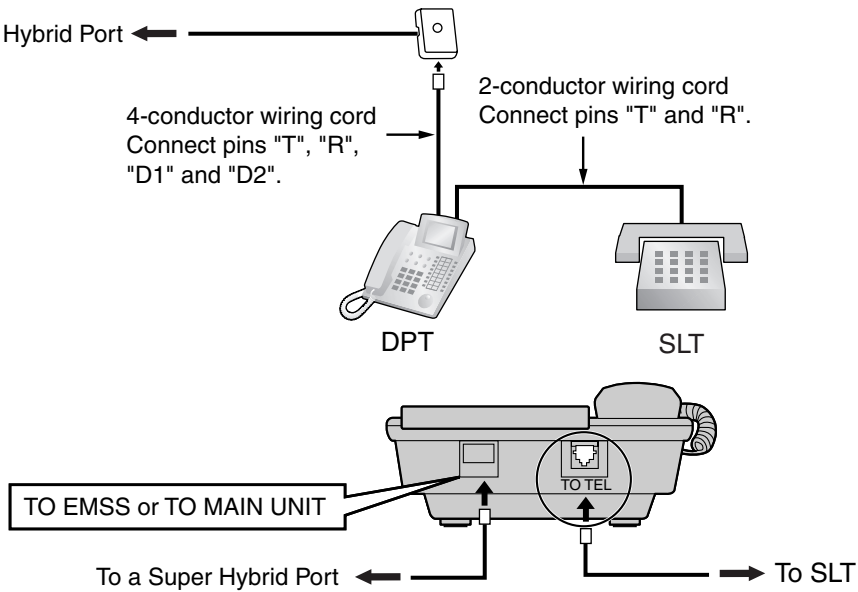

2.6.3 Digital EXtra Device Port (Digital XDP) Connection



A DPT can be connected to another DPT on the Digital XDP connection. In addition, if the DPT is connected to a Super Hybrid Port, it can also have an SLT connected in Parallel mode or XDP mode.

Notes



- Both DPTs must be KX-T7600 series DPTs (excluding KX-T7640).
- Parallel mode or XDP mode can be selected through system programming.
- If XDP mode is enabled through system programming, parallel connection is not possible. Refer to "1.10.9 Paralleled Telephone" and "2.1.1 Extension Port Configuration" in the Feature Guide for further information.

With KX-T7600 Series DPT (except KX-T7600E Series)

Using a Modular T-Adaptor

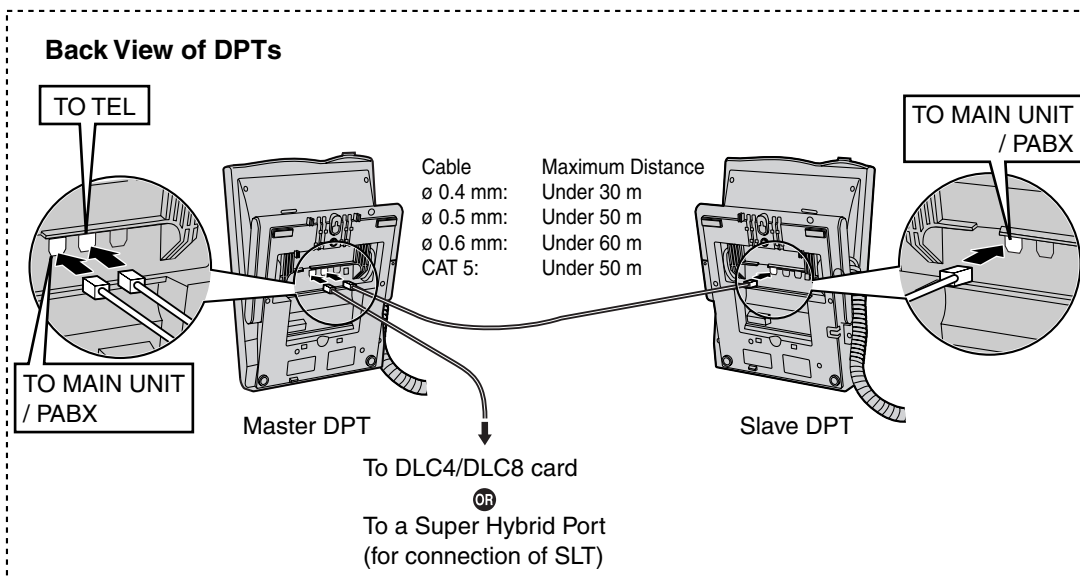
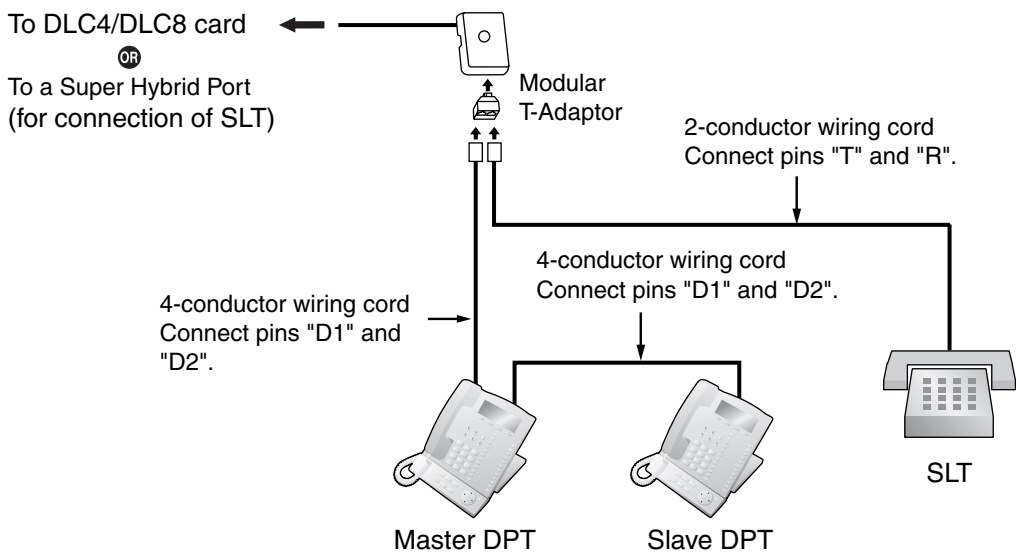


Using an Extra Device Port

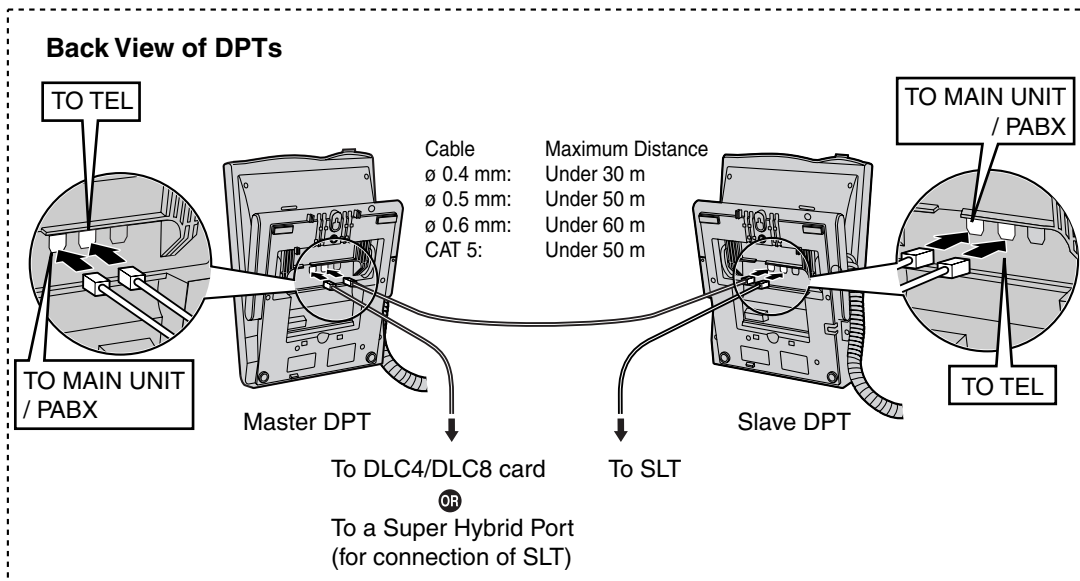
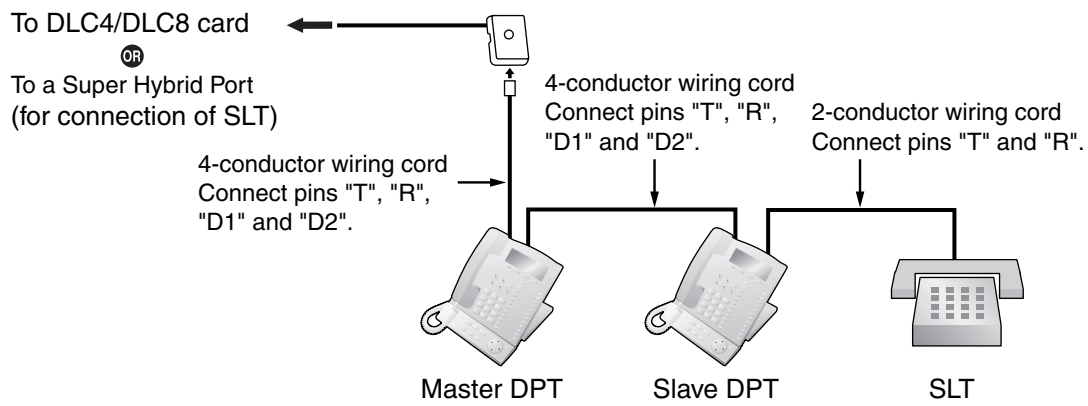


With KX-T7600E Series DPT



Using a Modular T-Adaptor

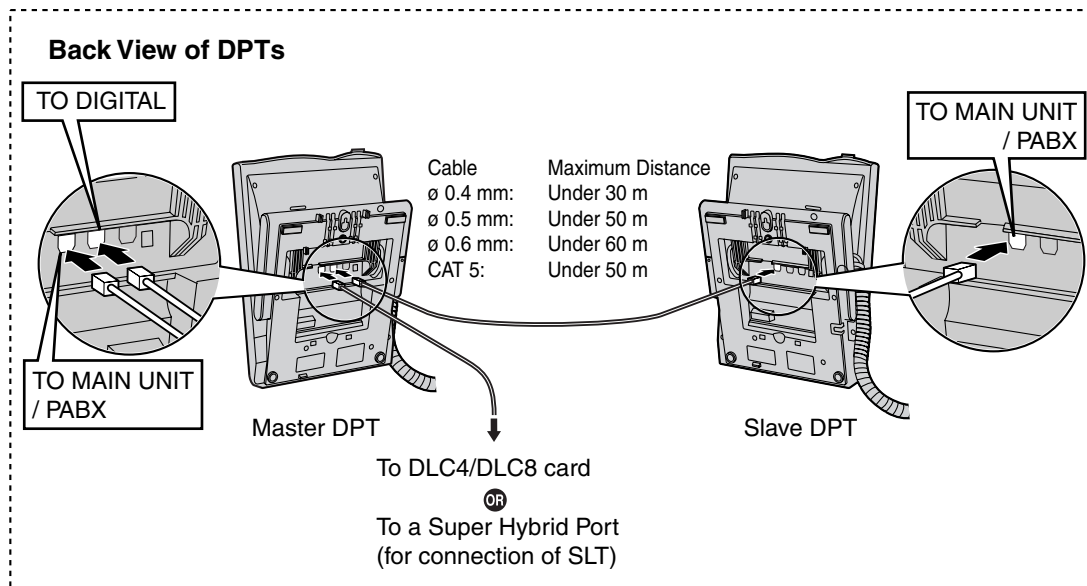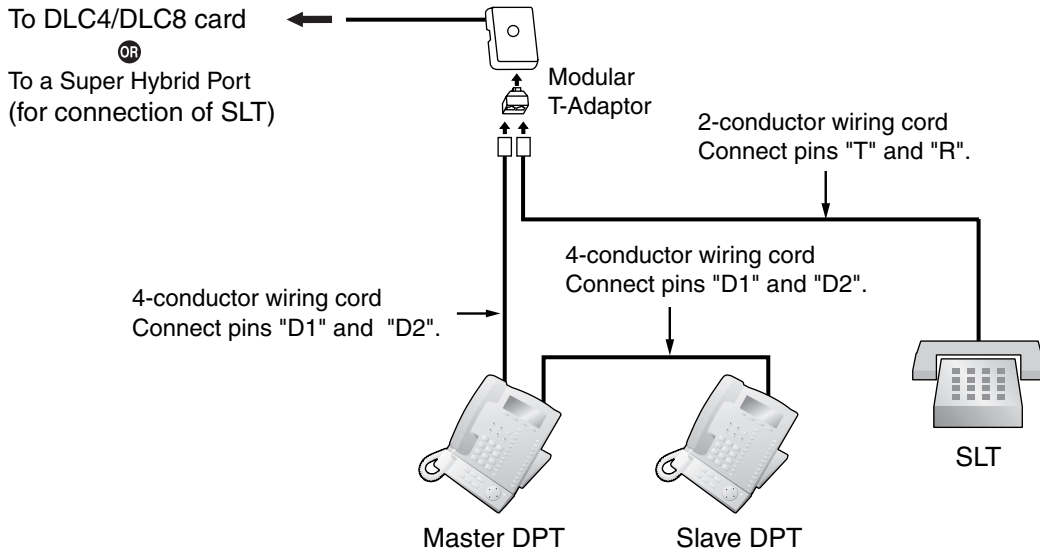

**Using an Extra Device Port
Connecting to a Slave DPT**

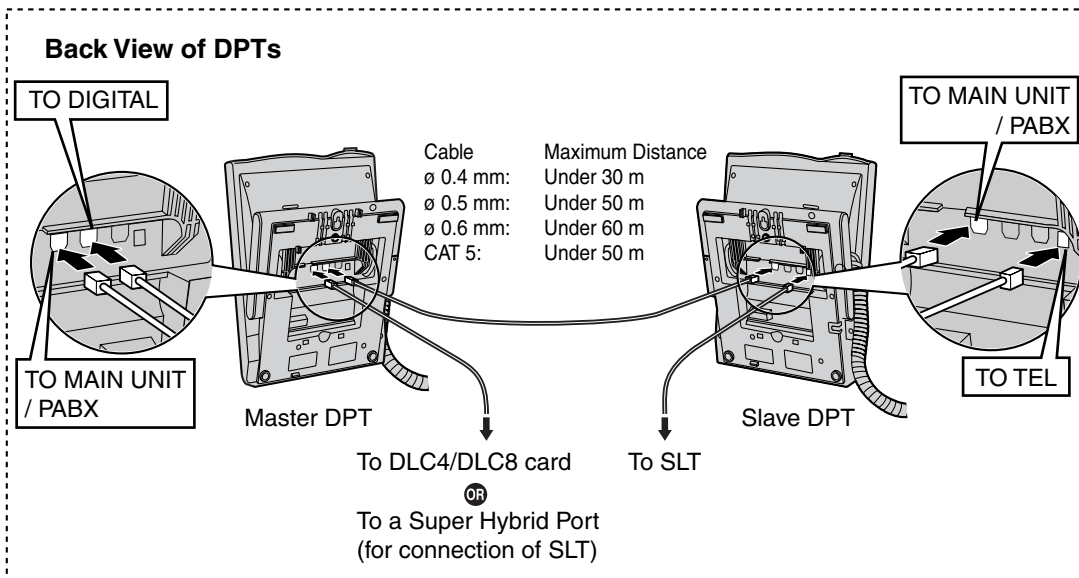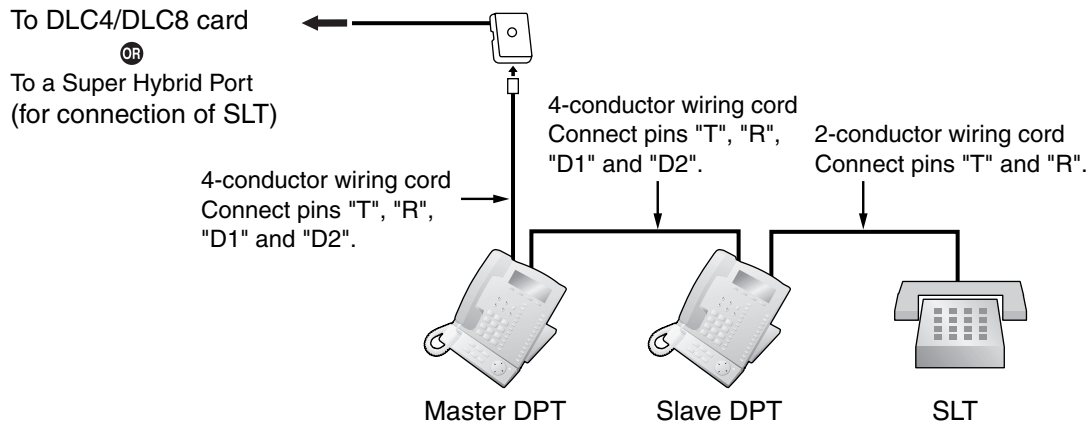

Connecting to a Master DPT

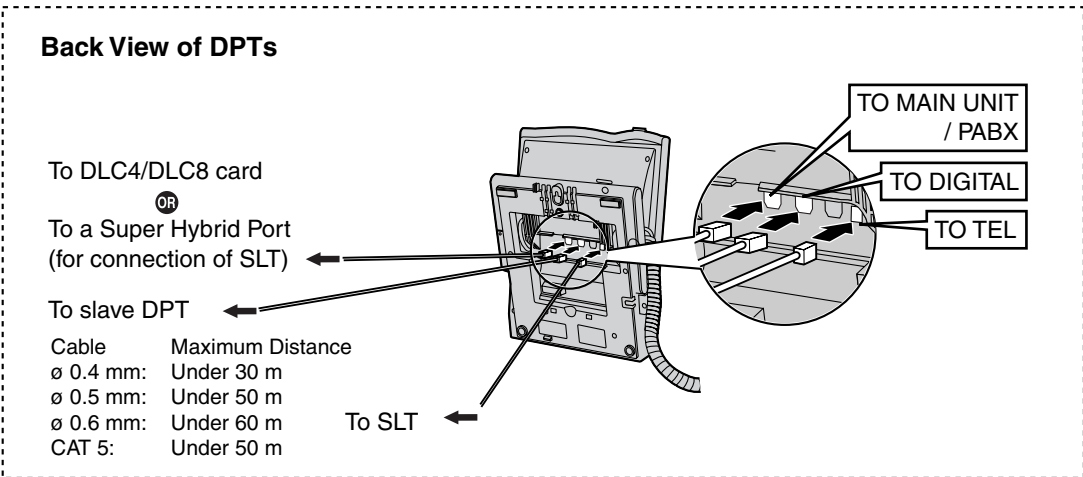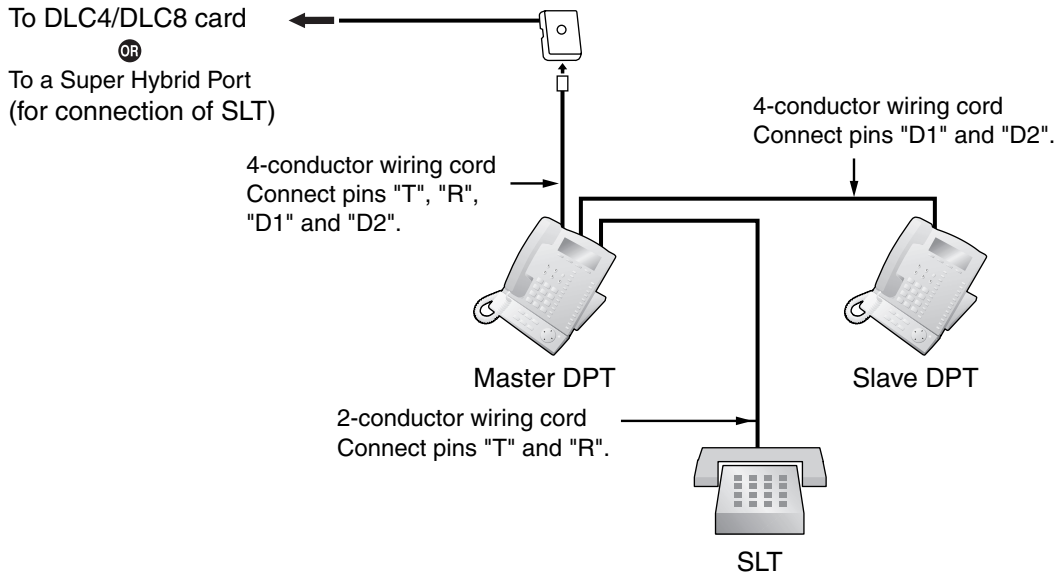


2.6.4 First Party Call Control CTI Connection

CTI connection between a PC and a KX-T7633/T7636 DPT provides first party call control. The CTI connection is made via a USB interface (version 1.1), and uses the TAPI 2.1 protocol.

A USB Module (KX-T7601) must be connected to the KX-T7633/T7636 DPT.

Note

The operating system of the PC required for first party call control depends on your CTI application software. For details, refer to the manual for your CTI application software.

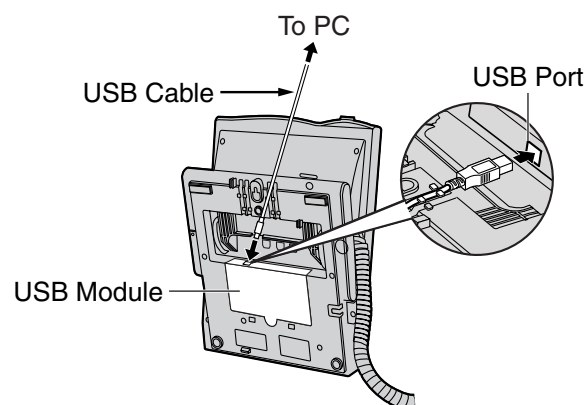

Notes

- Maximum length of the USB cable is 3 m.
- USB Modules must not be connected to DPTs in the Digital XDP connection. In a Digital XDP connection, the PC cannot be used. If a USB module is connected to a slave DPT, the DPT will not work properly.

2.7 Connection of DECT Portable Stations

2.7.1 Overview

The following equipment is required to connect the wireless system:

CS: Cell Station (KX-TDA0141CE)

This unit determines the area covered by the wireless system. Up to 2 calls can be made at the same time through each CS.

Note for users in Europe

This Cell Station Unit for DECT is for connection to a Panasonic PBX of a European country.

PS: DECT Portable Station (KX-TCA155/KX-TCA255/KX-TD7590/KX-TD7580)

The KX-TDA30 can support up to 28 PSs. For more details about the PS, please refer to the PS Operating Instructions.

RF Specification

Item	Description
Radio Access Method	Multi Carrier TDMA-TDD
Frequency Band	1880 MHz to 1900 MHz ^{*1}
Number of Carriers	10 ^{*2}
Carrier Spacing	1728 kHz
Bit Rate	1152 kbps
Carrier Multiplex	TDMA, 24 (Tx12, Rx12) slots per frame
Frame Length	10 ms
Modulation Scheme	GFSK Roll-off factor=0.5 50 % roll-off in the transmitter
Data Coding for Modulator	Differential Coding
Voice CODEC	32 kbps ADPCM (CCITT G.721)
Transmission Output	Average 10 mW Peak 250 mW

^{*1} The number may vary depending on the country/area. In Taiwan, it is 1880 MHz to 1895 MHz.

^{*2} The number may vary depending on the country/area. In Taiwan, it is 8.

CAUTION

- The CS should be kept free of dust, moisture, high temperature (more than 40 °C), low temperature (less than 0 °C), vibration, and should not be exposed to direct sunlight.
- The CS should not be placed outdoors (use indoors).
- The CS should not be placed near high voltage equipment.
- The CS should not be placed on a metal object.

2.7 Connection of DECT Portable Stations

- Do not use this wireless system near another high power cordless system such as DECT or SS wireless.
- Keep the distances listed below between equipment in order to prevent noise, interference or the disconnection of a conversation. (The distance may vary depending on the environment.)

Equipment	Distance
CS and office equipment such as a computer, telex, fax machine, etc., or microwaves	More than 2 m
CS and PS	More than 1 m
Each PS	More than 0.5 m
Hybrid IP-PBX and CS	More than 2 m

Too many CSs in a small area can cause problems due to conflicts over which signal channels each CS can use. Ideally, CSs should be a minimum of 25 m to 40 m apart.

However, the required distance between CSs may vary depending on the environment of the installation site and conditions in which the wireless system is used. Conduct the site survey to determine the appropriate distance.

2.7.2 Procedure Overview

When connecting the wireless system, use extreme care to conduct a site survey. Site surveys can be conducted using the KX-TCA255 or KX-TD7590 PS. Inadvertent site survey can result in poor service area, frequent noise, and disconnection of calls.

1. Investigate the installation site

Refer to "2.7.3 Site Planning".

- a. Obtain the map of the CS installation site.
- b. Consider the service area demanded by the user on the map.
- c. Plan the locations of each CS, taking account of distance, building materials and etc.

2. Prepare for site survey

Refer to "2.7.4 Before Site Survey".

- a. Check and assign the CS ID number to the PS.
- b. Assign a channel number to each CS by setting the DIP switches on the back of the CS.
- c. Supply electricity to each CS using an AC adaptor or a battery box.
- d. Install each CS temporarily as planned.

Notes


- Install at least 2 m above the floor.
- Keep the antennas in the upright position.

3. Conduct the site survey


Refer to "2.7.5 Site Survey Using the KX-TCA255/KX-TD7590".

- a. Test the radio signal strength using the PS.
Confirm that the radio signal strength level is "12" near the CS.

Using the KX-TCA255

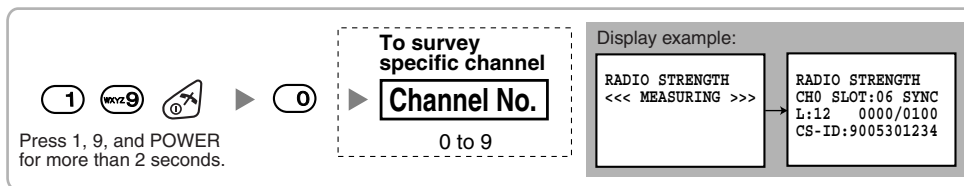

Using the KX-TD7590

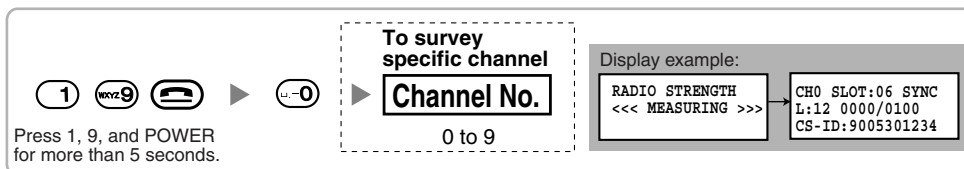

- b. By walking away from the CS with the PS, check the radio signal strength. The radio signal strength weakens as you walk away from the CS.
- c. Map the CS coverage area at radio signal strength levels "3" and "8".
- d. Make sure that adjacent CS coverage areas overlap where the radio signal strength level is "8" by at least 5 m.

2.7 Connection of DECT Portable Stations

- e. Make sure that the radio signal strength level is greater than "3" at any location within the service area demanded by the user.

4. Finish the site survey

Refer to "2.7.6 After Site Survey".

- a. Return all DIP switches of each CS to the OFF position, and stop supplying power.
- b. Turn off the PS.

5. Connect the CS and PS to the Hybrid IP-PBX and test the operation

Refer to "2.7.7 Connecting a Cell Station to the Hybrid IP-PBX".

- a. Connect the CSs to the Hybrid IP-PBX.
- b. Register the PSs to the Hybrid IP-PBX.
- c. Walk around the service area while having a conversation using a registered PS. If noise is frequent or conversations disconnect, relocate the CSs or install an additional CS.

6. Mount the CS on the wall

Refer to "2.7.8 Wall Mounting".

- a. Assuming everything goes as planned, mount the CS on the wall.

2.7.3 Site Planning

Choosing the best site for the CS requires careful planning and testing of essential areas. The best location may not always be convenient for installation. Read the following information before installing the unit.

Understanding Radio Waves


Characteristics of Radio Waves

The transmission of radio waves and the CS coverage area depend on the structure and materials of the building.

Office equipment, such as computers and fax machines, can interfere with radio waves. Such equipment may create noise or interfere with the performance of the PS.

The illustration below shows the special transmitting patterns of radio waves.

1. Radio waves are reflected by objects such as those made of metal.
2. Radio waves are diffracted by objects such as metallic columns.
3. Radio waves penetrate objects like those made of glass.

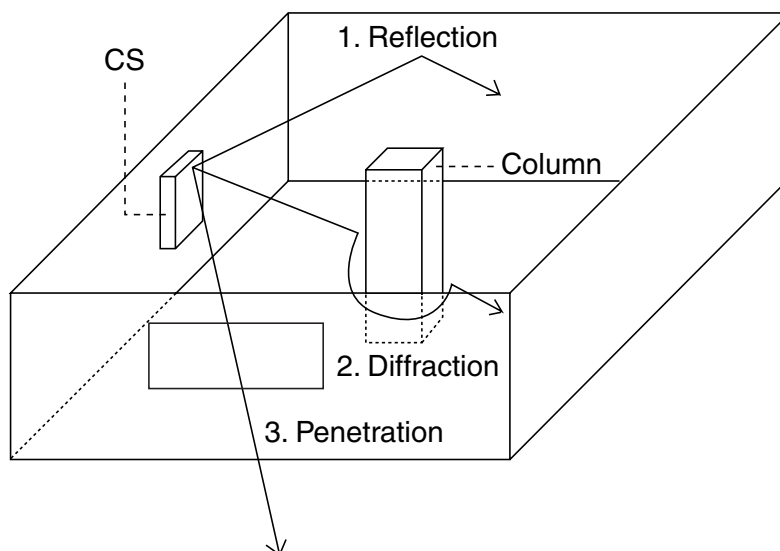

Relationships Between Radio Waves and Building Structure and Materials

- The CS coverage area is affected more by the building materials and their thickness than the number of obstacles.
- Radio waves tend to be reflected or diffracted by conductive objects and rarely penetrate them.
- Radio waves tend to penetrate insulated objects and are rarely reflected by them.
- Radio waves penetrate thin objects more than thick objects.
- The table below shows the transmission tendency of radio waves when they reach objects made from various materials.

2.7 Connection of DECT Portable Stations


Object	Material	Transmission Tendency
Wall	Concrete	The thicker they are, the less radio waves penetrate them.
	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves are reflected.
Window	Glass	Radio waves usually penetrate them.
	Glass with wire nets	Radio waves can penetrate them, but tend to be reflected.
	Glass covered with heat-resistant film	Radio waves are weakened considerably when they penetrate windows.
Floor	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves are reflected.
Partition	Steel	Radio waves are reflected and rarely penetrate them.
	Plywood, Glass	Radio waves usually penetrate them.
Column	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves tend to be reflected or diffracted.
	Metal	Radio waves tend to be reflected or diffracted.
Cabinet	Steel	Radio waves are usually reflected or diffracted, and rarely penetrate them.
	Wood	Radio waves can penetrate them, but they are weakened.

CS Coverage Area

The example below shows the size of the coverage area of 1 CS if it is installed where there is no obstacle.

Note

Radio signal strength levels are measured during the site survey (refer to "2.7.5 Site Survey Using the KX-TCA255/KX-TD7590").

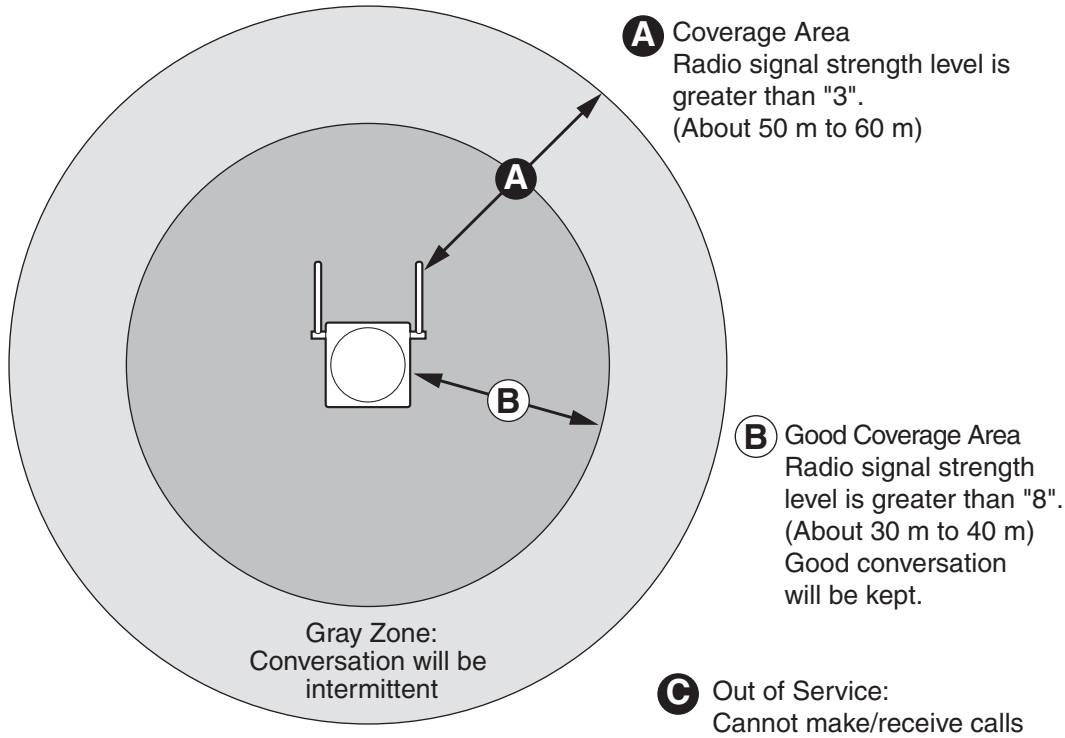

Radio Signal Strength Levels

Level: 00	↑	Out of range
Level: 01 to 02	↑	Receives noise easily or disconnects
Level: 03 to 07	↑	May receive noise
Level: 08 to 10	↓	Good
Level: 11 to 12	↓	Better

Site Survey Preparation

1. Obtain the map and investigate the installation site.
 - a. Check the obstacles (e.g., shelves, columns, and partitions).
 - b. Check the materials of the structures (e.g., metal, concrete, and plywood).
 - c. Check the layout and dimensions of the room, corridor, etc.
 - d. Write down the above information on the map.
2. Examine the service area demanded by the user on the map, referring to the following example.
 - a. Draw the coverage area around a CS. Extend the coverage area to 30 m to 60 m in one direction, depending on the materials of the building structures and obstacles in the installation site. Note that a CS cannot be installed outside a building.
 - b. If 1 CS cannot cover the entire service area, install additional CSs as required. Overlap the coverage areas of adjacent CSs.

2.7 Connection of DECT Portable Stations

Where CS coverage areas overlap, the PS will start call handover to the next CS if the signal from one CS becomes weak. However, if a PS moves away from a CS and there are no CSs available for handover, the PS may go out of range and the call could be lost.


Example: Installing in a Room Separated by Walls

Things to take note of:

- The room is separated by walls.
- The room is surrounded by concrete walls.

CS installation plan:

- The coverage area of each CS will not extend as much it does where there is no obstacle, because the radio signals will be weakened by separating walls. Therefore, you will need 5 CSs to cover the entire room.

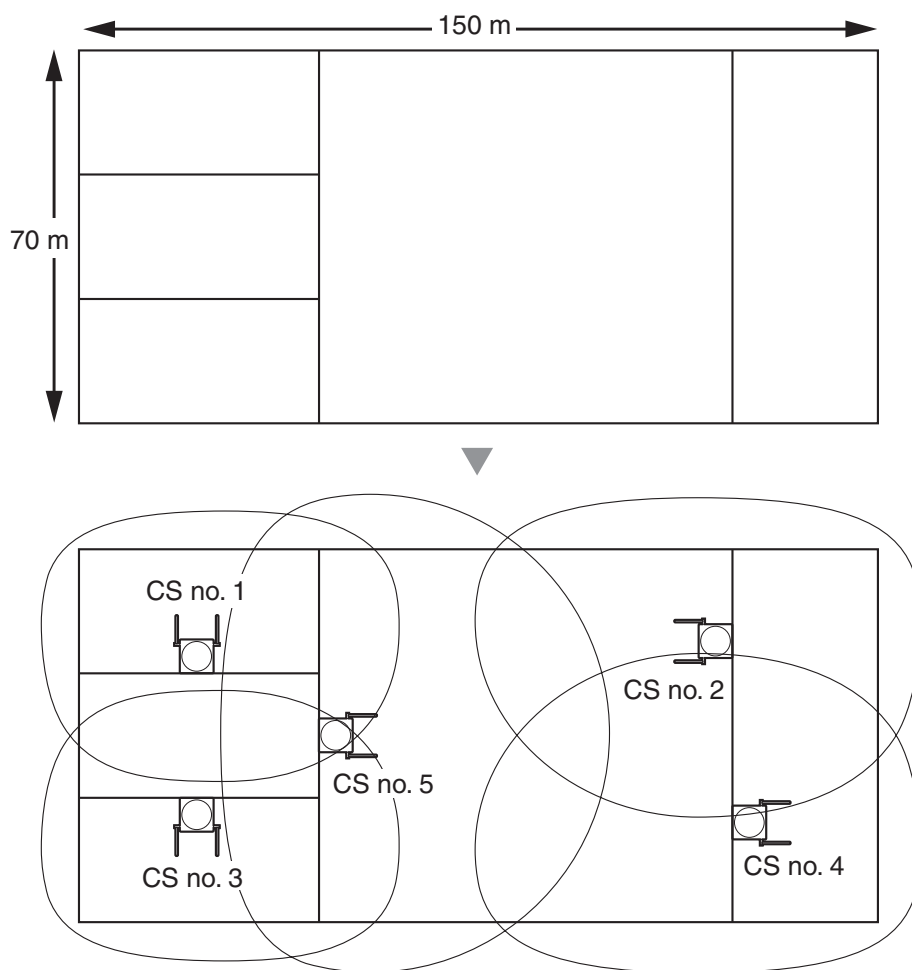

2.7.4 Before Site Survey

Use the KX-TCA255 or KX-TD7590 PS to conduct the site survey.

Note


The display language for the site survey is only in English.

Checking the CS ID Number

Check the CS ID number label attached to the CS.


Assigning the CS ID Number to the PS

Using the KX-TCA255

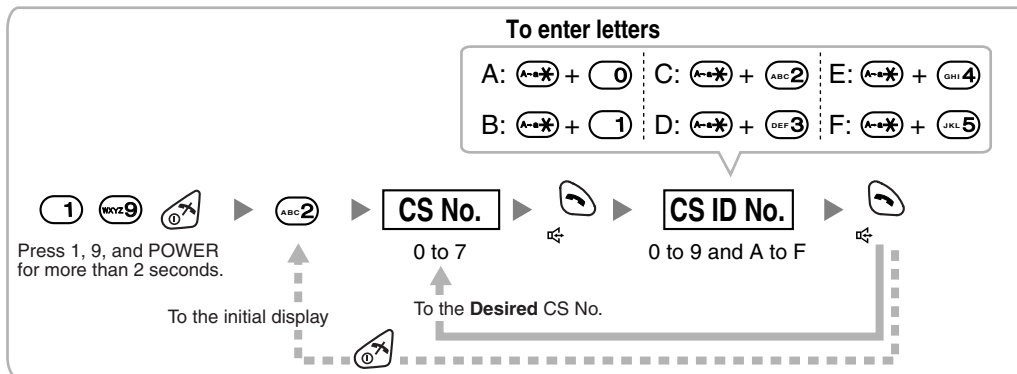


Note

To clear the CS ID number assigned to the PS, follow the procedure below:

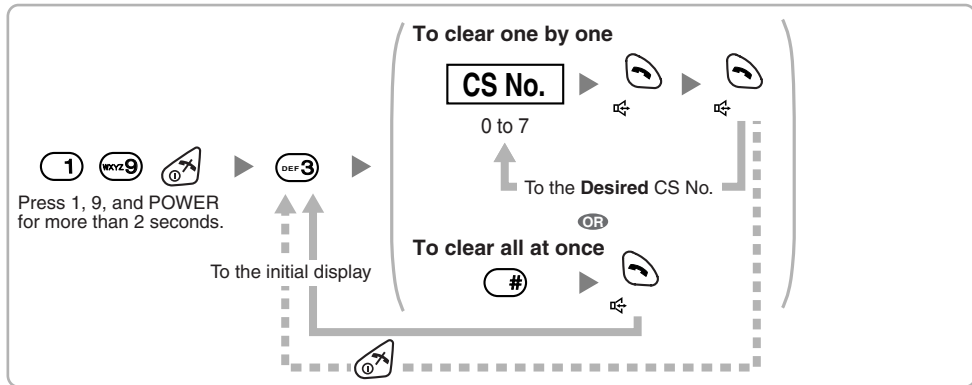


2.7 Connection of DECT Portable Stations

Using the KX-TD7590

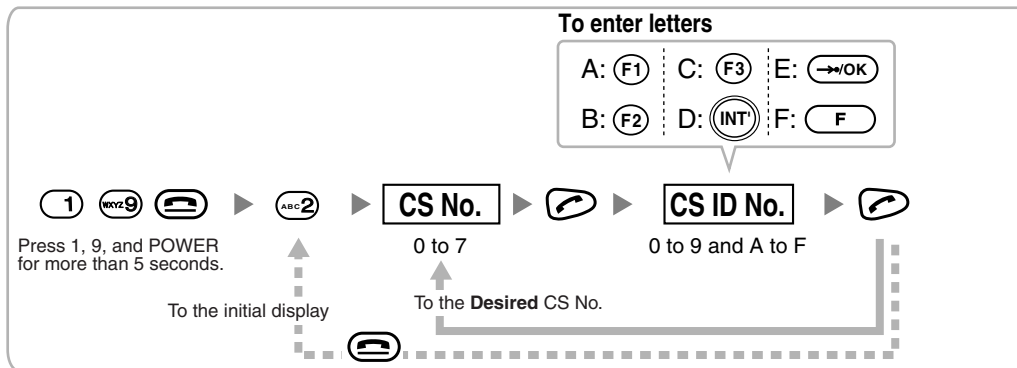


Note

To clear the CS ID number assigned to the PS, follow the procedure below:

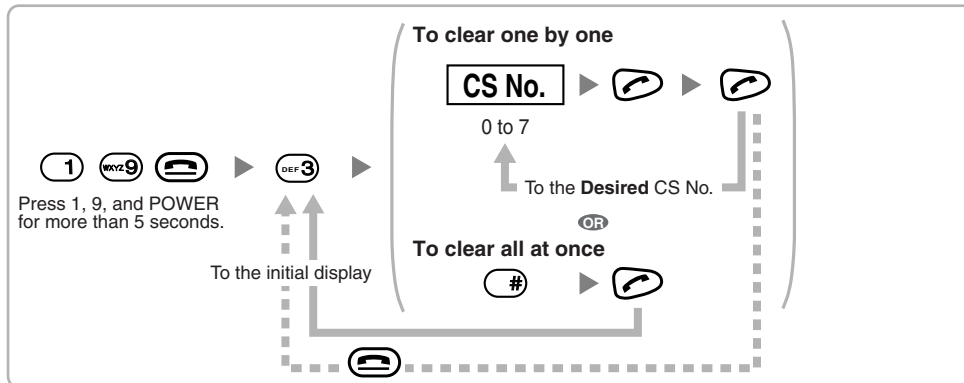

Setting and Installing the CS Temporarily for Site Survey

1. Switch the Radio Signal Test switch from OFF to ON.
2. Set the channel number switches as desired.

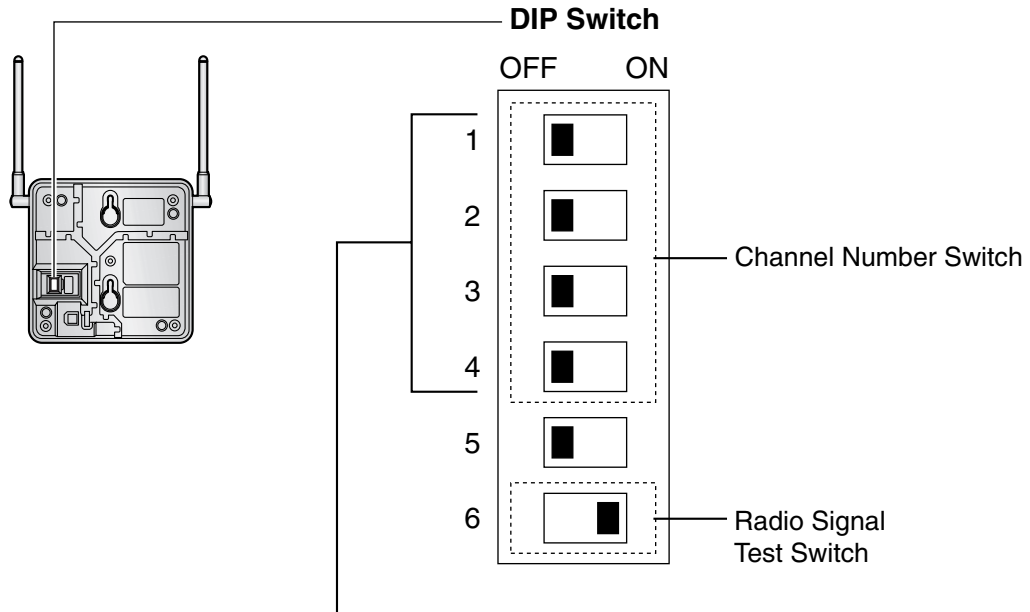

Channel 0	Channel 1	Channel 2	Channel 3	Channel 4	Channel 5	Channel 6	Channel 7	Channel 8	Channel 9
1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>	1 <input type="checkbox"/>
2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>	2 <input type="checkbox"/>
3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>	3 <input type="checkbox"/>
4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>	4 <input type="checkbox"/>

Notes


- To see the radio signal strength of more than 1 CS, a channel number must be set for each CS.
- If more than 1 CS is in Radio Signal Test mode, each CS must have a unique channel number.

2.7 Connection of DECT Portable Stations

3. After setting the DIP switch, connect an AC adaptor or battery box to the CS using a power supply adaptor.

Notes

- The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.
- **For users in the United Kingdom:**
240 V AC must not be used on a building site. Instead of an AC adaptor, connect a battery box to the CS.

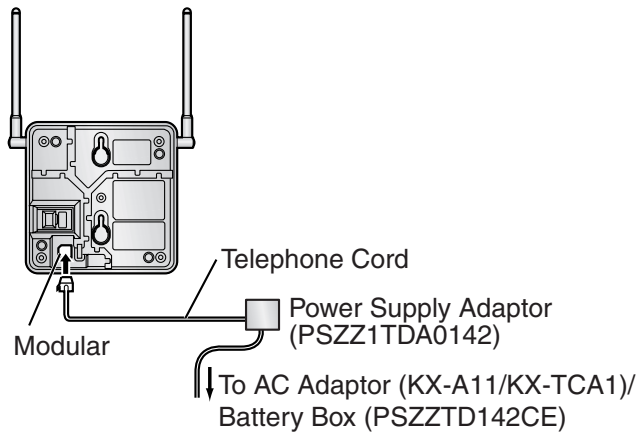

4. Install the CS temporarily for the site survey. Install the CS at least 2 m above the floor, keeping the antennas in the upright position.

2.7.5 Site Survey Using the KX-TCA255/KX-TD7590


The PS has a Radio Signal Test mode that monitors the state of the radio link to the CS for site survey. In the Radio Signal Test mode, the frame loss and signal strength of a synchronous slot, and the signal strength of the other slots can be measured when the PS is monitoring the CS. After installing the CSs temporarily as planned during site planning, set the PS to the Radio Signal Test mode and locate each CS to measure its coverage area. Then, record the results on the map of the installation site.

Testing the Radio Signal Strength


After locating the CS(s) temporarily, execute the Radio Signal Test using the PS. The PS scans whether there is a CS that can link with on channel 0 right after entering the Radio Signal Test mode. The channel to be scanned can be changed by pressing the appropriate keys 0 through 9.

1. Enter the Radio Signal Test mode.

Using the KX-TCA255

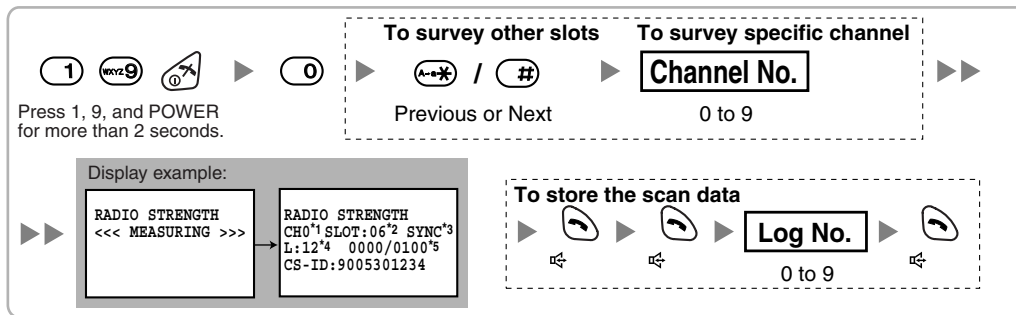

Using the KX-TD7590

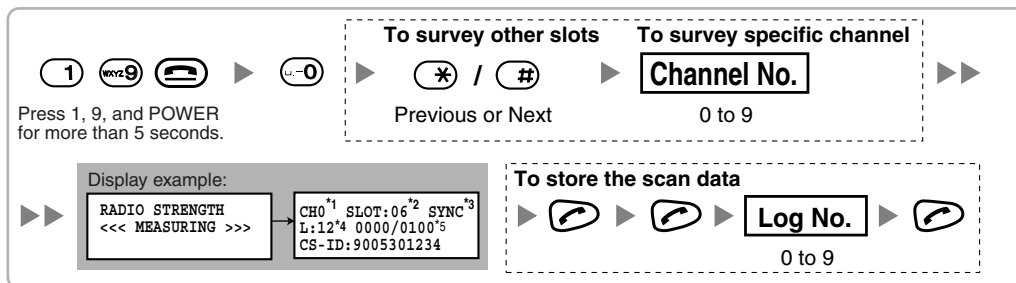

Notes

- *1: Channel number
- *2: Slot number
- *3: When a slot is synchronised, "SYNC" is displayed.
- *4: Radio signal strength level
- *5: Frame error (0000 to 9999)/Frame counter (0000 to 9999). Frame error indicates the number of errors out of 10 000 radio signal receptions. An increased number of frame errors indicates greater radio signal interference and more frequent noise during conversation. The ideal number of frame error is "0000".


CAUTION

Storing the scan data will clear all directory data.

2. Measure the radio signal strength by moving to and away from the CS.

2.7 Connection of DECT Portable Stations


- a. Move to the CS until the point the radio signal strength level becomes "12".
- b. Move away from the CS and identify the CS coverage area within which the radio signal strength level is greater than "8". Draw the area on the map.
- c. Move away from the CS and identify the CS coverage area within which the radio signal strength level is greater than "3". Draw the area on the map.

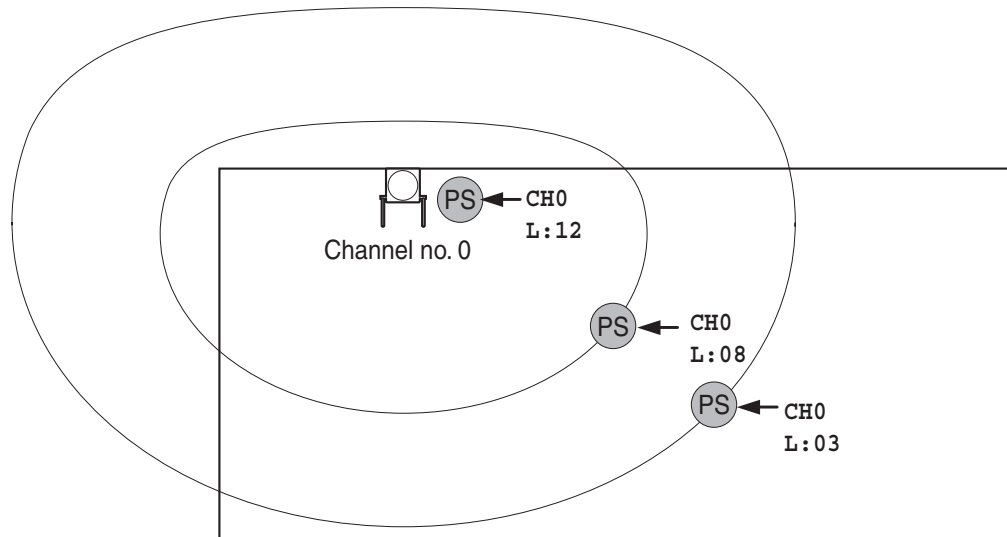


Radio Signal Strength Levels

Level: 00	↑	Out of range
Level: 01 to 02	↑	Receives noise easily or disconnects
Level: 03 to 07	↕	May receive noise
Level: 08 to 10	↓	Good
Level: 11 to 12	↓	Better

3. Repeat the steps 1 and 2 for other CSs, and relocate the CSs when necessary.
 - a. Overlap adjacent CS coverage areas where the radio signal strength level is "8" by 5 m to 10 m.

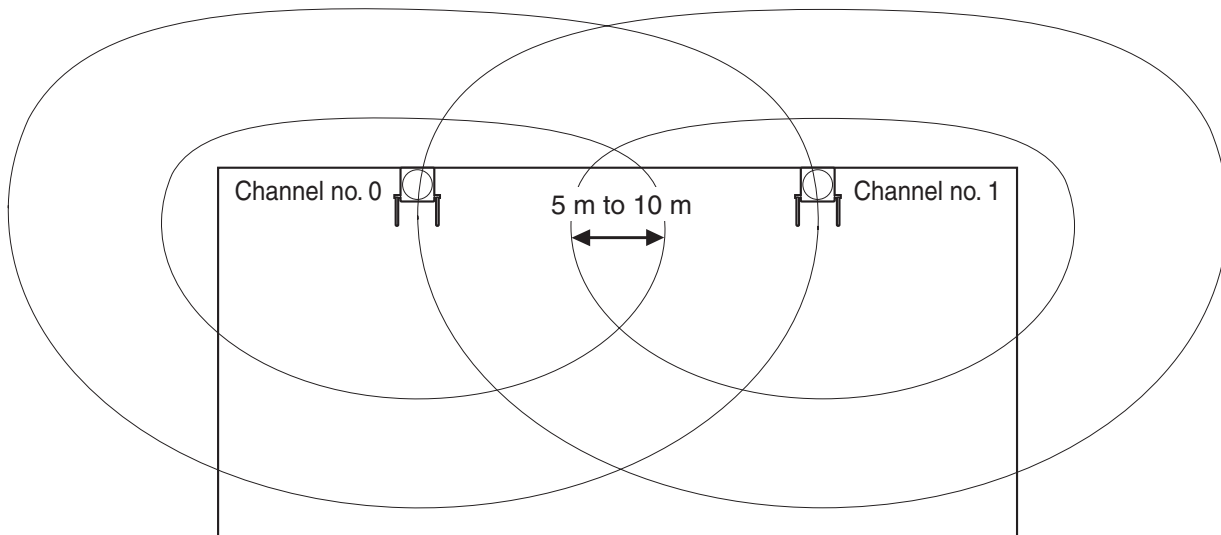

- b. Overlap the CS coverage areas of at least 2 CSs at any location in the installation site.

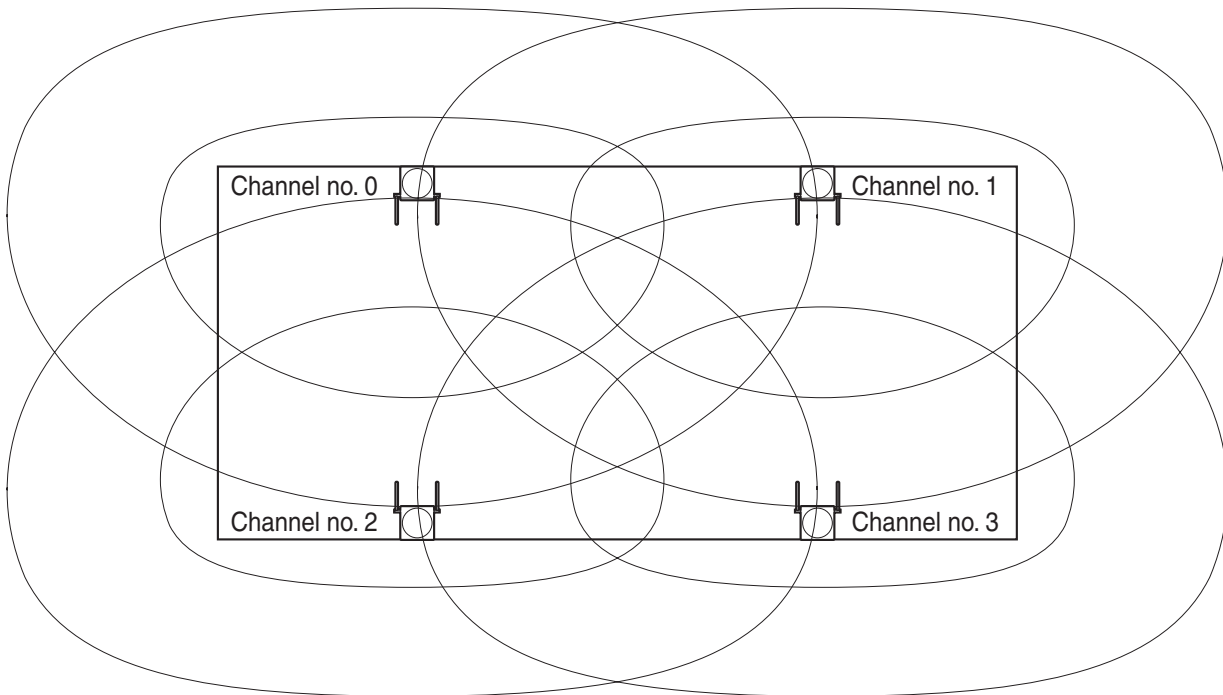

- c. Make sure that the radio signal strength level is greater than "3" at any location in the service area demanded by the user.

Notes

- If a channel is set, the results of measurement for the 24 slots on the channel are saved each time. If the same channel is set, the new results override the previous ones. Therefore, a measurement of 10 channels × 24 slots in total can be made.
- If correct results cannot be obtained (e.g., there are many error counters), change the location of the CS and repeat the site survey to select the best location.

Referring to the Stored Scan Data

Using the KX-TCA255

Press 1, 9, and POWER for more than 2 seconds.

0 to 9

To go to other slots	To go to specific channel
◀▶ * / #	▶ Channel No.
Previous or Next	0 to 9

Using the KX-TD7590

Press 1, 9, and POWER for more than 5 seconds.

0 to 9

To go to other slots	To go to specific channel
▶▶ * / #	▶ Channel No.
Previous or Next	0 to 9

Clearing the Stored Scan Data

When "CLEAR SCAN DATA" is displayed after turning on the PS, you are required to clear the scan data.

Using the KX-TCA255

Press 1, 9, and POWER for more than 2 seconds.


Using the KX-TD7590

Press 1, 9, and POWER for more than 5 seconds.


2.7.6 After Site Survey

After obtaining the proper measurement results, exit the Radio Signal Test mode before connecting the CS to the Hybrid IP-PBX.

1. Keep pressing POWER button on the PS until the PS is turned OFF.
2. Disconnect the AC adaptor or battery box from the CS and stop supplying electricity.

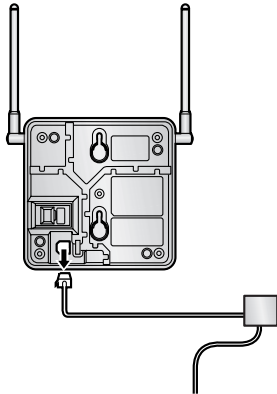


3. Switch all DIP switches on the CS from ON to OFF.

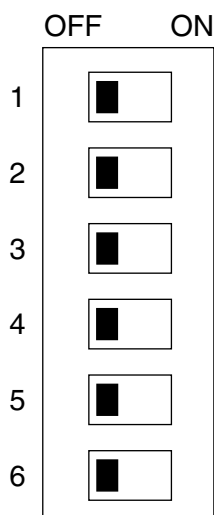

2.7.7 Connecting a Cell Station to the Hybrid IP-PBX

Refer to the following example to connect a CS to the Hybrid IP-PBX.

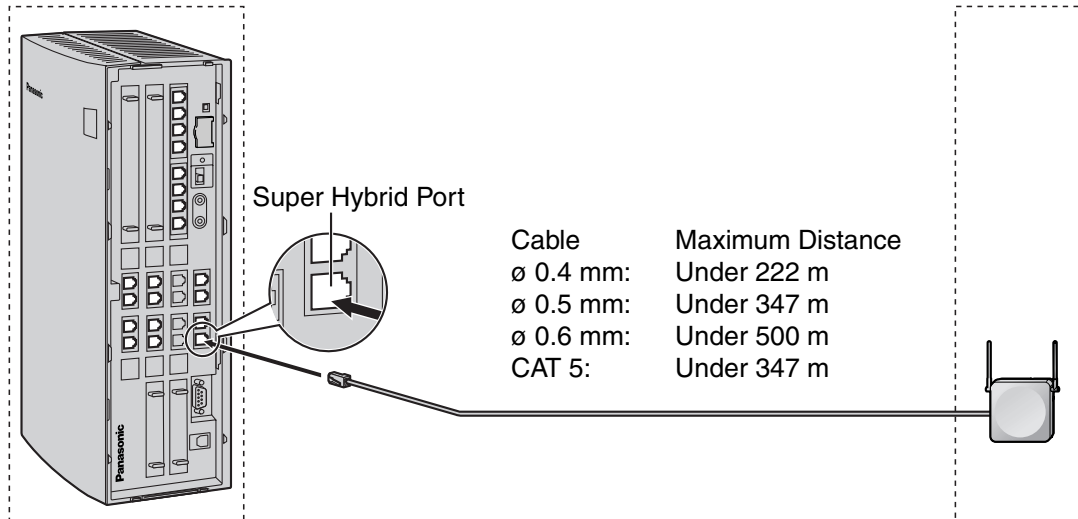

A Super Hybrid Port,
or DLC4/DLC8 card (RJ45)

Signal Name	Pin No.
	1
	2
D2	3
	4
	5
D1	6
	7
	8

CS (RJ11)

Pin No.	Signal Name
1	D1
2	
3	
4	D2

OR

A Super Hybrid Port,
or DLC4/DLC8 card (RJ11)

Signal Name	Pin No.
D1	1
	2
	3
D2	4

CS (RJ11)

Pin No.	Signal Name
1	D1
2	
3	
4	D2

Accessory and User-supplied Items for the CS

Accessory (included): Screws × 2, Washers × 2


User-supplied (not included): RJ45 connector or RJ11 connector

Note

For details about DLC4 card or DLC8 card, refer to "2.4.1 DLC4 Card" or "2.4.3 DLC8 Card".


Connecting the CS

1. Connect the cable from a Super Hybrid Port or the DLC4/DLC8 card to the CS.

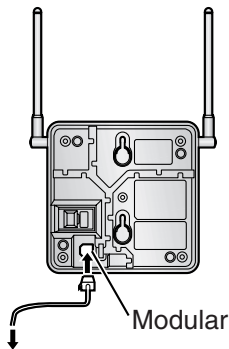

To a Super Hybrid Port,
or DLC4/DLC8 card

2. Pass the cable through the groove of the CS (in any direction depending on your preference).

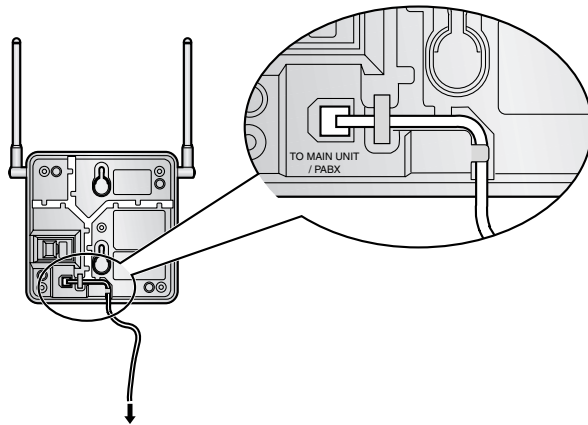

To a Super Hybrid Port,
or DLC4/DLC8 card

Registering the PS


The PS must be registered to the Hybrid IP-PBX before it can be used. Programming of both the PS and Hybrid IP-PBX is required. A PT with multiline display (e.g., KX-T7636 6-line display) is required for the Hybrid IP-PBX system programming.

Note

For details about system programming using a PT, refer to "2.3.2 PT Programming" and "3.3 PT Programming" in the Feature Guide.

Entering the Hybrid IP-PBX System Programming Mode Using a PT

Administrator Level

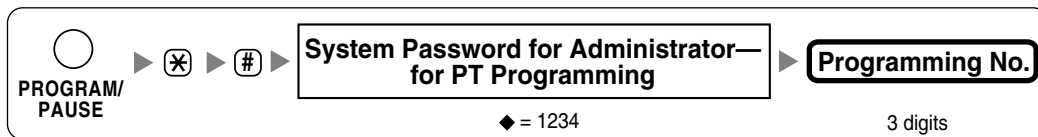


Note


◆ means default value.

PS Registration

One PS can be registered to a maximum of 4 different Hybrid IP-PBXs.

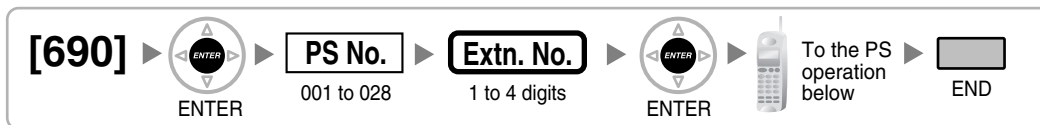


Using the KX-TCA155/KX-TCA255

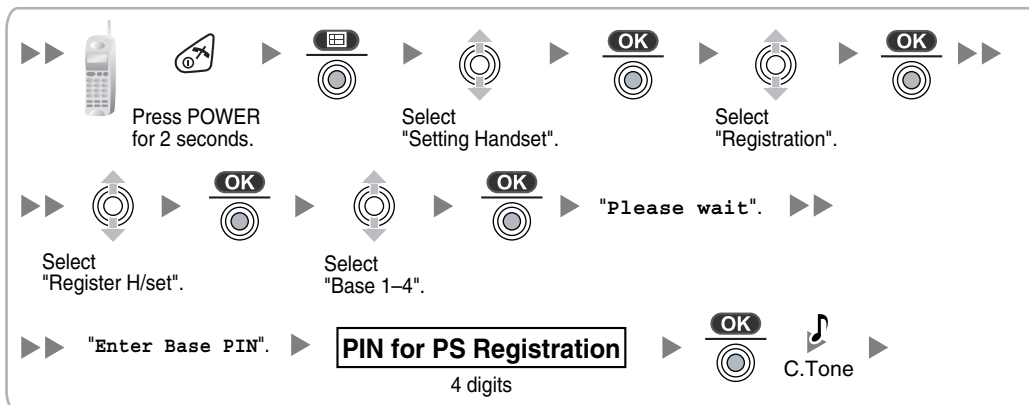


Using the KX-TD7590

System lock can be set after PS registration. When system lock is enabled, the system lock password will be required for system setting.

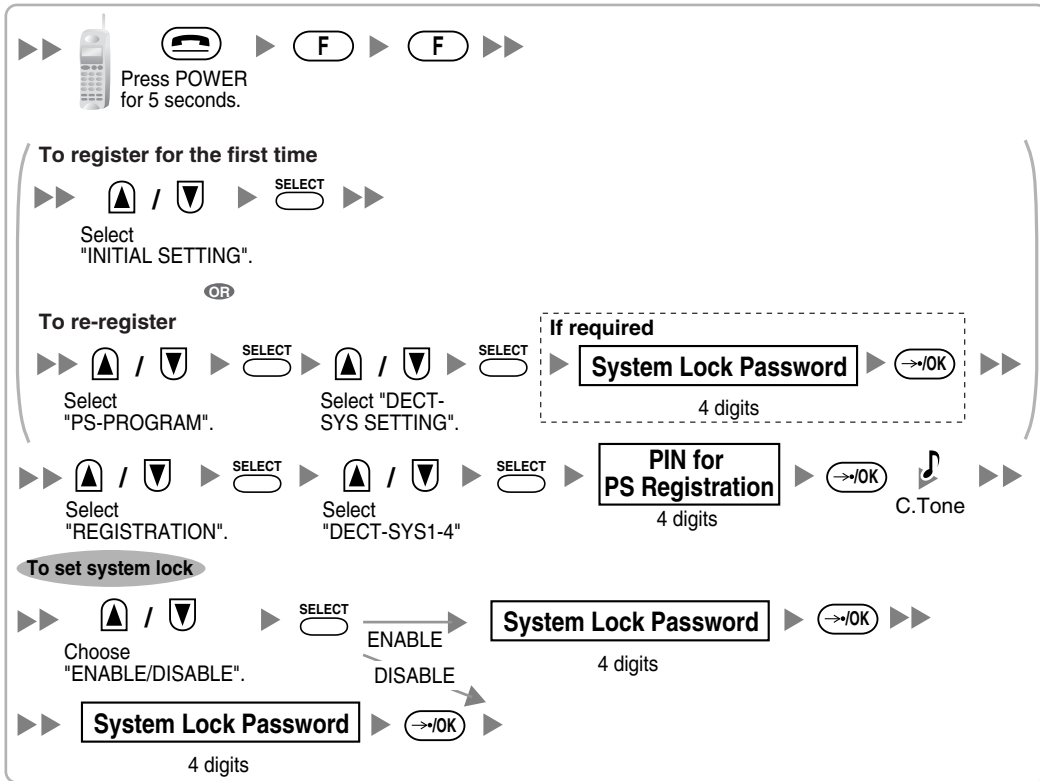

Using the KX-TD7580

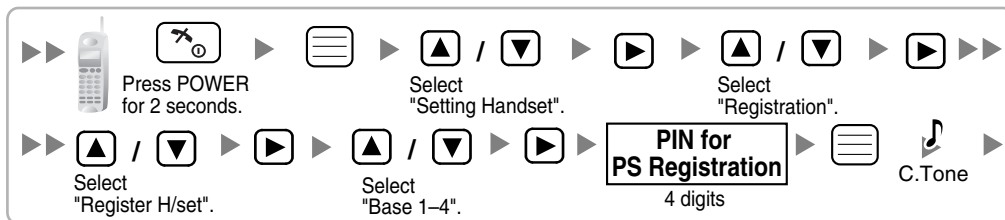


Setting the Personal Identification Number (PIN) for PS Registration

To prevent registering the PS to a wrong Hybrid IP-PBX, a PIN for PS registration can be set to the Hybrid IP-PBX. Before registering the PS to the Hybrid IP-PBX, register the PIN set to the Hybrid IP-PBX into the PS. By doing so, the PS will only be registered to the Hybrid IP-PBX with the matching PIN.

Notes


- By default, the PIN for PS registration is "1234" for both the Hybrid IP-PBX and PS. Therefore, the PS can be registered to the Hybrid IP-PBX without setting the PIN.
- The PIN for PS registration will only be used when registering the PS to the Hybrid IP-PBX. Therefore, even when there is more than 1 Hybrid IP-PBX with the same PIN near the PS, the PS will not be linked to a different Hybrid IP-PBX during normal operation after registration.

Setting the PIN for Hybrid IP-PBX

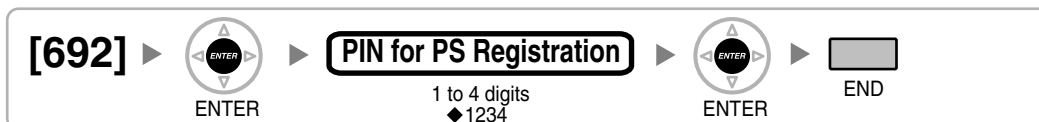


Changing the Display Language of the PS


Using the KX-TCA155/KX-TCA255

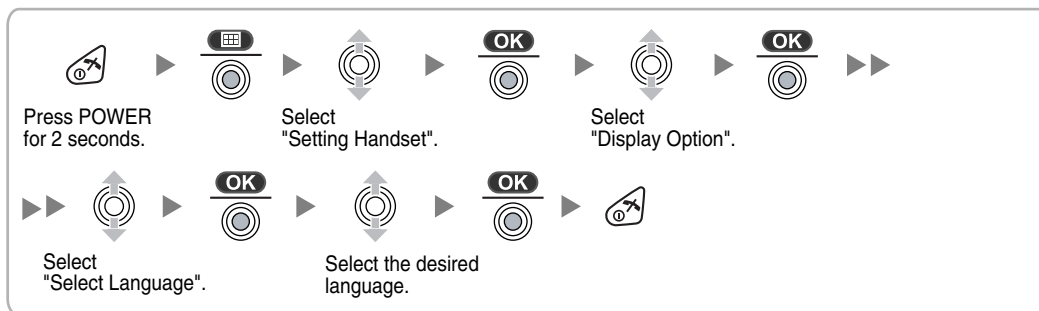

Using the KX-TD7590

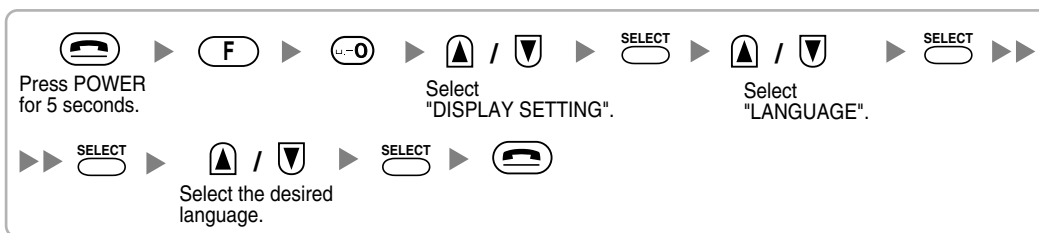


Using the KX-TD7580

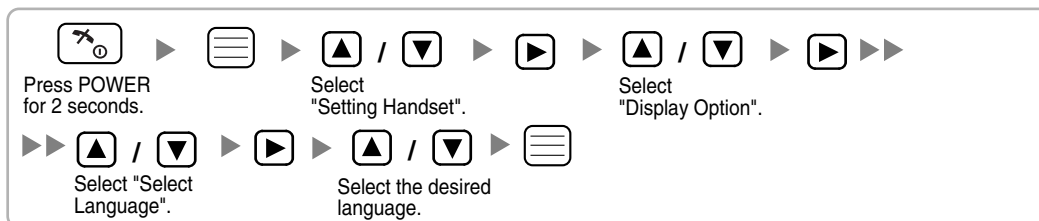


PS Termination

Confirm the following before cancelling the PS registration:


- PS is turned on.
- PS is within the range.

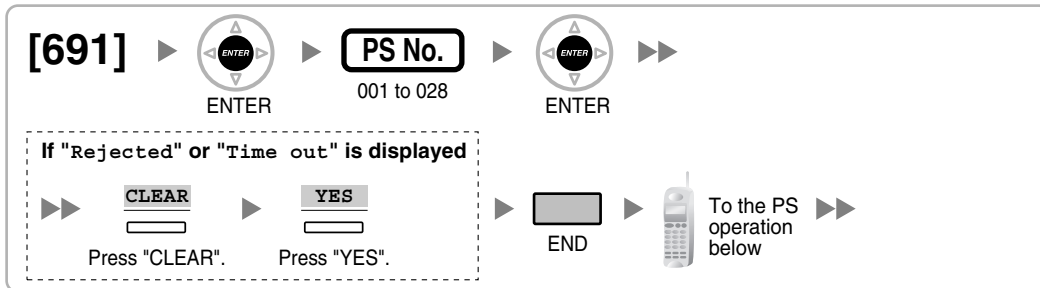


If the registration information is still stored in the PS Using the KX-TCA155/KX-TCA255

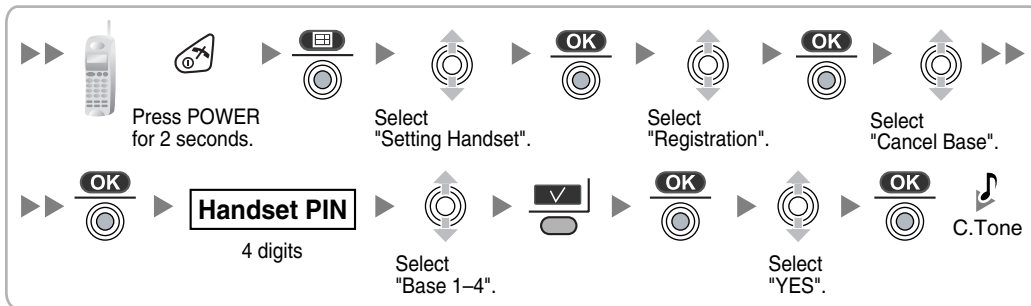

Using the KX-TD7590

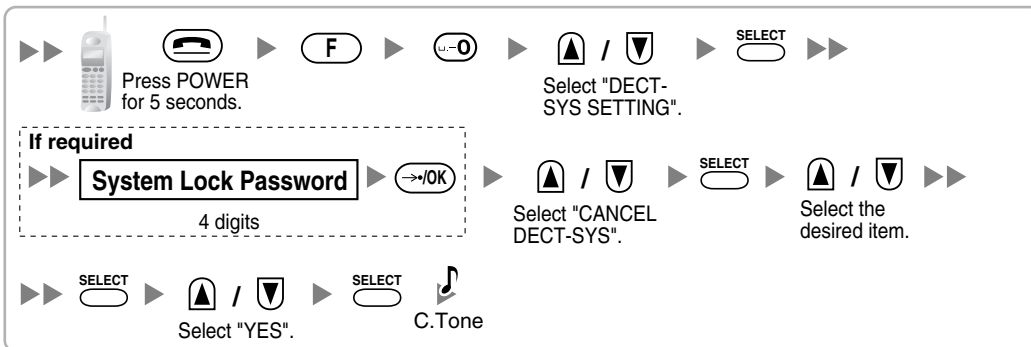

Using the KX-TD7580

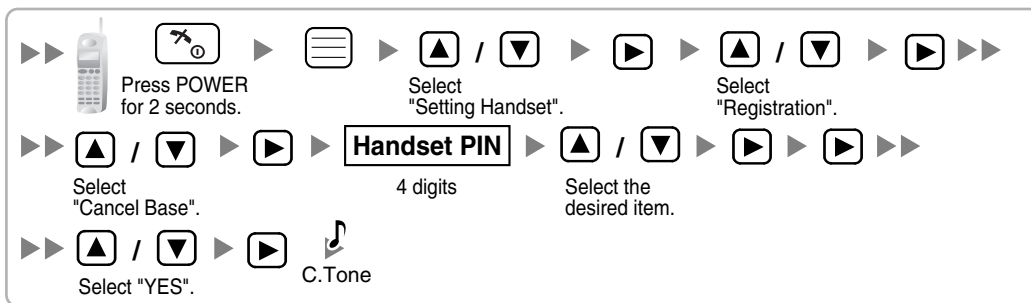

Testing the Operation


Walk around the service area while having a conversation using a registered PS. If noise is frequent or conversations disconnect, relocate the CSs or install an additional CS.

2.7.8 Wall Mounting

1. Place the reference for wall mounting (on the following page) on the wall to mark the 2 screw positions.
2. Install the 2 screws and washers (included) into the wall.


Notes

- Make sure that the screw heads are at the same distance from the wall.
 - Install the screws perpendicular to the wall.
3. Hook the CS on the screw heads.

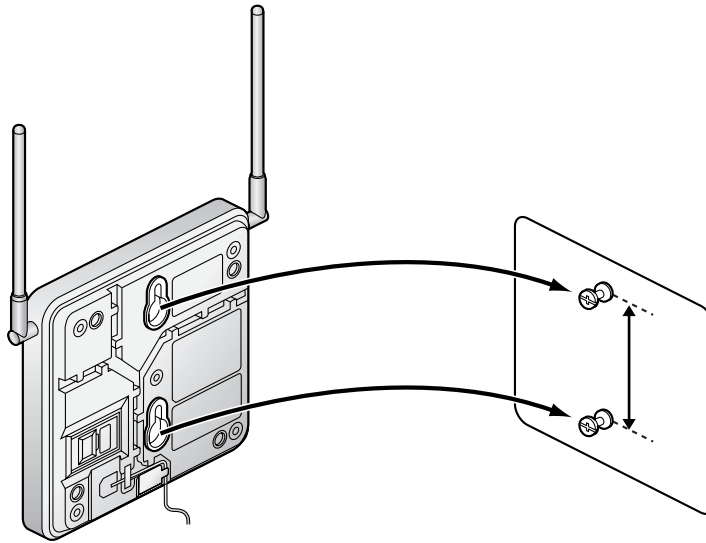

Reference for Wall Mounting

Please copy this page and use as a reference for wall mounting.

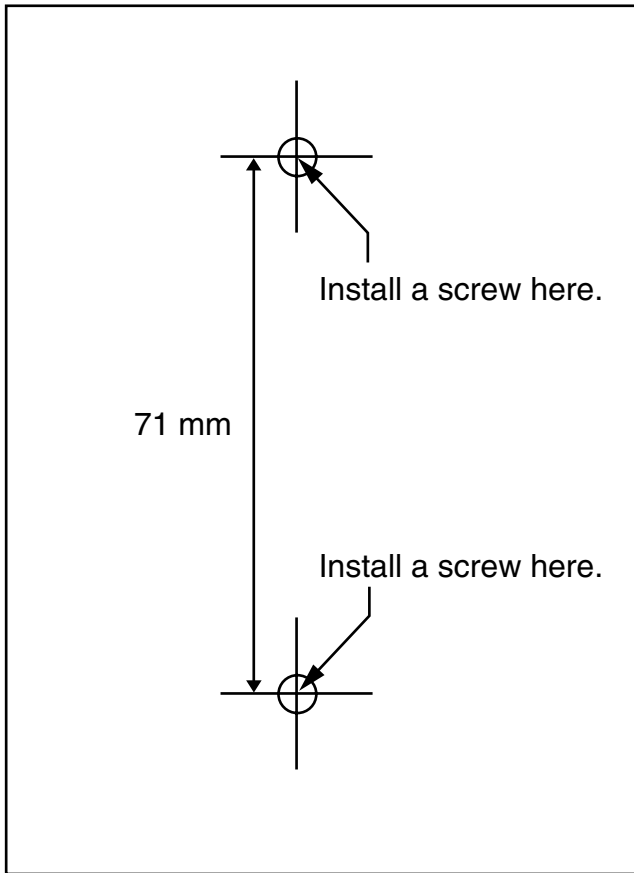

Note

Make sure to set the print size to correspond with the size of this page. If the dimension of the paper output still deviates slightly from the measurement indicated here, use the measurement indicated here.

2.8 Connection of 2.4 GHz Portable Stations

2.8.1 Overview

The following equipment is required to connect the wireless system:

CS: Cell Station (KX-TDA0141)

This unit determines the area covered by the wireless system. Up to 2 calls can be made at the same time through each CS.

PS: 2.4 GHz Portable Station (KX-TD7680/KX-TD7690)

The KX-TDA30 can support up to 28 PSs. For more details about the PS, refer to the PS Operating Instructions.

CAUTION

- The CS should be kept free of dust, moisture, high temperature (more than 40 °C), low temperature (less than 0 °C), vibration, and should not be exposed to direct sunlight.
- The CS should not be placed outdoors (use indoors).
- The CS should not be placed near high voltage equipment.
- The CS should not be placed on a metal object.
- Systems using 2.4 GHz ISM (Industrial, Scientific and Medical) band may interfere with the KX-TDA wireless system. Examples of such systems are cordless telephones, wireless LAN, Home RF, microwave ovens and other ISM devices. These systems may cause minor noise.
- Keeping some distance between the equipment listed below may prevent interference. (The distance may vary depending on the environment.)

Equipment	Distance
CS and office equipment such as a computer, telex, fax machine, etc.	More than 2 m
CS and PS	More than 1 m
Each PS	More than 0.5 m
Hybrid IP-PBX and CS	More than 2 m
CS and CS	More than 15 m

Please take into consideration the distance between the CSs when site planning. Please consult a certified dealer for details.

However, the required distance between CSs may vary depending on the environment of the installation site and conditions in which the wireless system is used. Conduct the site survey to determine the appropriate distance.

2.8.2 Procedure Overview

When connecting the wireless system, use extreme care to conduct a site survey. Inadvertent site survey can result in poor service area, frequent noise, and disconnection of calls.

1. Investigate the installation site

Refer to "2.8.3 Site Planning".

- Obtain the map of the CS installation site.
- Consider the service area demanded by the user on the map.
- Plan the locations of each CS, taking account of distance, building materials and etc.

2. Prepare the CS for site survey

Refer to "2.8.4 Before Site Survey".

- Assign a CS number to each CS by setting the DIP switches on the back of the CS.
- Supply electricity to each CS using an AC adaptor or a battery box.
- Install each CS temporarily as planned.

Notes

- Install at least 2 m above the floor.
- Keep the antennas in the upright position.

3. Conduct the site survey

Refer to "2.8.5 Site Survey".

- Test the radio signal strength using the PS.
Confirm that the radio signal strength level is "12" near the CS.

Using the KX-TD7680

Press 1, 9, and POWER for more than 2 seconds.

CS No. 1 to 9

Display example: << SEARCHING >> CS NO.1 LEVEL:12 SAVE:0123456789

Using the KX-TD7690

Press 1, 9, and POWER for more than 2 seconds.

CS No. 1 to 9

Display example: << SEARCHING >> CS NO.1 LEVEL:12 SAVE:0123456789

- By walking away from the CS with the PS, check the radio signal strength. The radio signal strength weakens as you walk away from the CS.
- Map the CS coverage area at radio signal strength levels "3" and "8".
- Make sure that adjacent CS coverage areas overlap where the radio signal strength level is "8" by at least 5 m.
- Make sure that the radio signal strength level is greater than "3" at any location within the service area demanded by the user.

4. Finish the site survey

Refer to "2.8.6 After Site Survey".

- a. Return all DIP switches of each CS to the OFF position, and stop supplying power.
- b. Turn off the PS.

5. Connect the CS and PS to the Hybrid IP-PBX and test the operation

Refer to "2.8.7 Connecting a Cell Station to the Hybrid IP-PBX".

- a. Connect the CSs to the Hybrid IP-PBX.
- b. Register the PSs to the Hybrid IP-PBX.
- c. Walk around the service area while having a conversation using a registered PS. If noise is frequent or conversations disconnect, relocate the CSs or install an additional CS.

6. Mount the CS on the wall

Refer to "2.8.8 Wall Mounting".

- a. Assuming everything goes as planned, mount the CS on the wall.

2.8.3 Site Planning

Choosing the best site for the CS requires careful planning and testing of essential areas. The best location may not always be convenient for installation. Read the following information before installing the unit.

Understanding Radio Waves


Characteristics of Radio Waves

The transmission of radio waves and the CS coverage area depend on the structure and materials of the building.

Office equipment, such as computers and fax machines, can interfere with radio waves. Such equipment may create noise or interfere with the performance of the PS.

The illustration below shows the special transmitting patterns of radio waves.

1. Radio waves are reflected by objects such as those made of metal.
2. Radio waves are diffracted by objects such as metallic columns.
3. Radio waves penetrate objects like those made of glass.

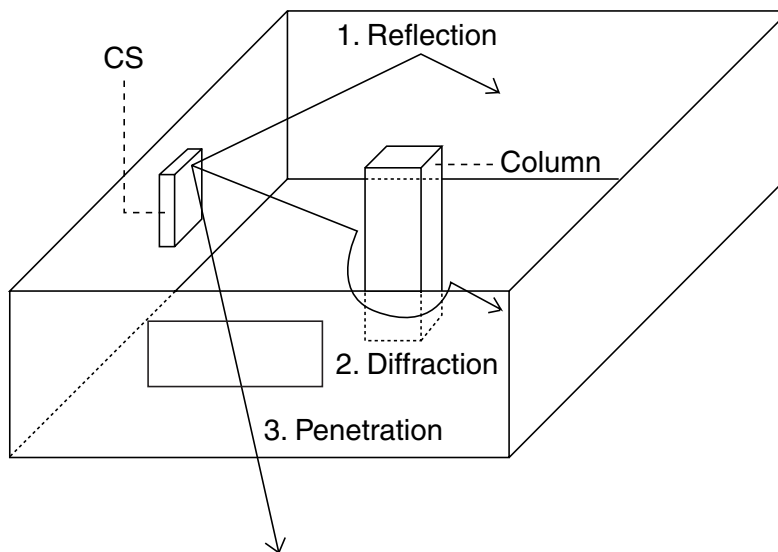

Relationships Between Radio Waves and Building Structure and Materials

- The CS coverage area is affected more by the building materials and their thickness than the number of obstacles.
- Radio waves tend to be reflected or diffracted by conductive objects and rarely penetrate them.
- Radio waves tend to penetrate insulated objects and are rarely reflected by them.
- Radio waves penetrate thin objects more than thick objects.
- The table below shows the transmission tendency of radio waves when they reach objects made from various materials.


Object	Material	Transmission Tendency
Wall	Concrete	The thicker they are, the less radio waves penetrate them.
	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves are reflected.
Window	Glass	Radio waves usually penetrate them.
	Glass with wire nets	Radio waves can penetrate them, but tend to be reflected.
	Glass covered with heat-resistant film	Radio waves are weakened considerably when they penetrate windows.
Floor	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves are reflected.
Partition	Steel	Radio waves are reflected and rarely penetrate them.
	Plywood, Glass	Radio waves usually penetrate them.
Column	Ferroconcrete	Radio waves can penetrate them, but the more iron there is, the more radio waves tend to be reflected or diffracted.
	Metal	Radio waves tend to be reflected or diffracted.
Cabinet	Steel	Radio waves are usually reflected or diffracted, and rarely penetrate them.
	Wood	Radio waves can penetrate them, but they are weakened.

CS Coverage Area

The example below shows the size of the coverage area of 1 CS if it is installed where there is no obstacle.

Note

Radio signal strength levels are measured during the site survey (refer to "2.8.5 Site Survey").

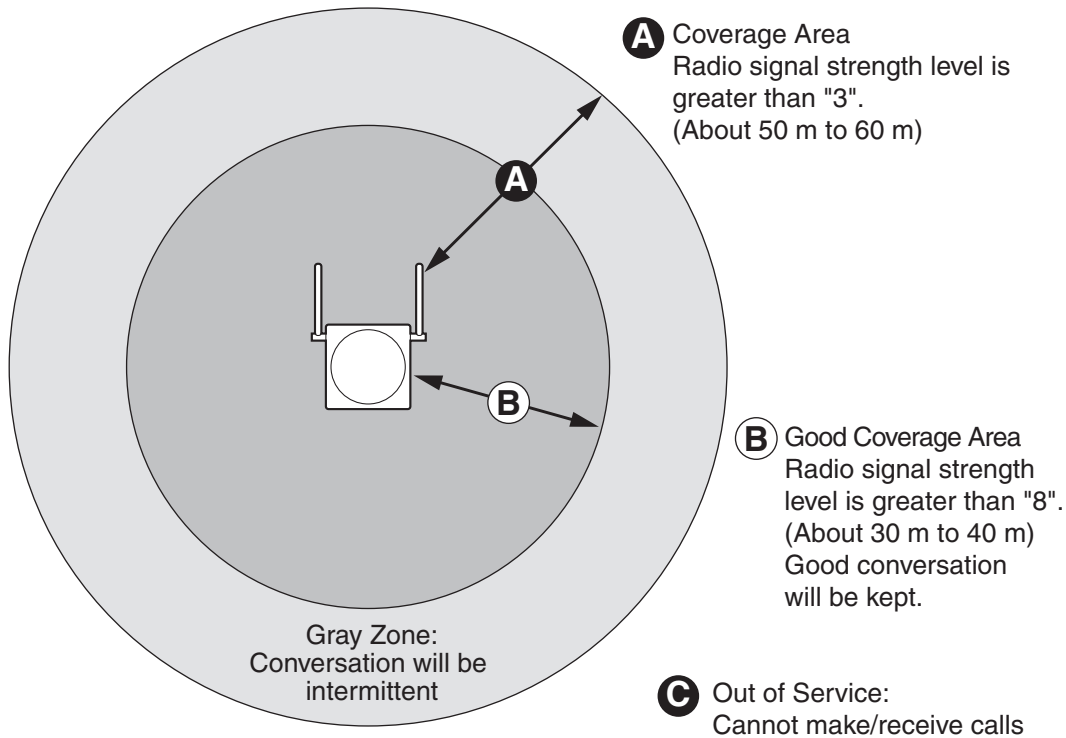

Radio Signal Strength Levels

Level: 00	↑	Out of range
Level: 01 to 02		Receives noise easily or disconnects
Level: 03 to 07		May receive noise
Level: 08 to 10	↓	Good
Level: 11 to 12		Better

Site Survey Preparation

1. Obtain the map and investigate the installation site.
 - a. Check the obstacles (e.g., shelves, columns, and partitions).
 - b. Check the materials of the structures (e.g., metal, concrete, and plywood).
 - c. Check the layout and dimensions of the room, corridor, etc.
 - d. Write down the above information on the map.
2. Examine the service area demanded by the user on the map, referring to the following example.
 - a. Draw the coverage area around a CS. Extend the coverage area to 30 m to 60 m in one direction, depending on the materials of the building structures and obstacles in the installation site. Note that a CS cannot be installed outside a building.
 - b. If one CS cannot cover the entire service area, install additional CSs as required. Overlap the coverage areas of adjacent CSs.
Where CS coverage areas overlap, the PS will start call handover to the next CS if the signal from

one CS becomes weak. However, if a PS moves away from a CS and there are no CSs available for handover, the PS may go out of range and the call could be lost. If the signal from the CS fades, due to the structure of the building, there may be some handover delay. The user will hear a range warning before handover in this case. This also applies in the case of interference from 2.4 GHz apparatus.


Example: Installing in a Room Separated by Walls

Things to take note of:

- The room is separated by walls.
- The room is surrounded by concrete walls.

CS installation plan:


- The coverage area of each CS will not extend as much it does where there is no obstacle, because the radio signals will be weakened by separating walls. Therefore, you will need 5 CSs to cover the entire room.

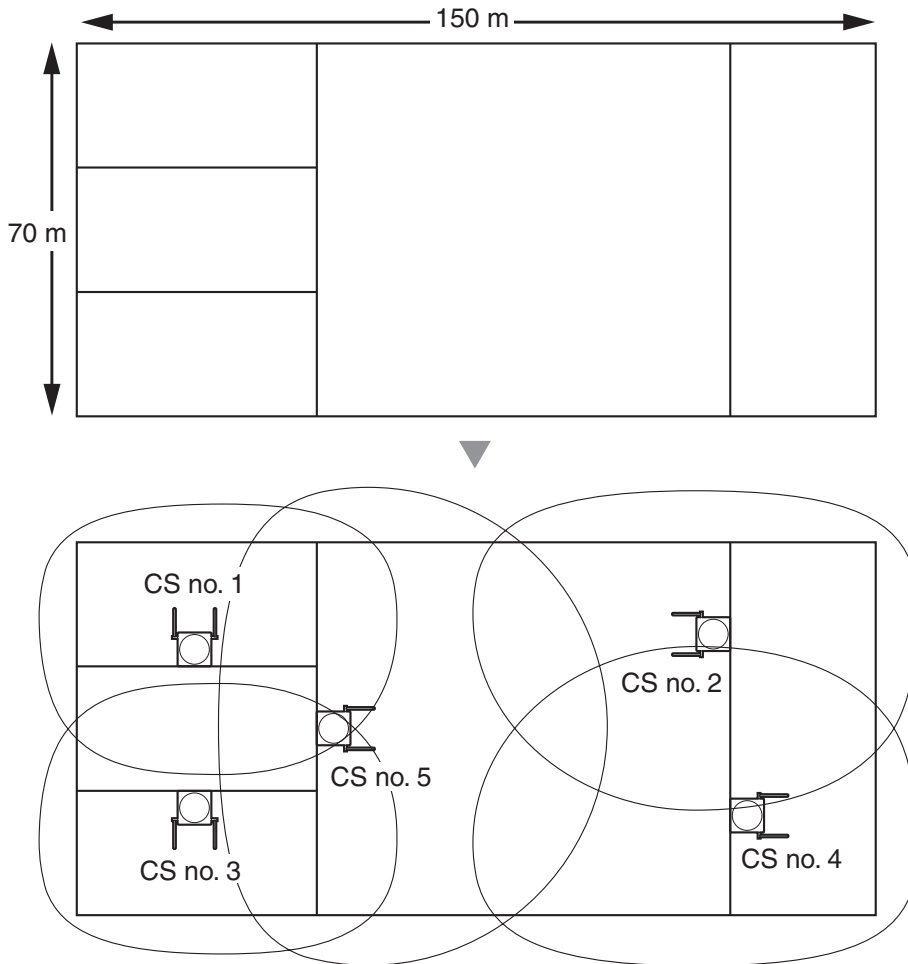

2.8.4 Before Site Survey

Setting and Installing the CS Temporarily for Site Survey

1. Switch the Radio Signal Test switch from OFF to ON.
2. Set the CS number switches as desired.

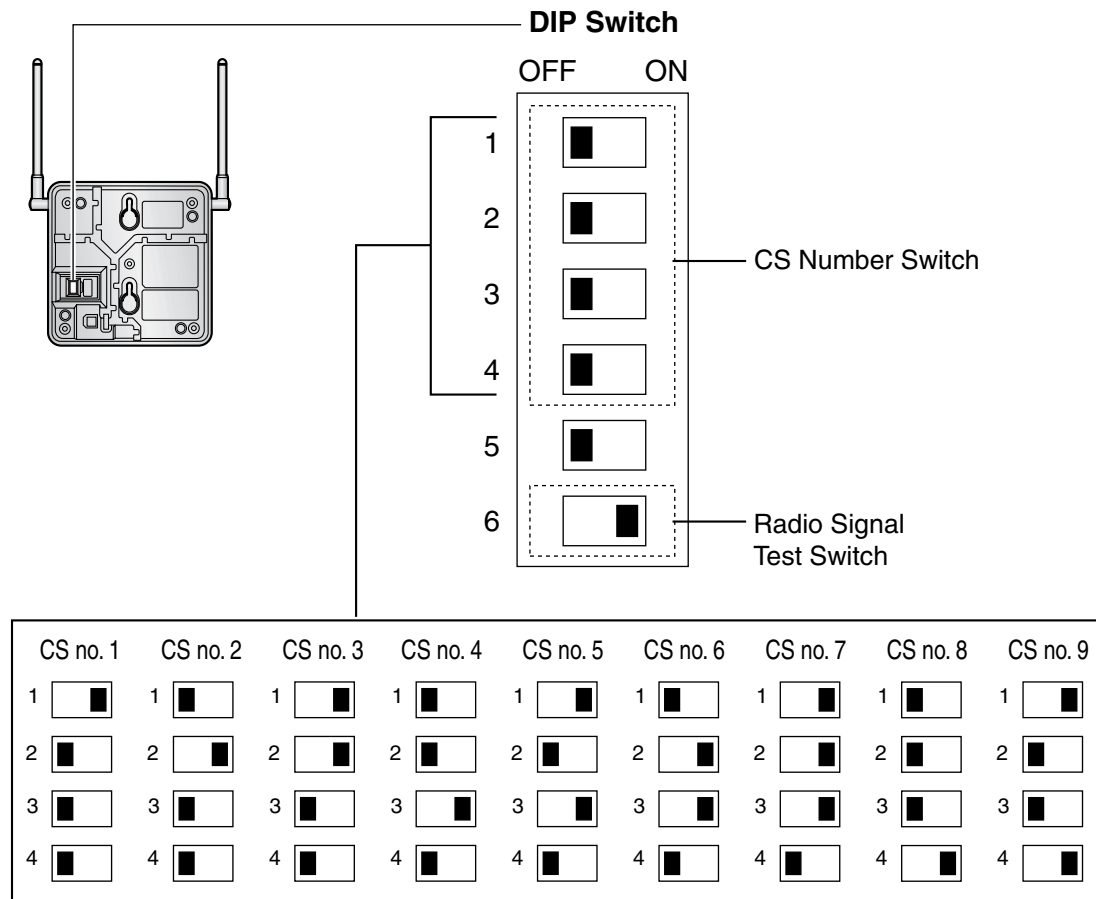


Notes

- To see the radio signal strength of more than 1 CS, a CS number must be set for each CS.
- If more than 1 CS is in Radio Signal Test mode, each CS must have a unique CS number.

3. After setting the DIP switch, connect an AC adaptor or battery box to the CS using a power supply adaptor.

Note

The AC adaptor should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC adaptor to a ceiling-mounted AC outlet, as the weight of the adaptor may cause it to become disconnected.

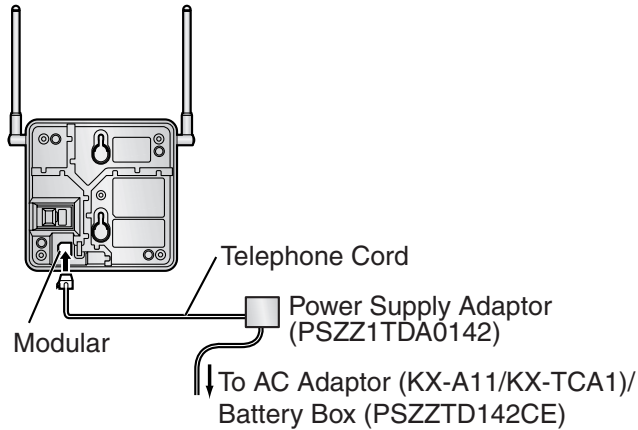

4. Install the CS temporarily for the site survey. Install the CS at least 2 m above the floor, keeping the antennas in the upright position.

2.8.5 Site Survey

The PS has a Radio Signal Test mode that monitors the state of the radio link to the CS. After installing the CSs temporarily, set the PS to the Radio Signal Test mode and measure each CS coverage area. Then, record the results on the map of the installation site.


Testing the Radio Signal Strength

Note


The display language for the site survey is only in English.

1. Enter the Radio Signal Test mode.

Using the KX-TD7680

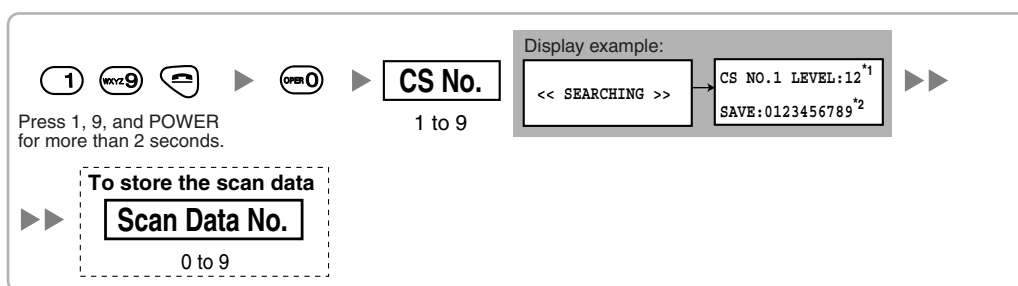


Using the KX-TD7690

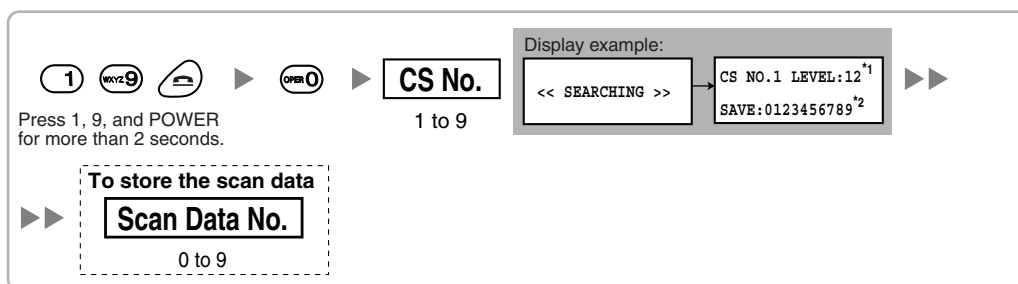

Notes

- *1: CS number and radio signal strength level.
- *2: Scan data (test result) number. Empty memory space will be indicated by a number; stored memory space will be indicated by a "-".


2. Measure the radio signal strength by moving to and away from the CS.
 - a. Move to the CS until the point the radio signal strength level becomes "12".
 - b. Move away from the CS and identify the CS coverage area within which the radio signal strength level is greater than "8". Draw the area on the map.
 - c. Move away from the CS and identify the CS coverage area within which the radio signal strength level is greater than "3". Draw the area on the map.

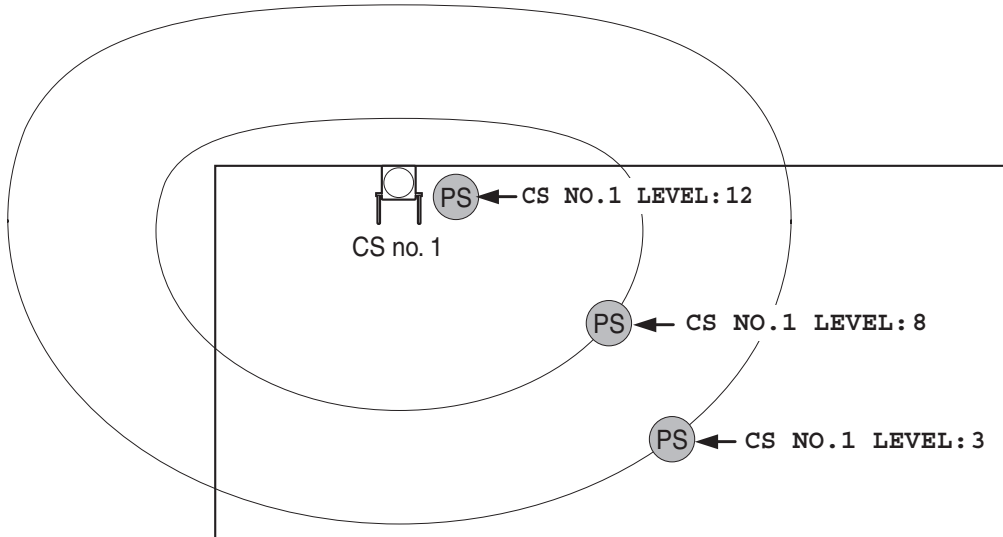

Radio Signal Strength Levels


Level: 00		Out of range
Level: 01 to 02		Receives noise easily or disconnects
Level: 03 to 07		May receive noise
Level: 08 to 10		Good
Level: 11 to 12		Better

3. Repeat the steps 1 and 2 for other CSs, and relocate the CSs when necessary.
 - a. Overlap adjacent CS coverage areas where the radio signal strength level is "8" by 5 m to 10 m.

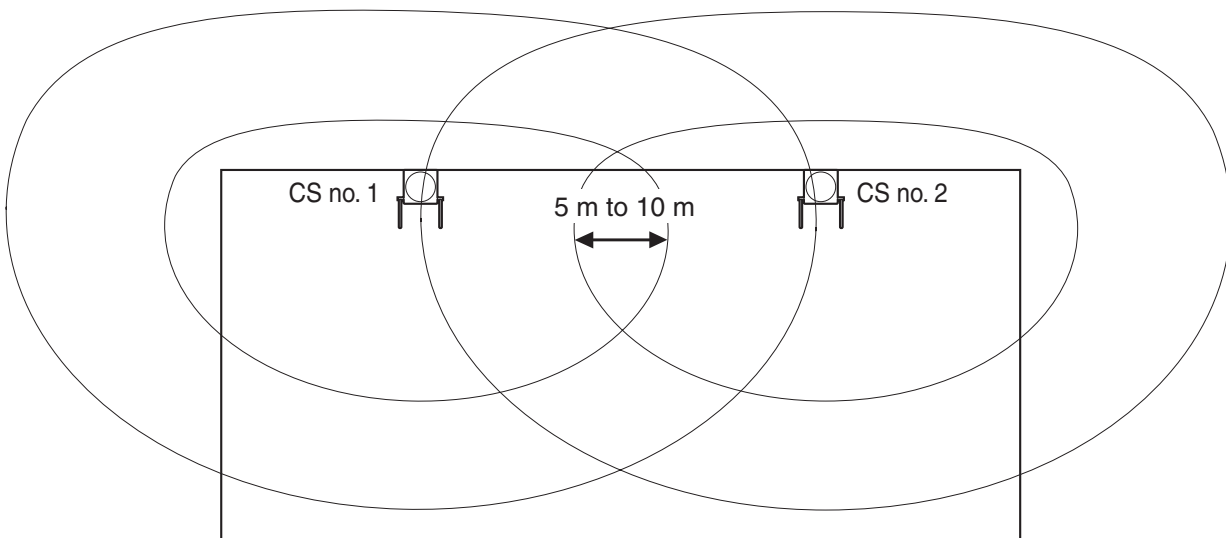

2.8 Connection of 2.4 GHz Portable Stations


- b. Overlap the CS coverage areas of at least 2 CSs at any location in the installation site.

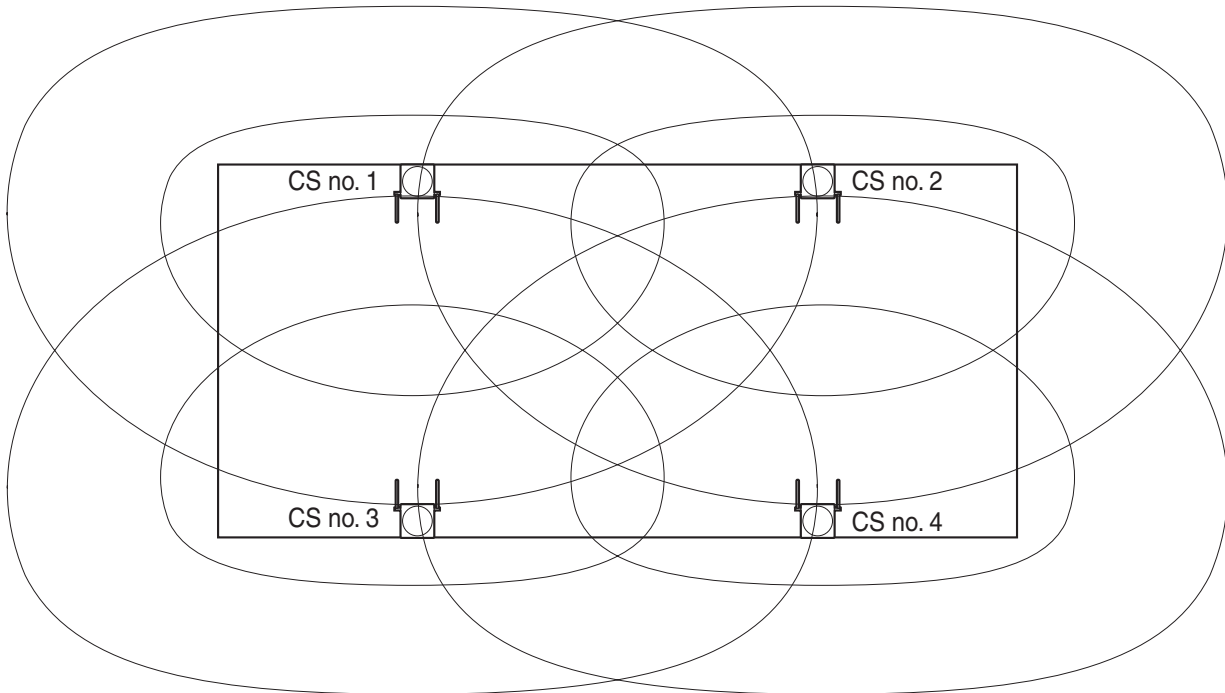


- c. Make sure that the radio signal strength level is greater than "3" at any location in the service area demanded by the user.

Referring to the Stored Scan Data

Using the KX-TD7680

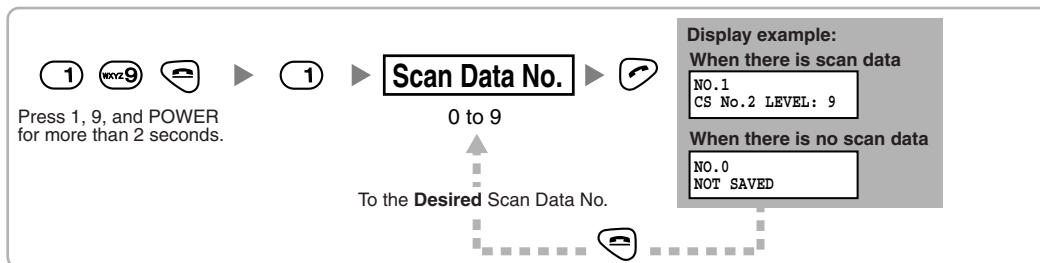


Using the KX-TD7690

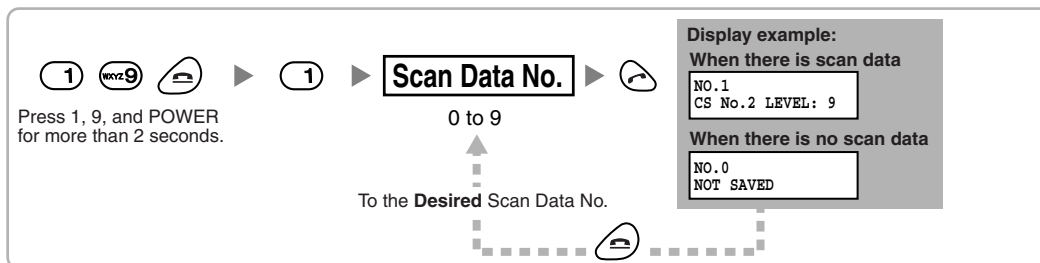


Deleting the Stored Scan Data

Using the KX-TD7680

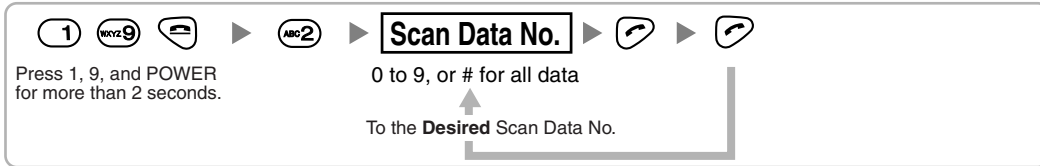


Using the KX-TD7690

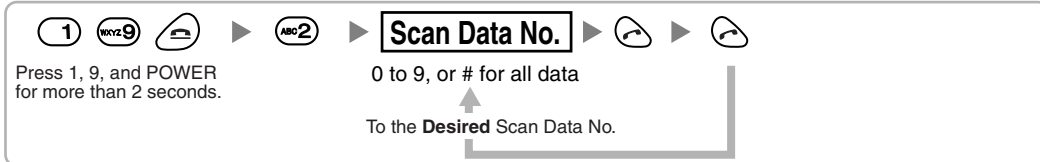


2.8.6 After Site Survey

After obtaining the proper measurement results, exit the Radio Signal Test mode before connecting the CS to the Hybrid IP-PBX.

1. Keep pressing POWER button on the PS until the PS is turned OFF.
2. Disconnect the AC adaptor or battery box from the CS and stop supplying electricity.

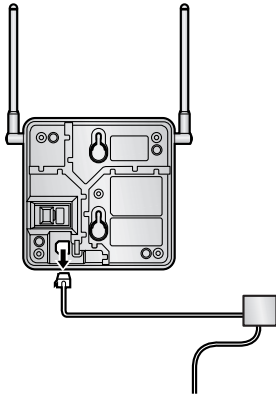


3. Switch all DIP switches on the CS from ON to OFF.

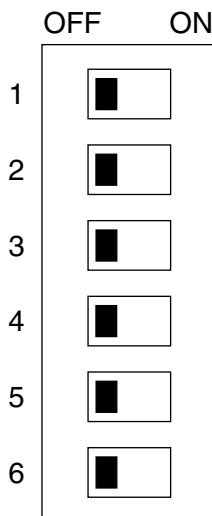

2.8.7 Connecting a Cell Station to the Hybrid IP-PBX

Refer to the following example to connect a CS to the Hybrid IP-PBX.

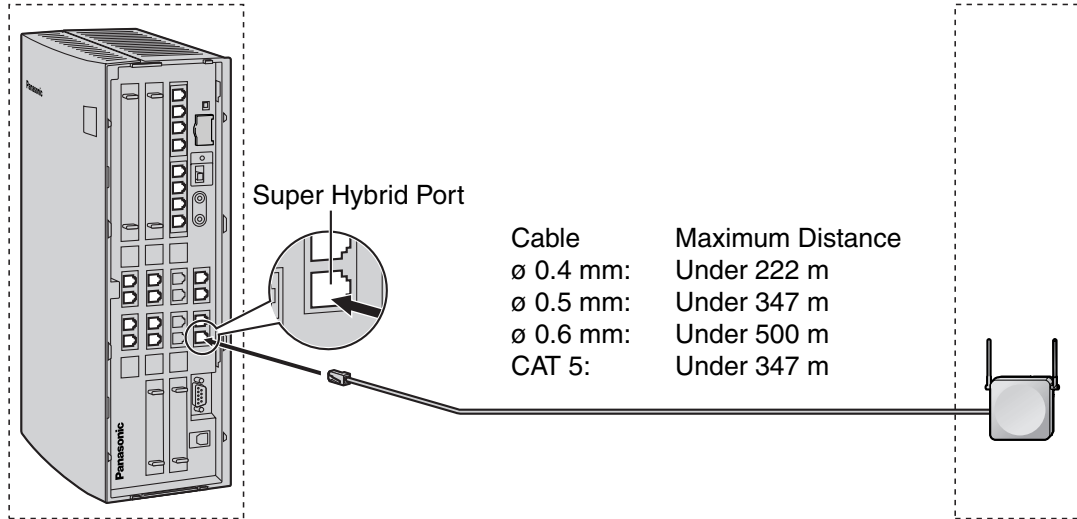

A Super Hybrid Port,
or DLC4/DLC8 card (RJ45)

Signal Name	Pin No.
	1
	2
D2	3
	4
	5
D1	6
	7
	8

CS (RJ11)

Pin No.	Signal Name
1	D1
2	
3	
4	D2

OR

A Super Hybrid Port,
or DLC4/DLC8 card (RJ11)

Signal Name	Pin No.
D1	1
	2
	3
D2	4

CS (RJ11)

Pin No.	Signal Name
1	D1
2	
3	
4	D2

Accessory and User-supplied Items for the CS

Accessory (included): Screws × 2, Washers × 2


User-supplied (not included): RJ45 connector or RJ11 connector

Note

For details about DLC4 card or DLC8 card, refer to "2.4.1 DLC4 Card" or "2.4.3 DLC8 Card".


Connecting the CS

1. Connect the cable from a Super Hybrid Port or the DLC4/DLC8 card to the CS.

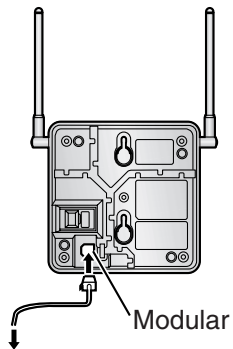

To a Super Hybrid Port,
or DLC4/DLC8 card

2. Pass the cable through the groove of the CS (in any direction depending on your preference).

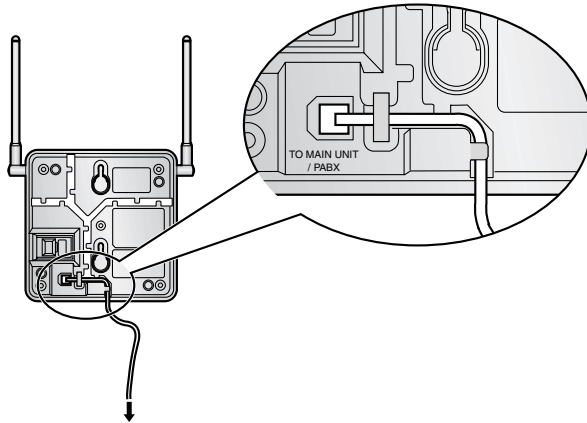

To a Super Hybrid Port,
or DLC4/DLC8 card

Registering the PS


The PS must be registered to the Hybrid IP-PBX before it can be used. Programming of both the PS and Hybrid IP-PBX is required. A PT with multiline display (e.g., KX-T7636 6-line display) is required for the Hybrid IP-PBX system programming.

Note


For details about system programming using a PT, refer to "2.3.2 PT Programming" and "3.3 PT Programming" in the Feature Guide.

Entering the System Programming Mode


PT (Administrator Level)

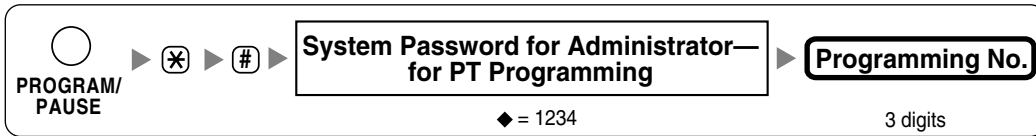

PS (Using the KX-TD7680)

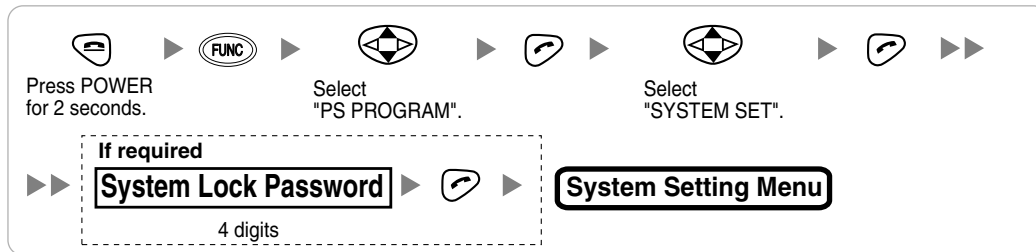


PS (Using the KX-TD7690)

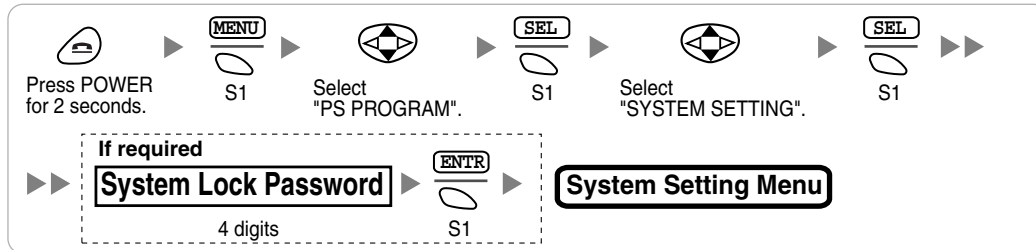

Note

◆ means default value throughout this section.


PS Registration

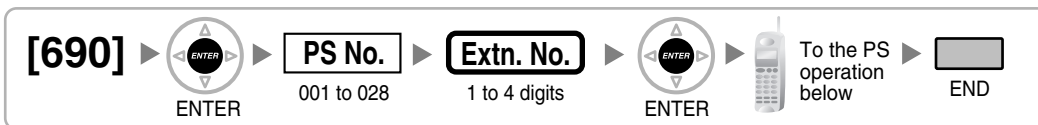


When the PS has not been registered yet

When registering the PS for the first time, it is possible to select the desired language for the display. (You do not need to enter the PS system programming mode when registering for the first time.)

Using the KX-TD7680

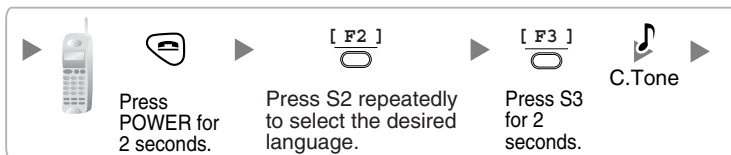


Using the KX-TD7690

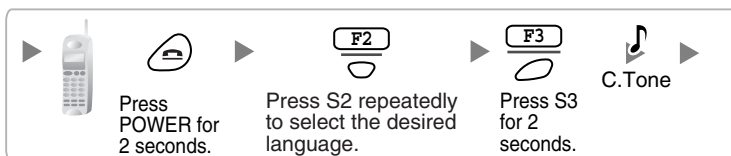


When the PS has already been registered to another Hybrid IP-PBX

One PS can be registered to a maximum of 4 different Hybrid IP-PBXs.

Using the KX-TD7680

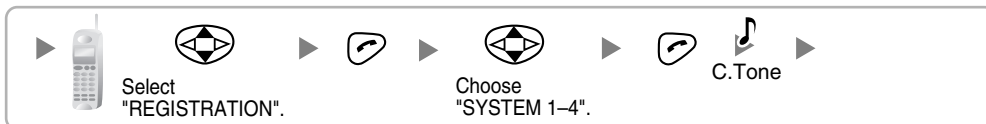


Using the KX-TD7690

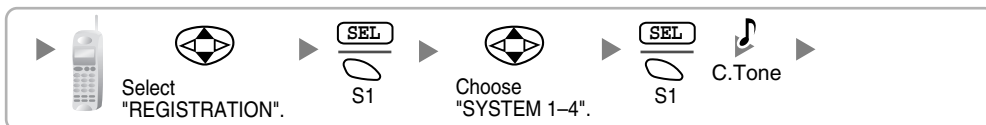


Setting the System Lock

When a system lock has been set, the system lock password will be required for PS system setting.

Using the KX-TD7680

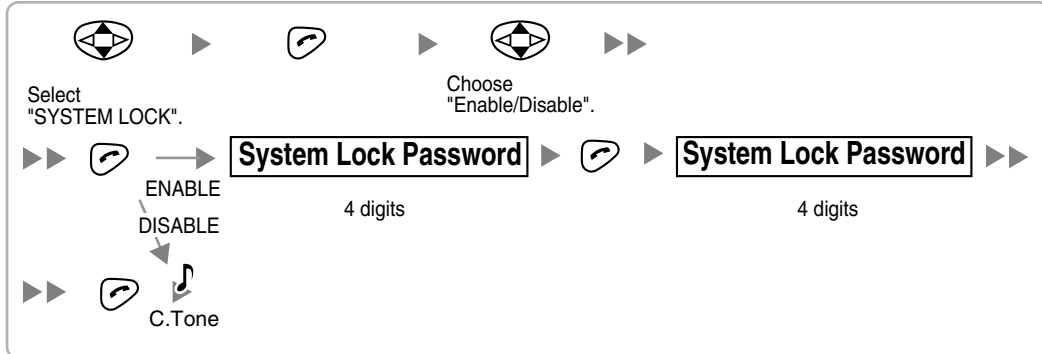

Using the KX-TD7690

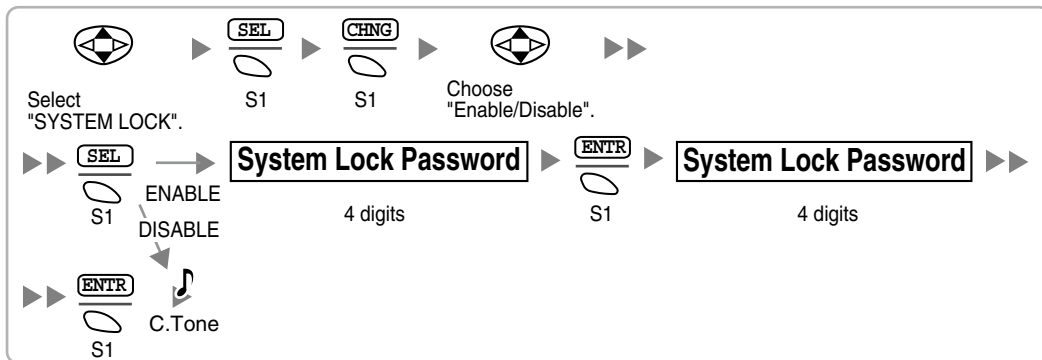


Setting the Personal Identification Number (PIN) for PS Registration

To prevent registering the PS to a wrong Hybrid IP-PBX, a PIN for PS registration can be set to the Hybrid IP-PBX. Before registering the PS to the Hybrid IP-PBX, register the PIN set to the Hybrid IP-PBX into the PS. By doing so, the PS will only be registered to the Hybrid IP-PBX with the matching PIN.

Notes


- By default, the PIN for PS registration is "1234" for both the Hybrid IP-PBX and PS. Therefore, the PS can be registered to the Hybrid IP-PBX without setting the PIN.
- The PIN for PS registration will only be used when registering the PS to the Hybrid IP-PBX. Therefore, even when there is more than 1 Hybrid IP-PBX with the same PIN near the PS, the PS will not be linked to a different Hybrid IP-PBX during normal operation after registration.

Setting the PIN for Hybrid IP-PBX

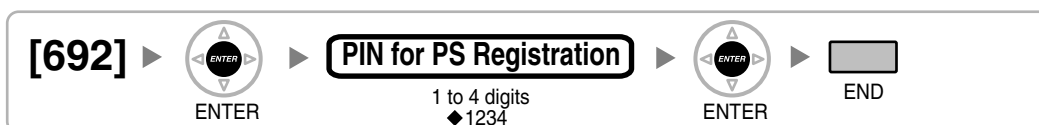

Setting the PIN for PS

Using the KX-TD7680

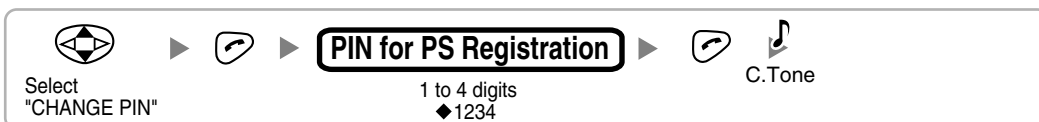


Using the KX-TD7690



PS Termination


Confirm the following before cancelling the PS registration:

- PS is turned on.
- PS is within the range.

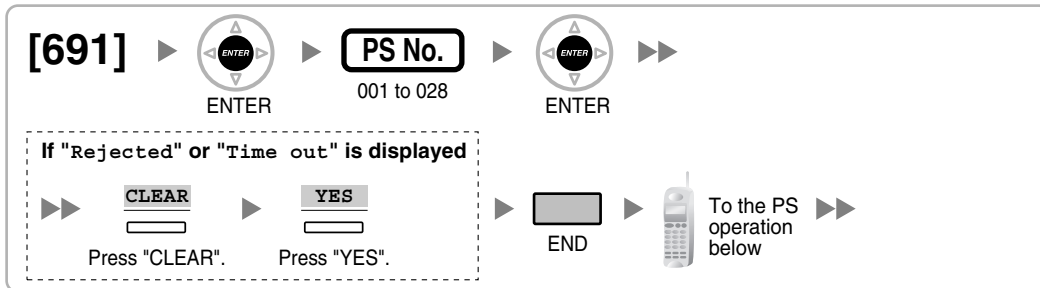


If the registration information is still stored in the PS

Using the KX-TD7680

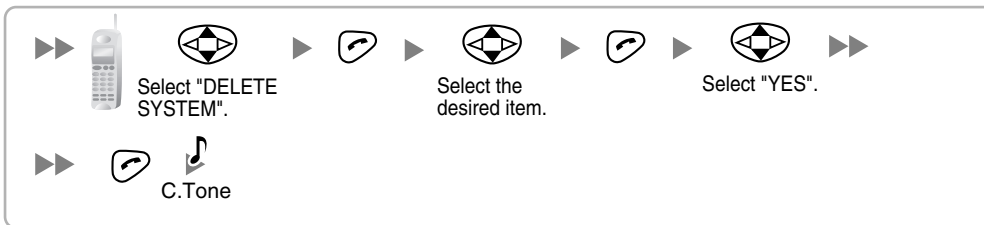

Using the KX-TD7690

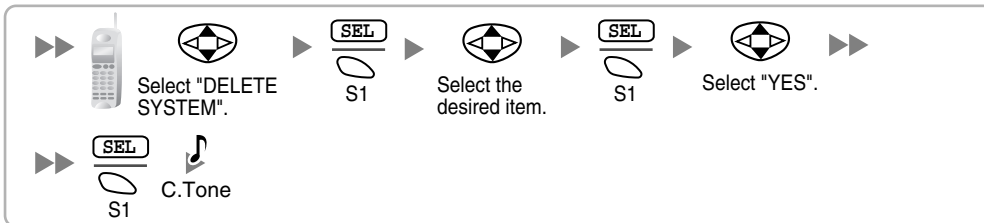

Testing the Operation


Walk around the service area while having a conversation using a registered PS. If noise is frequent or conversations disconnect, relocate the CSs or install an additional CS.

2.8.8 Wall Mounting

1. Place the reference for wall mounting (on the following page) on the wall to mark the 2 screw positions.
2. Install the 2 screws and washers (included) into the wall.


Notes

- Make sure that the screw heads are at the same distance from the wall.
 - Install the screws perpendicular to the wall.
3. Hook the CS on the screw heads.

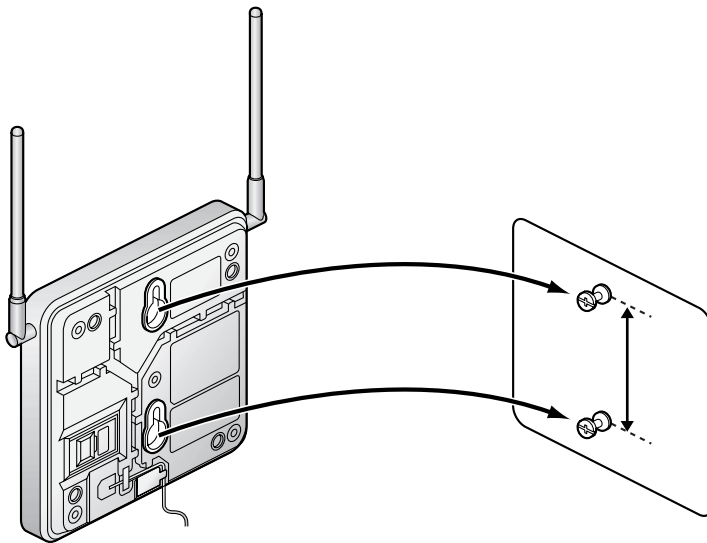

Reference for Wall Mounting

Please copy this page and use as a reference for wall mounting.

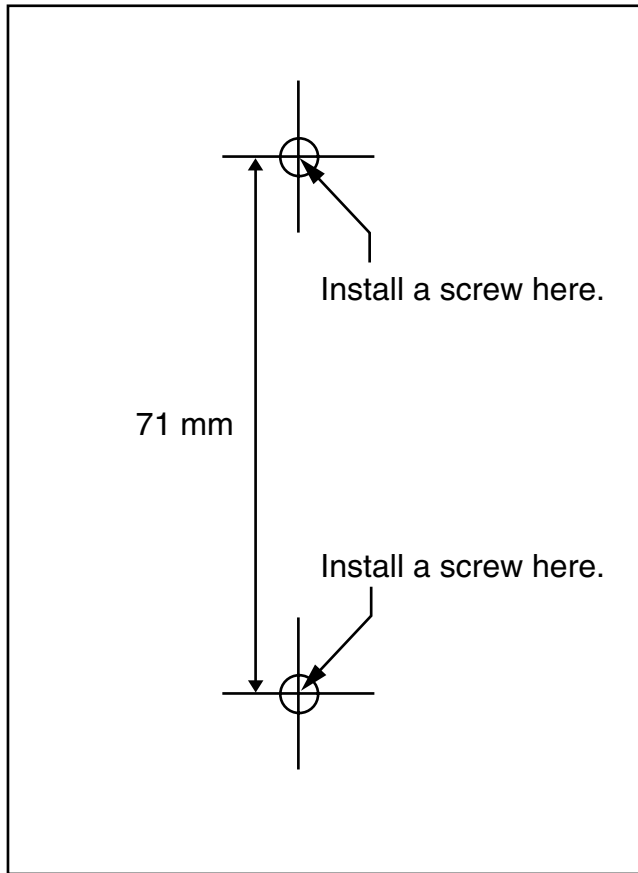

Note

Make sure to set the print size to correspond with the size of this page. If the dimension of the paper output still deviates slightly from the measurement indicated here, use the measurement indicated here.

2.9 Connection of Doorphones, Door Openers, External Sensors, and External Relays


2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

A maximum of 4 doorphones (KX-T30865), 4 door openers or external relays, and 4 external sensors can be connected to the Hybrid IP-PBX with a DPH4 card. A maximum of 2 doorphones (German type), 2 door openers, 4 external sensors, and 4 external relays can be connected to the Hybrid IP-PBX with a DPH2 card.

Notes


- KX-T30865 is a Panasonic doorphone.
- German type doorphones, door openers, external sensors, and external relays are user-supplied.

Maximum Cabling Distance

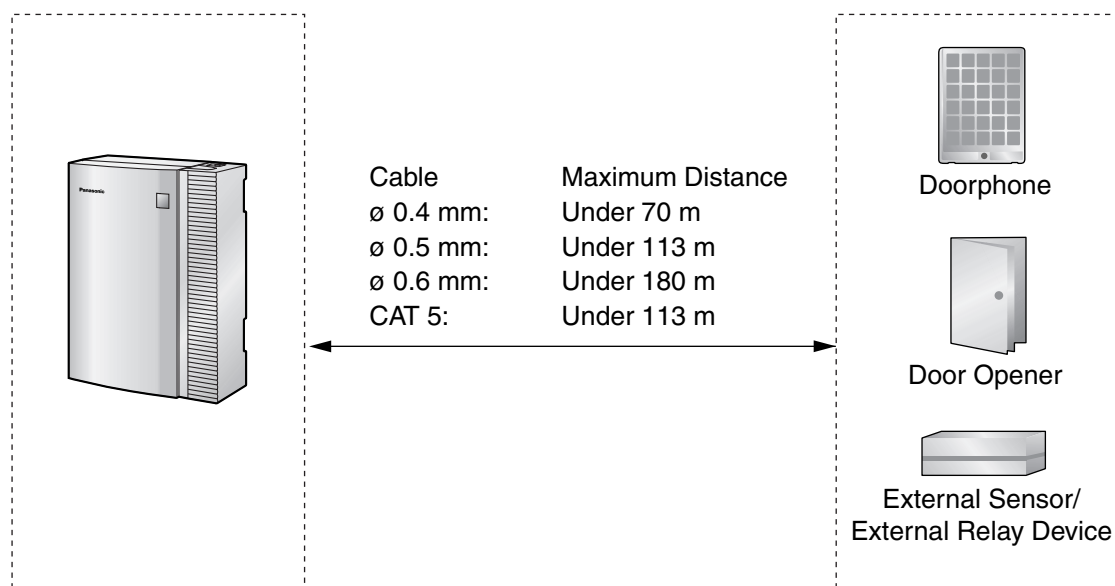


Installing the Doorphone (KX-T30865)

1. Loosen the screw to separate the doorphone into 2 halves.

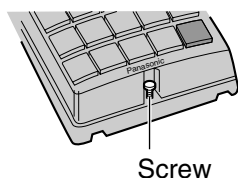

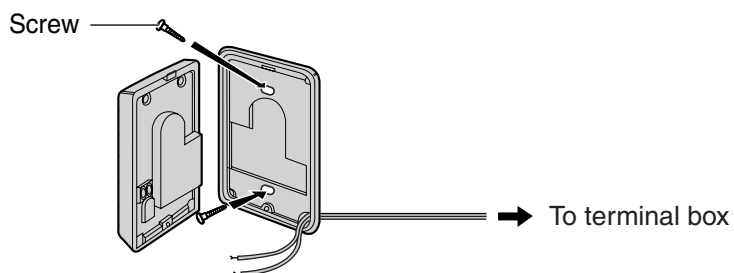

2. Pass the wires through the hole in the base cover, and attach the base cover to a wall using 2 screws.




Note

Two kinds of screws are included with KX-T30865. Please choose the appropriate kind for your wall type.

 : when a doorphone plate has been fixed to the wall

 : when you wish to install the doorphone directly to the wall


3. Connect the wires to the screws located in the front cover.

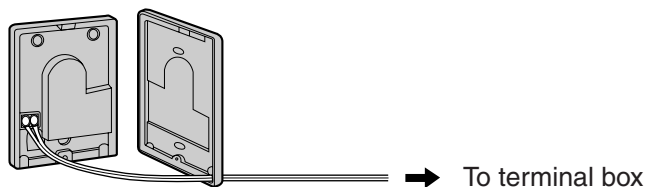

4. Re-attach the 2 halves and re-insert the screw.


Connection of Doorphones to the DPH4 Card with RJ45 Connectors

1. Unlatch the cover of the terminal box by inserting a flathead screwdriver into the openings and levering the cover open. Follow the order indicated by the numbers 1 to 4.

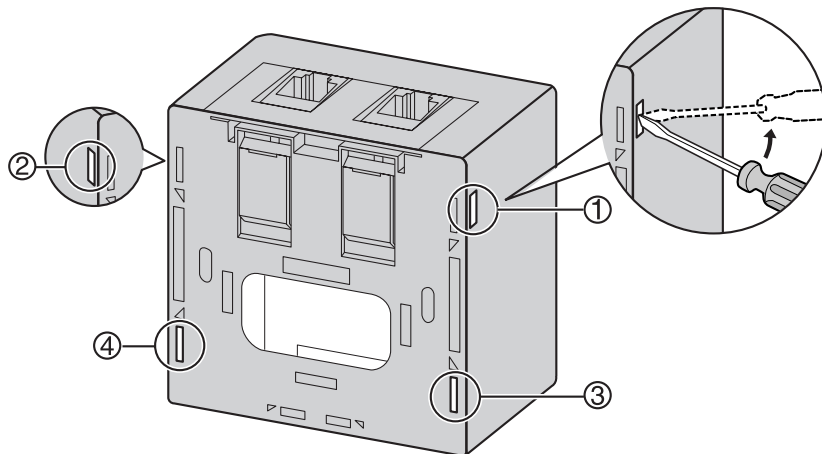


2. Connect the wires of doorphones to the terminal box. For details about pin assignments for the DPH4 card, refer to "2.5.1 DPH4 Card".

Terminal Box
(included with the card)

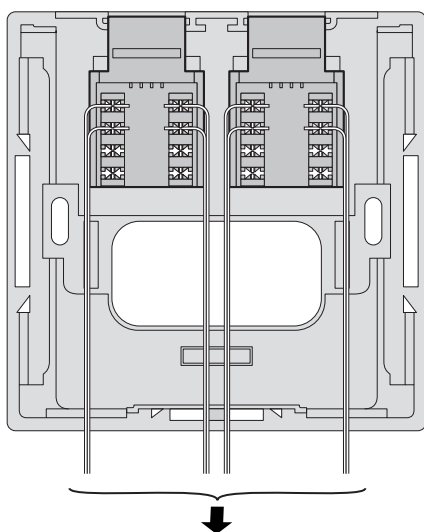


To doorphones


Pin Assignments for Terminal Box

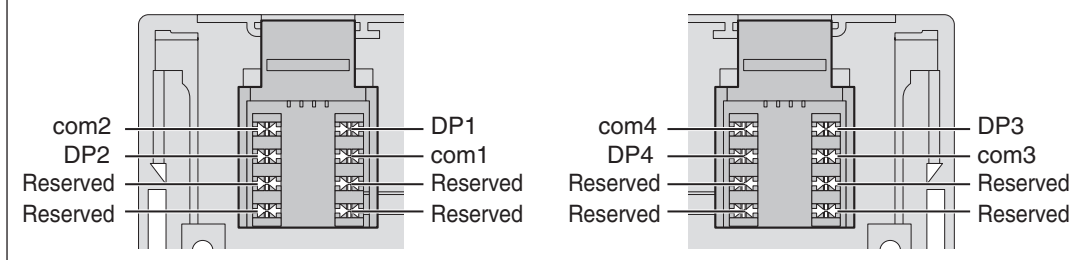

3. Cut and remove the appropriate parts from the cover depending on your preference.

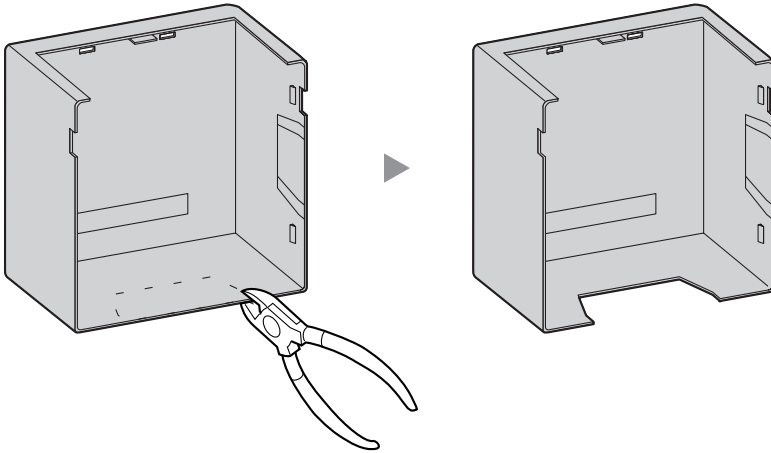


4. Make sure to run the connected wires through the opening. Then, close the cover.

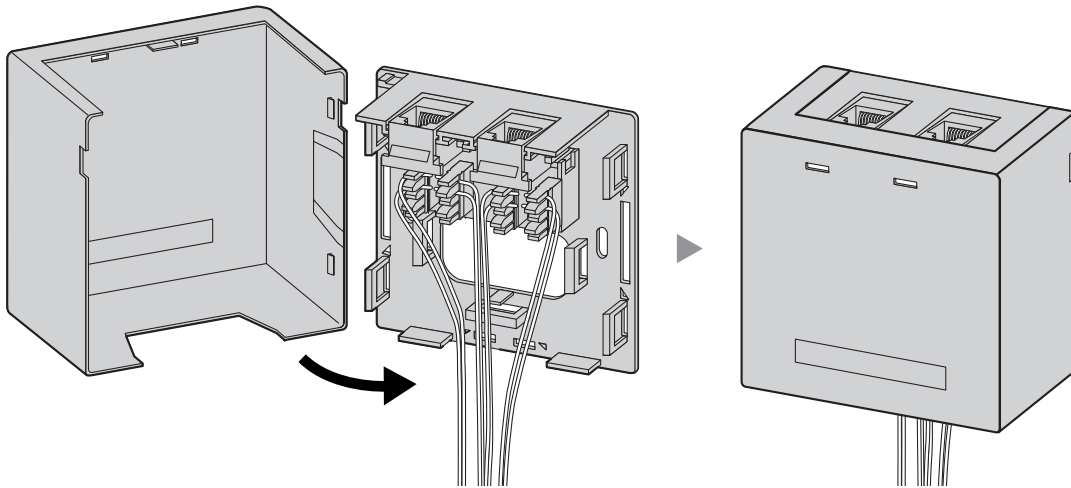


2.9 Connection of Doorphones, Door Openers, External Sensors, and External Relays

5. Connect the terminal box to the DPH4 card in the Hybrid IP-PBX using the telephone line cords included with the card.

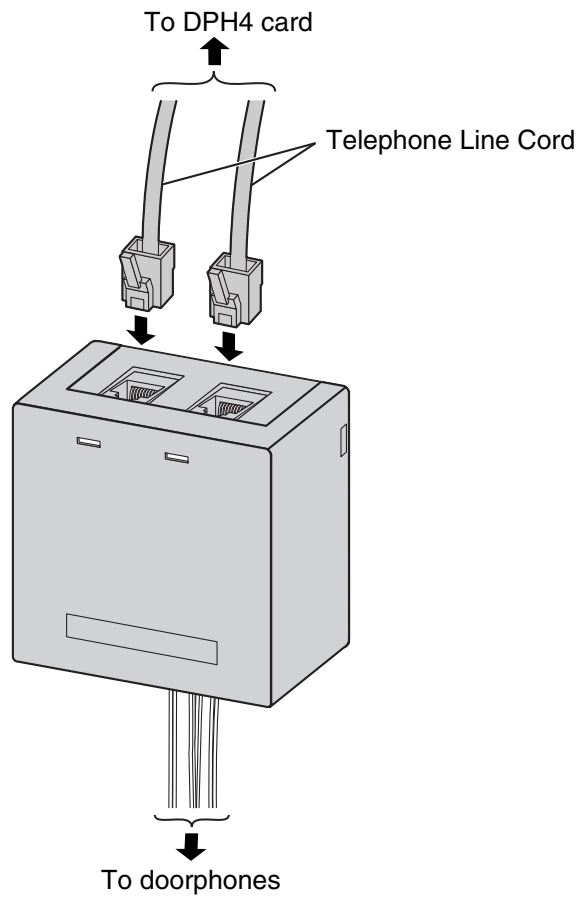


Connection of Doorphones to the DPH4 Card with RJ11 Connectors

1. Connect the DPH4 card to the terminal boxes using the telephone line cords included with the card. Refer to "2.5.1 DPH4 Card" for pin assignments.
2. Connect the wires of doorphones 1 and 3 to the red and green screws on the terminal box.
3. Connect the wires of doorphones 2 and 4 to the yellow and black screws on the terminal box.

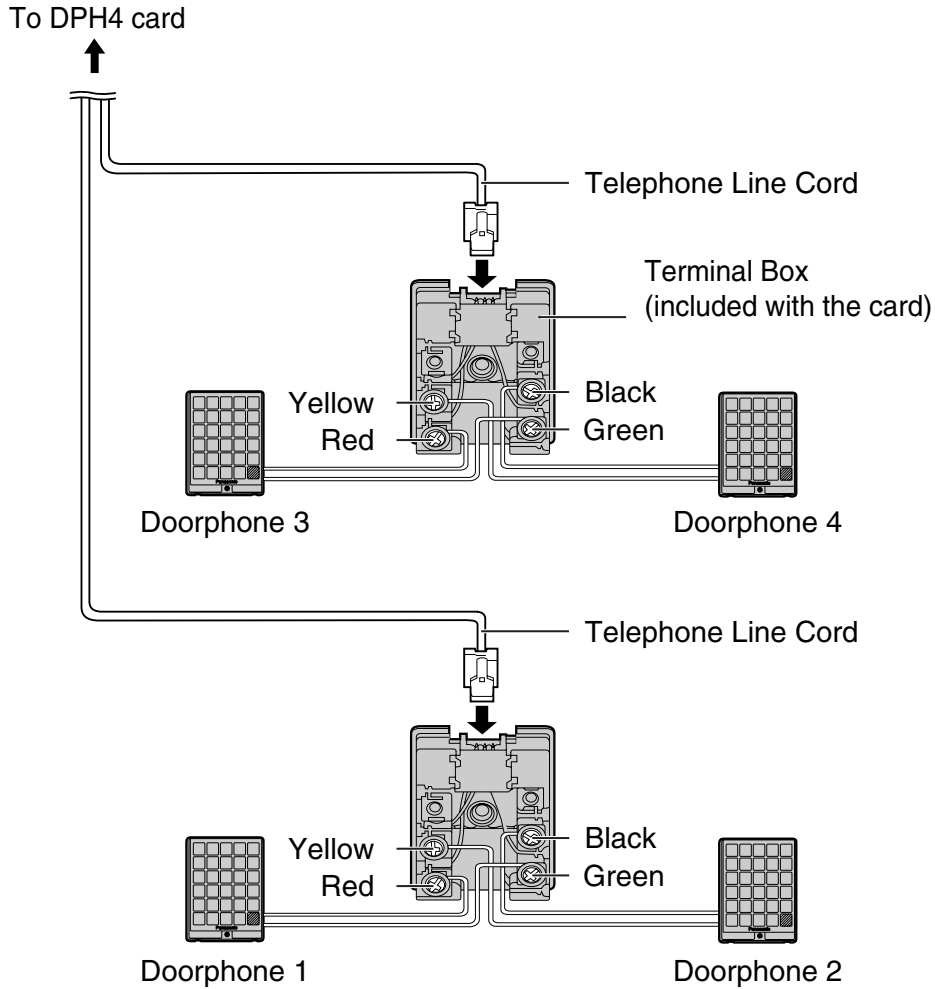


Connection of Door Openers and German Type Doorphones to DPH2 Card

1. Unlatch the cover of the terminal box by inserting a flathead screwdriver into the openings and levering the cover open. Follow the order indicated by the numbers 1 to 4.

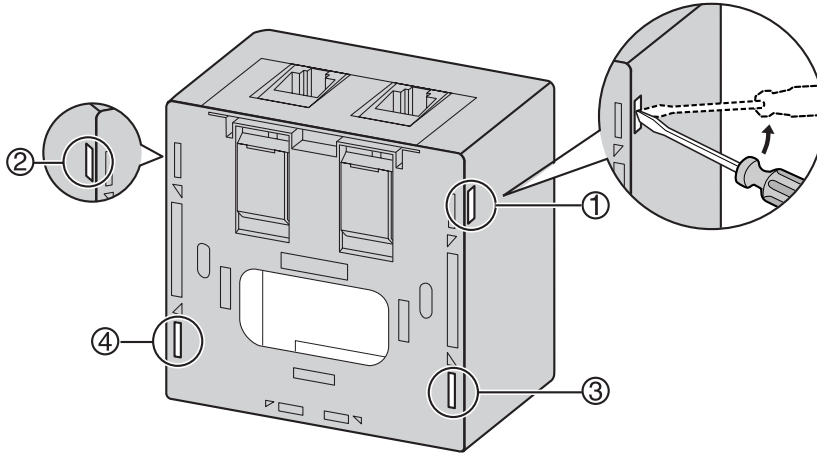


2. Connect the wires of door openers and doorphones to the terminal box. For details about pin assignments for the DPH2 card, refer to "2.5.2 DPH2 Card".


Terminal Box
(included with the card)

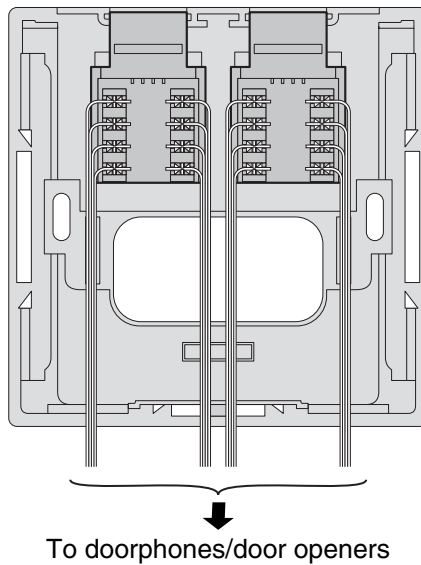


Pin Assignments for Terminal Box

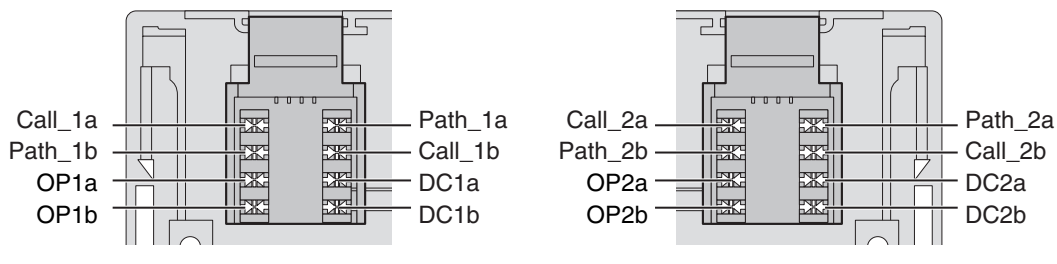

3. Cut and remove the appropriate parts from the cover depending on your preference.

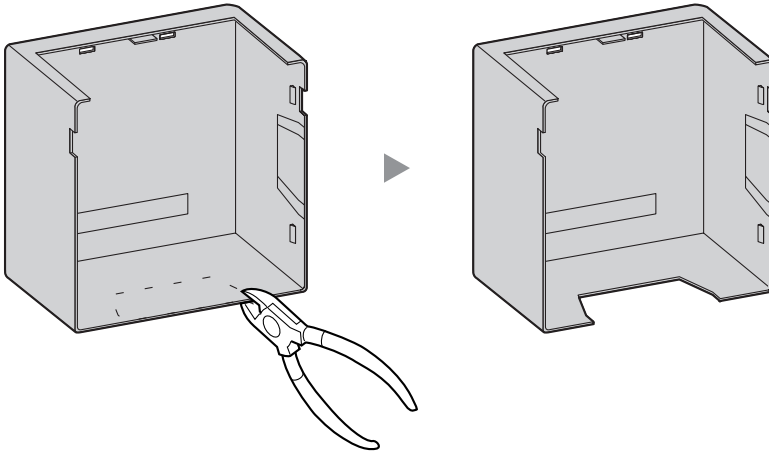


4. Make sure to run the connected wires through it. Then, close the cover.

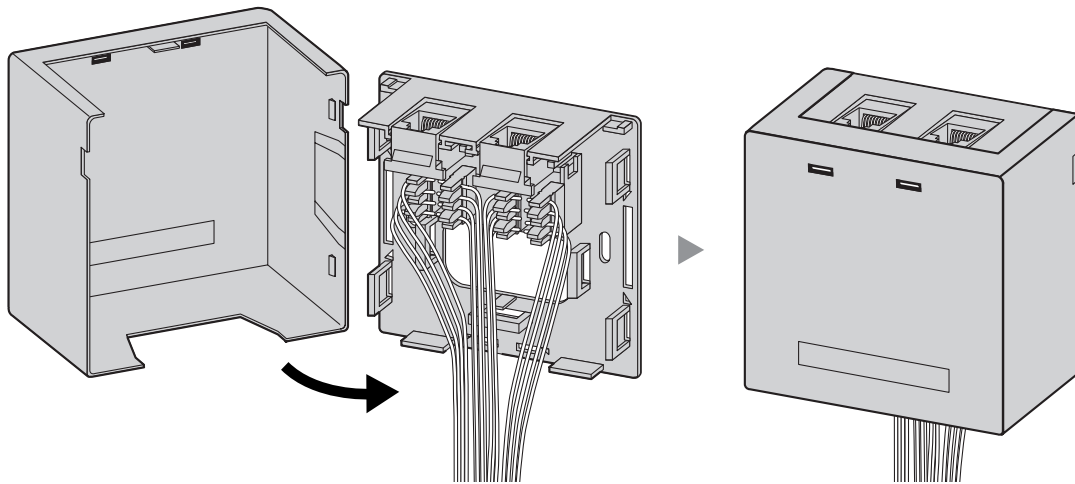

2.9 Connection of Doorphones, Door Openers, External Sensors, and External Relays


5. Connect the terminal box to the DPH2 card in the Hybrid IP-PBX using the telephone line cords included with the card.

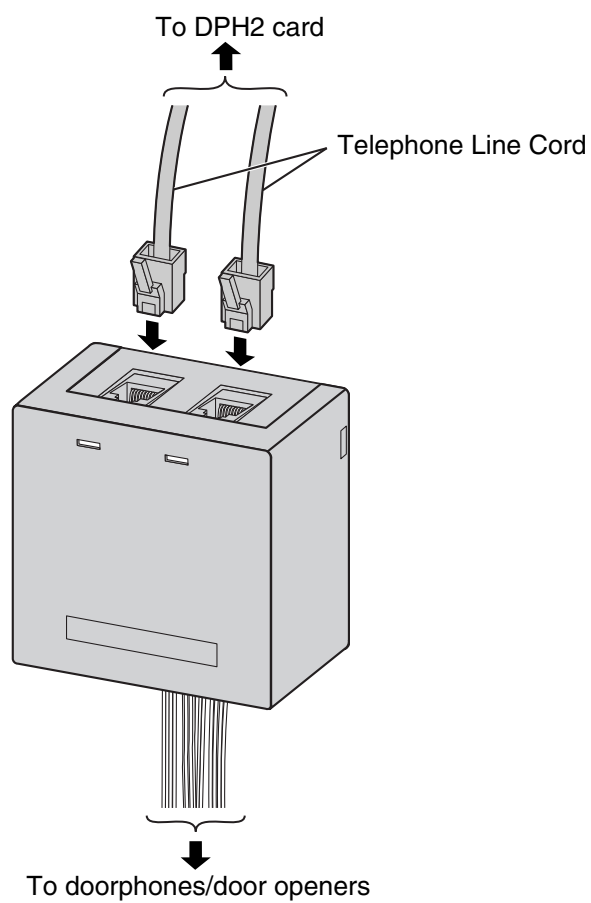


Connection of Door Openers, External Sensors, and External Relays to DPH4 Card

Use 8-pin and 10-pin terminal block (included with the card) for connection.

1. While pressing down on the hole at the top of the terminal block using a screwdriver, insert the wire into the side hole as shown below. Repeat this procedure for other door openers, external sensors, and external relays.
Refer to "2.5.1 DPH4 Card" for pin assignments.

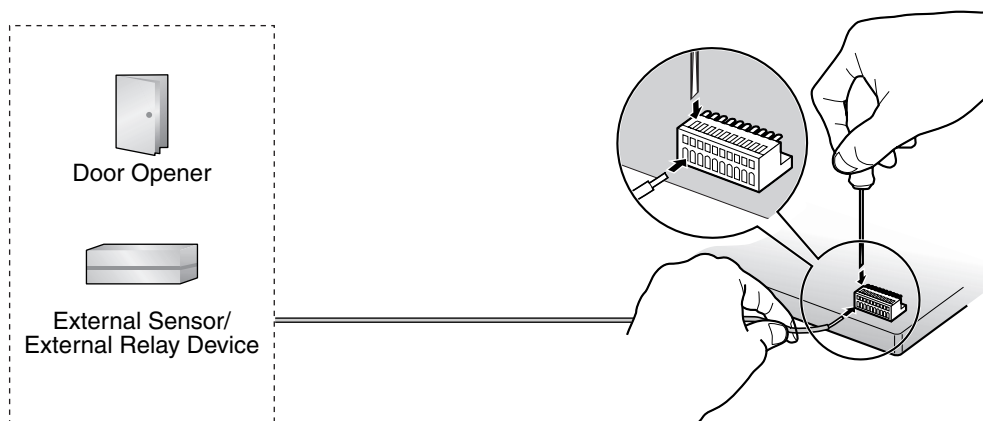


2. Attach the terminal block to the connector of the DPH4 card in the Hybrid IP-PBX.

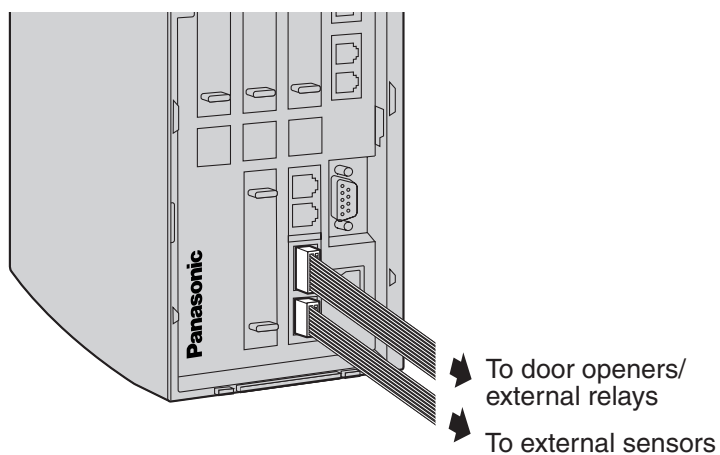


Connection of External Sensors and External Relays to DPH2 Card

Use 8-pin and 10-pin terminal block (included with the card) for connection.

1. While pressing down on the hole at the top of the terminal block using a screwdriver, insert the wire into the side hole as shown below. Repeat this procedure for other external sensors and external relays. Refer to "2.5.2 DPH2 Card" for pin assignments.

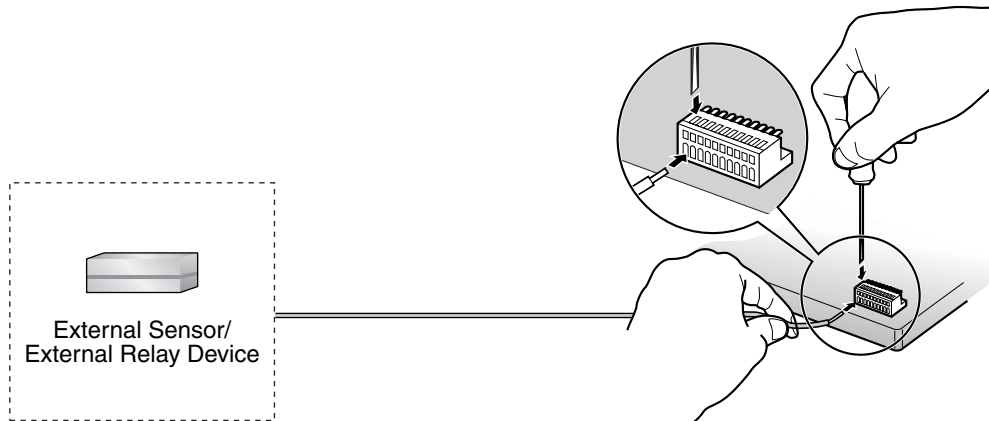


2. Attach the terminal block to the connector of the DPH2 card in the Hybrid IP-PBX.

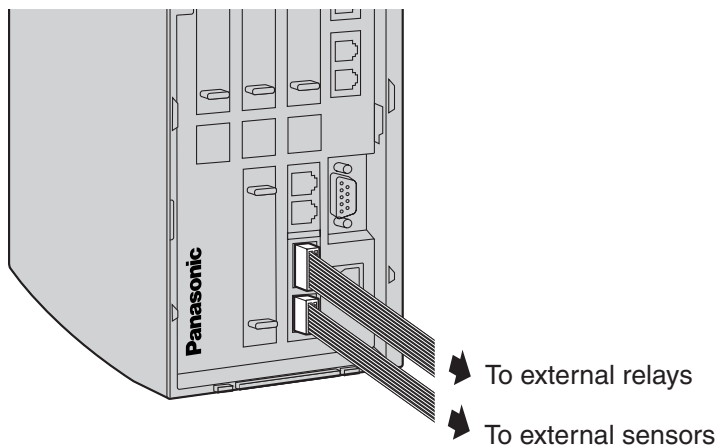

2.10 Connection of Peripherals

2.10.1 Connection of Peripherals

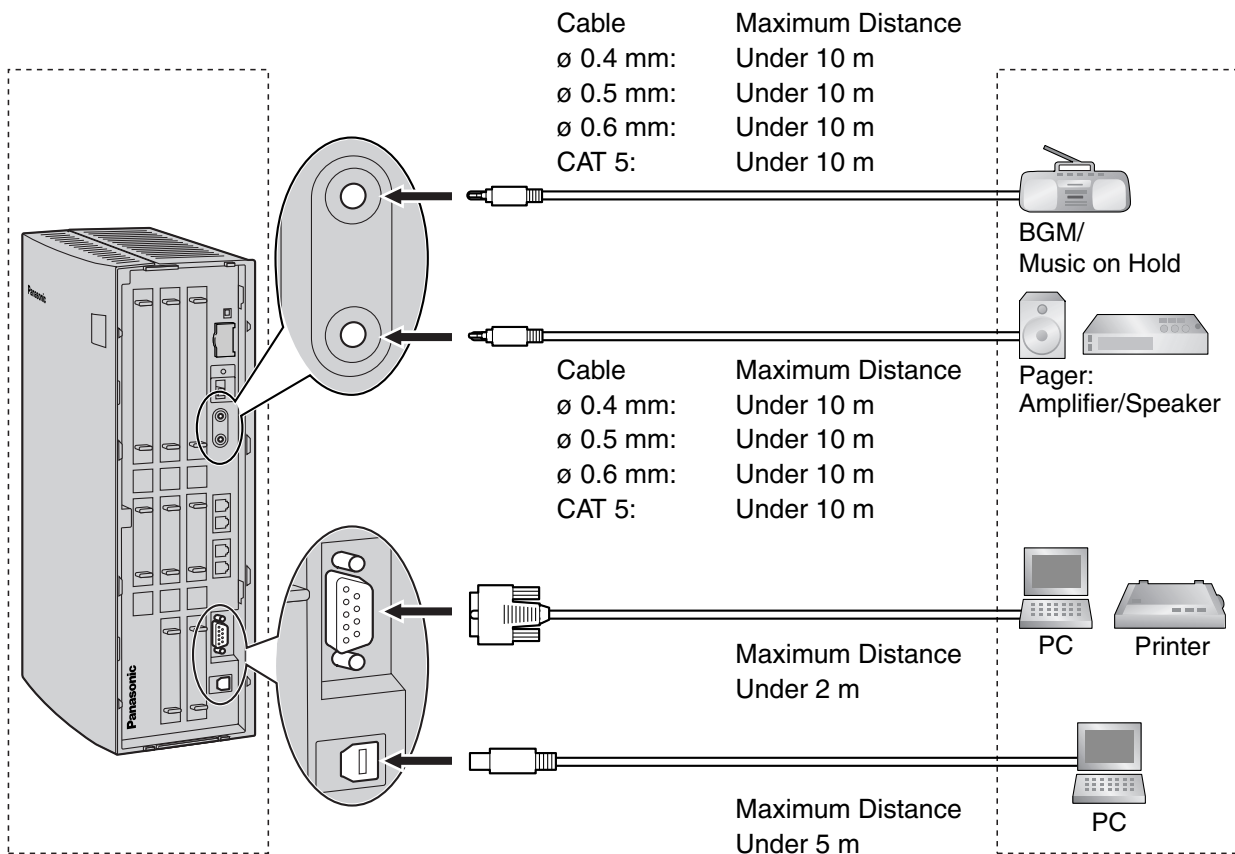

BGM/MOH

The Hybrid IP-PBX provides Background Music and Music on Hold. Only 1 external music source (e.g., a user-supplied radio) can be connected to the Hybrid IP-PBX.

CAUTION

- Wiring should be done carefully to prevent undue force being exerted on the plug. Otherwise, music may intermittent.
- An External Music Jack is an SELV port and should only be connected to an approved SELV device, or in Australia, via the Line Isolation Unit with the Telecommunications Compliance Label.

Note

When the Hybrid IP-PBX and external music sources are not connected to the same earth, hum noise may be induced into Background Music and Music on Hold.

2.10 Connection of Peripherals

Pager

Only 1 paging device (user-supplied) can be connected to the Hybrid IP-PBX.

CAUTION

An External Paging Jack is an SELV port and should only be connected to an approved SELV device, or in Australia, via the Line Isolation Unit with the Telecommunications Compliance Label.


PC/Printer (via RS-232C)

The Hybrid IP-PBX is equipped with an RS-232C interface. This interface provides communication between the Hybrid IP-PBX and the user-supplied devices such as PC or line printers. The RS-232C port is used for system programming, SMDR, diagnostics and external system database storage (save/load) functions.

Note


Use an RS-232C cross cable for connection between the Hybrid IP-PBX and PC.

Pin Assignments


	No.	Signal Name	Function	Circuit Type	
				EIA	CCITT
	2	RD (RXD)	Receive Data	BB	104
	3	SD (TXD)	Transmit Data	BA	103
	4	ER (DTR)	Data Terminal Ready	CD	108.2
	5	SG	Signal Ground	AB	102
	6	DR (DSR)	Data Set Ready	CC	107
	7	RS (RTS)	Request To Send	CA	105
	8	CS (CTS)	Clear To Send	CB	106

Connection Charts

For connecting a printer/PC with a 9-pin RS-232C connector

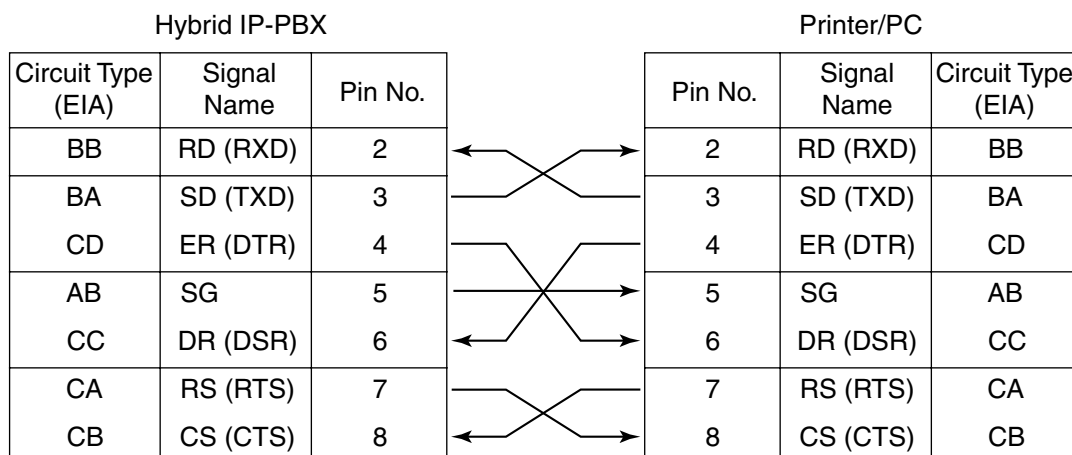

For connecting a printer/PC with a 25-pin RS-232C connector

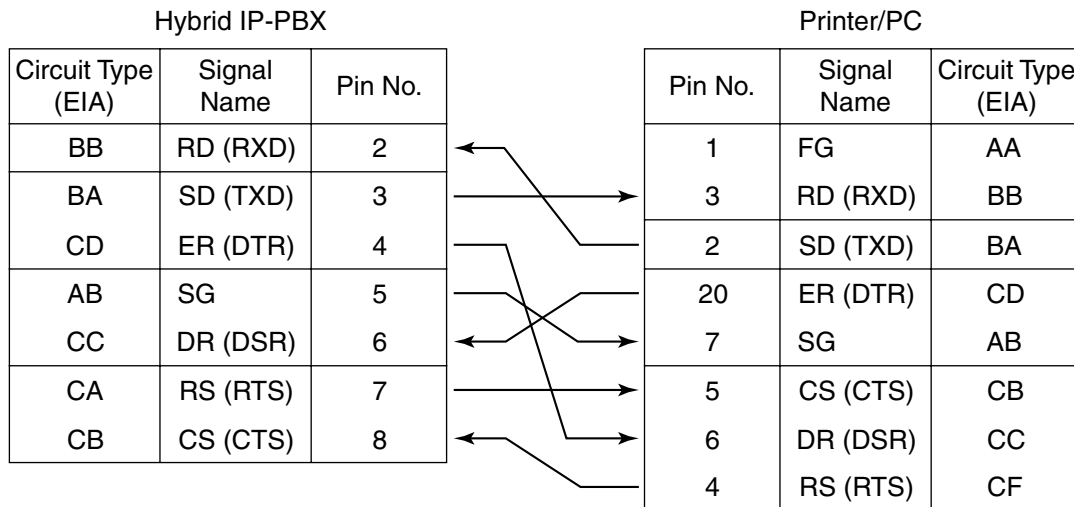

RS-232C Signals

- **Receive Data (RXD):...**(input)
Conveys signals from the printer or the PC.
- **Transmit Data (TXD):...**(output)
Conveys signals from the unit to the printer or the PC. A "Mark" condition is held unless data or BREAK signals are being transmitted.
- **Data Terminal Ready (DTR):...**(output)
This signal line is turned ON by the unit to indicate that it is ON LINE. Circuit ER (DTR) ON does not indicate that communication has been established with the printer or the PC. It is switched OFF when the unit is OFF LINE.
- **Signal Ground (SG)**
Connects to the DC ground of the unit for all interface signals.
- **Data Set Ready (DSR):...**(input)
An ON condition of circuit DR (DSR) indicates the printer or the PC is ready. Circuit DR (DSR) ON does not indicate that communication has been established with the printer or the PC.
- **Request To Send (RTS):...**(output)
This lead is held ON whenever DR (DSR) is ON.
- **Clear To Send (CTS):...**(input)
An ON condition of circuit CS (CTS) indicates that the printer or the PC is ready to receive data from the unit. The unit does not attempt to transfer data or receive data when circuit CS (CTS) is OFF.
- **Frame Ground (FG)**
Connects to the unit frame and the earth ground conductor of the AC power cord.

PC/Server PC (via USB version 1.1)

The Hybrid IP-PBX is equipped with a USB interface. This interface provides communication between the Hybrid IP-PBX and a PC or a Server PC.


The PC is used for system programming, diagnostics and external system database storage (save/load) functions.

The Server PC is used for connecting PCs on a LAN to provide third party call control CTI. The CTI connection uses the CSTA Phase 3 or TAPI 2.1 protocol.

Note

The operating system of the PC or Server PC required for third party call control depends on your CTI application software. For details, refer to the manual for your CTI application software.

Pin Assignments

	No.	Signal Name
	1	VBUS
	2	USB D-
	3	USB D+
	4	GND

2.11 Power Failure Connections

2.11.1 Power Failure Connections

When the power supply to the Hybrid IP-PBX fails, power failure transfer (PFT) will switch from the current connection to the Power Failure Connection. Refer to "2.4.1 Power Failure Transfer" in the Feature Guide for further information.

Power Failure Connection is required to implement this feature.

Note

While DC power is provided by the backup batteries, the Hybrid IP-PBX will remain fully operational and the connection will not switch to the Power Failure Connection.

Using Analogue Trunk Card and Super Hybrid Ports

In the event of power failure, SLTs connected to Ports 1 and 2 of the Super Hybrid Ports (on the Main Board) are automatically connected to PFT ports 1 and 2 of the first LCOT2/LCOT4 card (installed in the least slot number).

Note


Even when the power returns, the conversation established during power failure will be maintained.

Using BRI2 Card

LINE 1 and LINE 2 of the BRI2 card can be used for Power Failure Connections.

Note

When the power returns, the connection will switch back to normal configuration from the Power Failure Connection, and a trunk conversation established during power failure will be dropped.

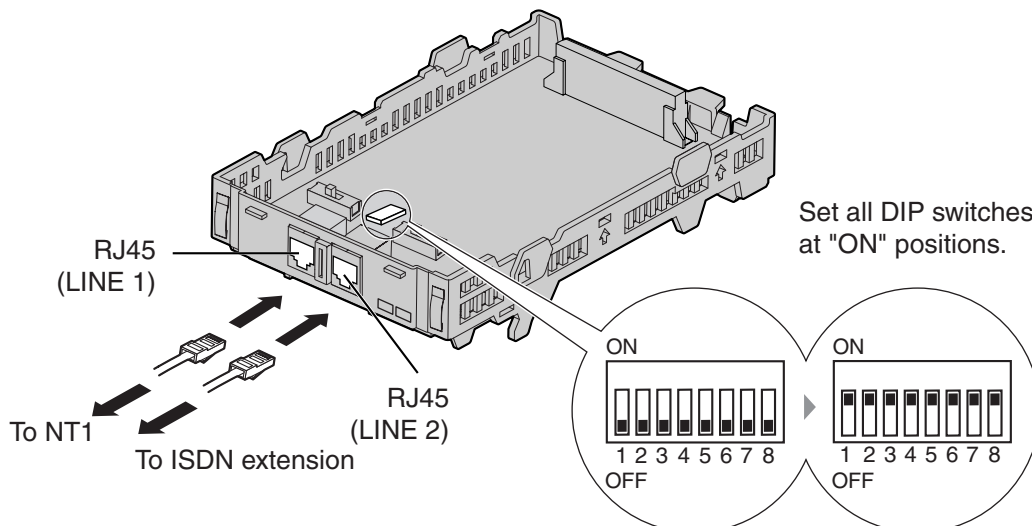

Accessory and User-supplied Items

Accessory (included): Extension Bolt × 1, Strap × 1


User-supplied (not included): RJ45 connectors

2.11 Power Failure Connections


Switch Settings

Switch	Type	Usage and Status Definition
PFT Setting	DIP	Set all DIP switches to "ON" positions to use LINE 1 and LINE 2 as a PFT port. LINE 1: Power Failure LINE (NT1) LINE 2: Power Failure EXTN (extension)

RJ45 Connector LINE 1 Pin Assignments

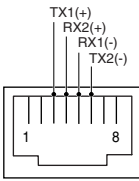	Signal Name	Level [V]	Function
	TX1	(+)	Transmit data 1
	RX2	(+)	Receive data 2
	RX1	(-)	Receive data 1
	TX2	(-)	Transmit data 2
	–	–	Reserved

RJ45 Connector LINE 2 Pin Assignments

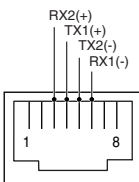	Signal Name	Level [V]	Function
	RX2	(+)	Receive data 2
	TX1	(+)	Transmit data 1
	TX2	(-)	Transmit data 2
	RX1	(-)	Receive data 1
	–	–	Reserved


2.12 Starting the Hybrid IP-PBX

2.12.1 Starting the Hybrid IP-PBX

CAUTION


- SD Memory Card must be inserted in the SD Memory Card slot of the main board before start up.
- Before touching the System Initialise Switch, discharge static electricity by touching ground or wearing an earthing strap.
- Once you have started the Hybrid IP-PBX and if you unplug the Hybrid IP-PBX, do not perform the following procedures to start the Hybrid IP-PBX again. Otherwise, your programmed data is cleared. To restart the Hybrid IP-PBX, refer to "4.1.4 Using the Reset Button".
- The Hybrid IP-PBX will continue to be powered even if the power switch is turned "OFF".
- The power supply cord is used as the main disconnect device. Ensure that the AC outlet is located near the equipment and is easily accessible.

1. Set the System Initialise Switch to the "SYSTEM INITIALIZE" position.

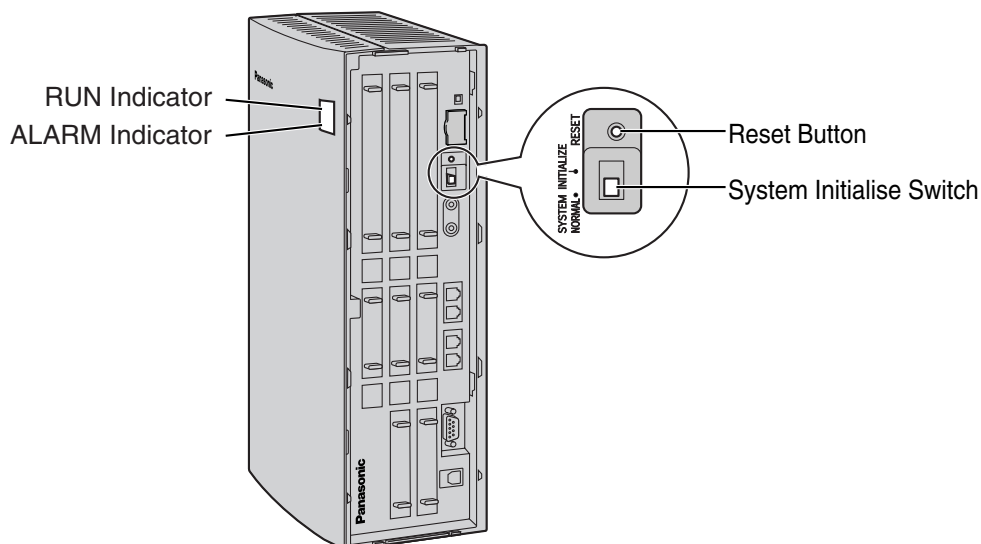


2.12 Starting the Hybrid IP-PBX

2. Plug the DC connector of the AC adaptor into DC IN 1.

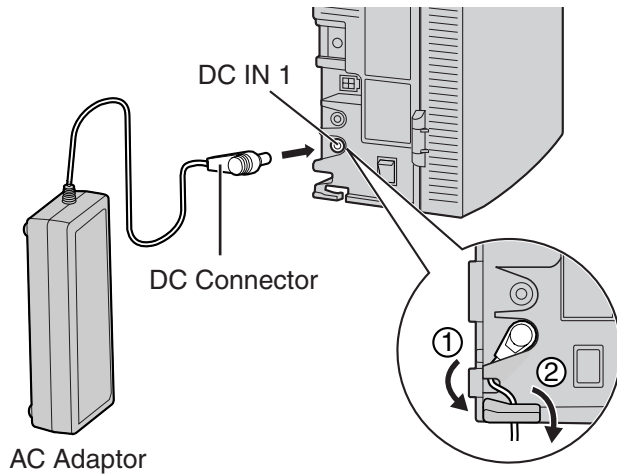


Notes


- The AC adaptor supplied with the Hybrid IP-PBX must be connected to DC IN 1. If an AC adaptor is connected only to DC IN 2, the Hybrid IP-PBX will not start.
- If you need to connect an additional AC adaptor, plug the DC connector of the additional AC adaptor into DC IN 2.

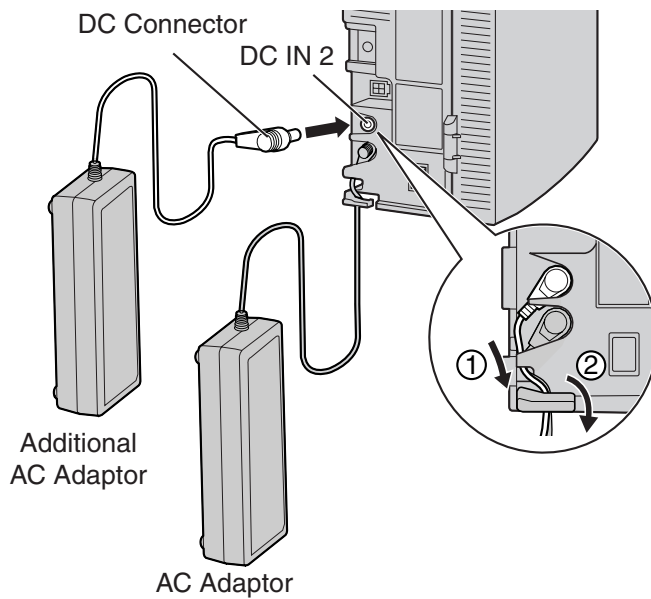

3. Plug the AC cord into the AC adaptor, and then plug the other end into an AC outlet.

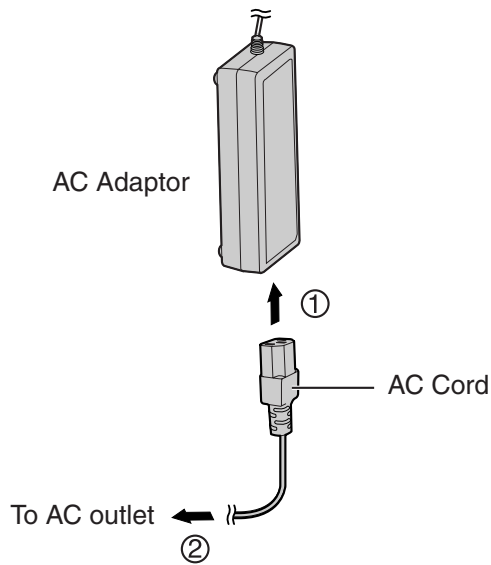

4. Turn on the power switch. The RUN indicator will flash.

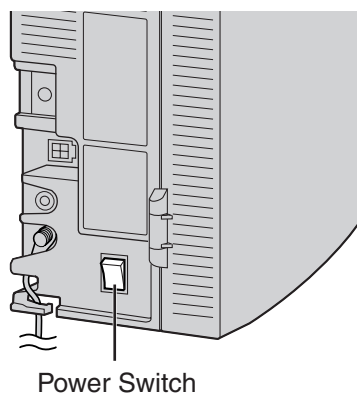

Notes

- For safety reasons, follow the procedures as indicated when turning on the Hybrid IP-PBX.
- For safety reasons, do not stretch, bend, or pinch the AC cord and the DC cable of the AC adaptor.

5. Press the Reset Button with a pointed tool.
6. While the RUN indicator is flashing, return the System Initialise Switch to the "NORMAL" position. Depending on the configuration, initialisation takes about 1 min to 3 min. If successfully executed, the RUN indicator will stop flashing and be kept lit.

All data will be cleared, and the Hybrid IP-PBX as well as all optional service cards (except for the IP-GW4 card) will be initialised to the default values. The DPTs should show the time as 01:00.

The data of the IP-GW4 card will not be initialised.

Note

Use the same types of AC adaptor and AC cord that are supplied with the Hybrid IP-PBX only.

LED Indications

Indication	Colour	Description
RUN	Green	<p>PBX status indication</p> <ul style="list-style-type: none">• OFF: Power Off (includes normal reset)• ON: Power On and running (on-line)• Flashing (60 times per minute): Starting up• Flashing (120 times per minute): Starting up or resetting with:<ul style="list-style-type: none">• the System Initialise Switch in "SYSTEM INITIALIZE" position• the SD Memory Card not inserted
ALARM	Red	<p>Alarm indication</p> <ul style="list-style-type: none">• OFF: Normal• ON: Alarm (CPU stop, alarm for each card)• Flashing: Alarm (MPR file error in restarting)

Confirming the Trunk Connection

After initialisation, programme the Hybrid IP-PBX and establish trunk connection, and then use a PT to confirm it.

To confirm, dial [*][3][7] + trunk number (3 digits) or press S-CO button. You will hear a dial tone if the trunk is available and connected.

Turning off the Hybrid IP-PBX

For safety reasons, make sure to turn off the power switch before unplugging the Hybrid IP-PBX. To unplug, follow the reverse steps to plug it in.

Section 3

Guide for the KX-TDA30 Maintenance Console

Explains the installation procedure, structure, and basic information of the KX-TDA30 Maintenance Console.

3.1 Overview

3.1.1 Overview

KX-TDA30 Maintenance Console is designed to serve as an overall system programming reference for the Hybrid IP-PBX. To programme and administer the Hybrid IP-PBX by PC, you need to install the KX-TDA30 Maintenance Console onto the PC.

This manual describes overview and installation of the KX-TDA30 Maintenance Console only.

KX-TDA30 Maintenance Console^{*1}




^{*1} The contents and design of the software are subject to change without notice.

3.2 Connection

3.2.1 Connection



Serial Interface Connection

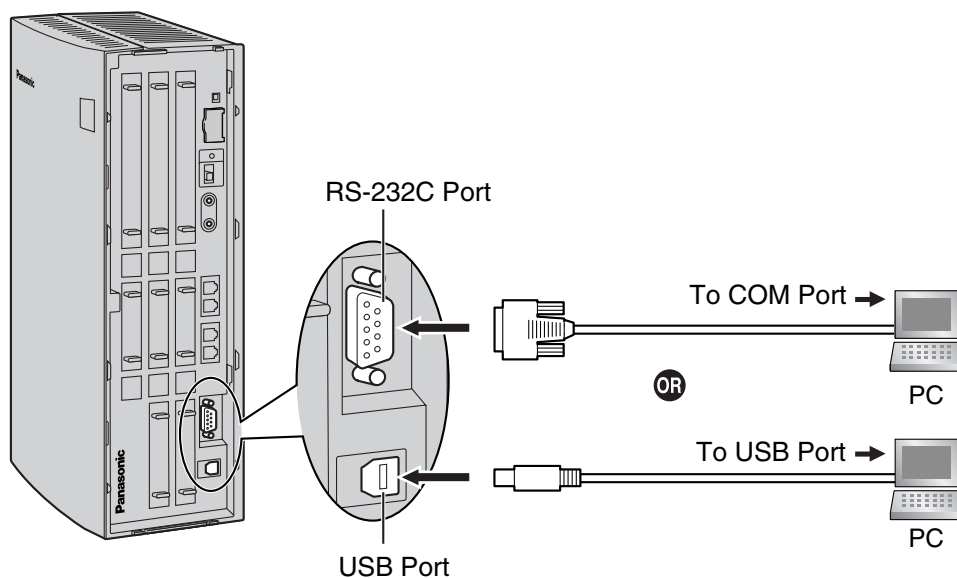

Note

For pin assignments and maximum cabling distance, refer to "2.10.1 Connection of Peripherals".

External Modem Connection

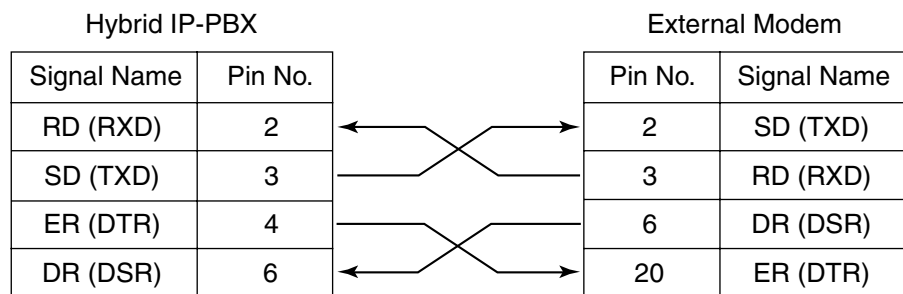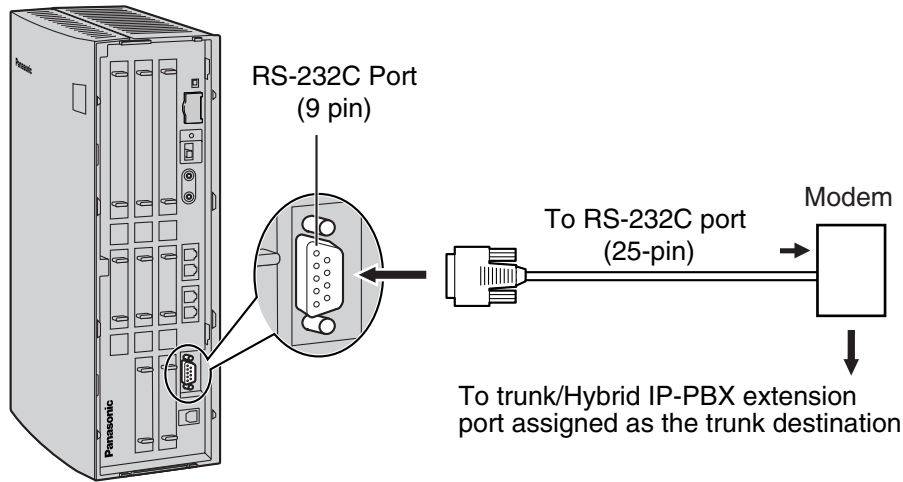

After connecting the Hybrid IP-PBX and the external modem, set the power switch of the external modem to "ON", then the external modem will be initialised with the default values.

The following AT command settings may be required for the modem:

- The Data Terminal Ready (DTR) signal should be ignored.
- The Data Terminal Equipment (DTE)/Modem flow control should be turned off.
- The data compression should be disabled.
- Error Correction is not necessary.

Notes

- Use an RS-232C straight cable for connection between the Hybrid IP-PBX and external modem.
- An AT command (for initialisation, enabling automatic answer, etc.) can only be programmed by KX-TDA30 Maintenance Console. "AT&F0Q0E0V1S0=1X0&D0" is stored as the default value.
- For more information about the AT command, refer to the external modem's instructions.

3.3 Installation of the KX-TDA30 Maintenance Console

3.3.1 Installing and Starting the KX-TDA30 Maintenance Console

System Requirements

Operating System

- Microsoft® Windows® 98 SE, Windows Me, Windows 2000, or Windows XP

Hardware

- CPU: Intel® Pentium® 133 MHz or better microprocessor
- RAM: at least 64 megabytes (MB) of free RAM (128 MB recommended)
- HDD: at least 100 MB of hard disc space

Password Security

Warning to the Administrator or Installer regarding the system password

1. Please provide all system passwords to the customer.
2. To avoid unauthorised access and possible abuse of the PBX, keep the passwords secret, and inform the customer of the importance of the passwords, and the possible dangers if they become known to others.
3. The PBX has default passwords preset. For security, change these passwords the first time that you programme the PBX.
4. Change the passwords periodically.
5. It is strongly recommended that passwords of 10 numbers or characters be used for maximum protection against unauthorised access. For a list of numbers and characters that can be used in system passwords, refer to "3.1.3 Entering Characters" in the Feature Guide.
6. If a system password is forgotten, it can be found by loading a backup of the system data into a PC, and checking the password using the KX-TDA30 Maintenance Console software. If you do not have a backup of the system data, you must reset the PBX to its factory defaults and reprogramme it. Therefore, we strongly recommend maintaining a backup of the system data. For more information on how to back up the system data, refer to the on-line help of the Maintenance Console.

However, as system passwords can be extracted from backup copies of the system data file, do not allow unauthorised access to these files.

Installing the KX-TDA30 Maintenance Console

Notes

- Make sure to install and use the KX-TDA30 Maintenance Console for MPR version 2.0.
- To install or uninstall the software into Windows 2000 Professional or Windows XP Professional, the user must be grouped either of "Administrators" or "Power Users".
- To connect the PC to the Hybrid IP-PBX via USB, the KX-TDA USB driver must have been installed. Follow the instructions of the wizard to install the KX-TDA USB driver.




1. Save the setup file of the KX-TDA30 Maintenance Console on your PC.
2. Double-click the icon to execute the setup file.
3. Follow the instructions of the wizard.

Starting the KX-TDA30 Maintenance Console and Assigning the Basic Items (Quick Setup)

When you start the KX-TDA30 Maintenance Console with the Installer Level Programmer Code and connect to the Hybrid IP-PBX for the first time after initialisation (with the factory default setting), Quick Setup will launch automatically. During Quick Setup, you will setup the following basic items:

- Date and Time of the Hybrid IP-PBX. The date and time set on the PC will be used.
- System Password for installer for PC programming.
- Operator extension numbers. Operator extensions for all time modes (day/lunch/break/night) can be assigned.
- Flexible Numbering type to pattern 1 or pattern 2. If pattern 1 (with *) is selected, "*" must prefix all feature numbers (except access numbers) when an extension user wants to use a feature.
- Operator call and Idle Line Access/ARS numbers (0 or 9). The feature numbers for operator call and Idle Line Access/ARS can be selected.
- Remote Maintenance Dial Number. Enter the complete telephone number of the PBX (including the country code). When necessary, this number will be used to access the PBX from a remote location for maintenance purposes.

1. Connect the PC to the Hybrid IP-PBX with a USB cable.
2. Start the **KX-TDA30 Maintenance Console** from the Start menu.
3. Type the Installer Level Programmer Code (default: **1234**), then click [OK].

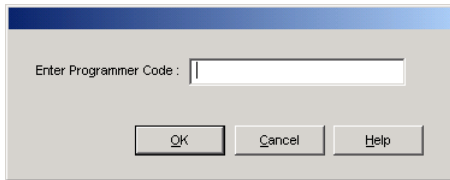


The Programmer Code authorises different programming levels, and the Quick Setup is only available when you start the KX-TDA30 Maintenance Console with the Installer Level Programmer Code.


Note

There are 2 other Programmer Codes with limited authorisation: Administrator Level (default: **1111**), and User Level (default: none).

4. Click "**Connect**" → "**USB**" from the menu bar.

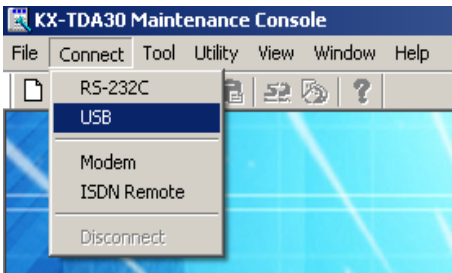


5. Type the system password for installer (default: **1234**), then click [OK] to log-in.

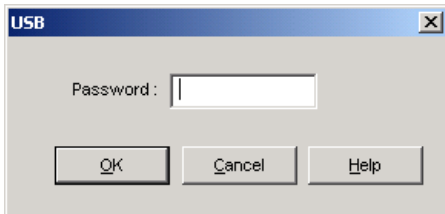


6. **When country/area data do not match:**
 - a. Click [OK] to replace the country/area data of the Hybrid IP-PBX. Replacement may take several minutes to complete.
 - b. Follow the procedure described in "2.12.1 Starting the Hybrid IP-PBX" and restart the Hybrid IP-PBX.
 - c. Repeat steps 2 to 5 to restart the KX-TDA30 Maintenance Console.

3.3 Installation of the KX-TDA30 Maintenance Console

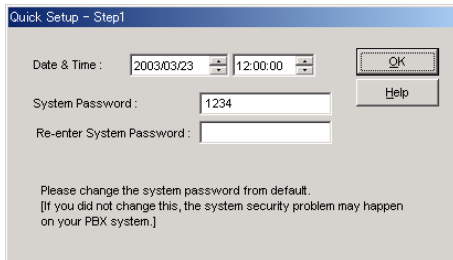

7. Follow the instructions of the wizard and assign the basic items (Quick Setup).

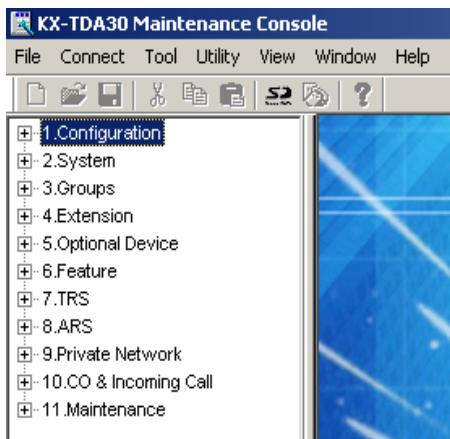

The programme menu appears.

Notice

1. During a long programming session, it is highly recommended that you periodically save the system data to the SD Memory Card. You can think of system data as stored in RAM, whereas SD Memory Card as stored on a hard disk. If the PBX undergoes a sudden power failure or system reset for some reason, all the system data in RAM will be lost.
To save the system data to the SD Memory Card, (1) click the "**SD Memory Backup**" icon before resetting the PBX or turning off the power, or (2) exit the KX-TDA30 Maintenance Console so that the PBX starts automatically saving the system data.
2. When the PBX is initialised, not all data is taken from the SD Memory Card. The data for present status of extension FWD/DND buttons is taken from battery backup memory in the PBX.
3. The PC will not perform any shutdown operation, or enter the power-saving system standby mode while the KX-TDA30 Maintenance Console is connected to the Hybrid IP-PBX. To perform either of the operations above, first close the connection to the Hybrid IP-PBX.

CAUTION

Do not remove the SD Memory Card while power is supplied to the Hybrid IP-PBX. Doing so may cause the Hybrid IP-PBX to fail to start when you try to restart the system.

Section 4

Troubleshooting

This section provides information on the Hybrid IP-PBX and telephone troubleshooting.

4.1 Troubleshooting

4.1.1 Installation

PROBLEM	PROBABLE CAUSE	SOLUTION
Extension does not operate.	Bad extension card.	<ul style="list-style-type: none"> Exchange the card for a known working one.
	Bad connection between the Hybrid IP-PBX and telephone.	<ul style="list-style-type: none"> Take the telephone and plug it into the same extension port using a short telephone cord. If the telephone works, then the connection between the Hybrid IP-PBX and the telephone must be repaired.
	A telephone with an A-A1 relay is connected.	<ul style="list-style-type: none"> Use a 2-wire cord. Set the A-A1 relay switch of the telephone to the "OUT" or "OFF" position.
	Bad telephone.	<ul style="list-style-type: none"> Take the telephone and plug it into another extension port that is working. If the telephone does not work, replace the telephone.
	The number of terminal equipment exceeds the capacity of the Hybrid IP-PBX with the supplied AC adaptor only.	<ul style="list-style-type: none"> Connect an additional AC adaptor.
The Hybrid IP-PBX does not operate properly.		<ul style="list-style-type: none"> Press the Reset Button (refer to "4.1.4 Using the Reset Button"). Turn off the power switch, and then turn it back on. Turn off the power switch, and then unplug the Hybrid IP-PBX. After 5 minutes, plug the Hybrid IP-PBX back in, and turn the power switch back on.
Noise on external paging.	Induced noise on the wire between the Hybrid IP-PBX and the amplifier.	<ul style="list-style-type: none"> Use a shielded cable as the connection wire between the Hybrid IP-PBX and amplifier. A short shielded cable is recommended.
Distorted external music.	Excessive input level from external music source.	<ul style="list-style-type: none"> Decrease the output level of the external music source by using the volume control on the music source.
Alternate Calling—Ring/Voice and Live Call Screening (LCS) do not function as set when using a Wireless Phone (KX-T7880/KX-T7885/KX-TD7894/KX-TD7895).	Voice-calling mode and Hands-free mode with LCS are not available with Wireless Phones.	<ul style="list-style-type: none"> Switch the calling mode to ring-calling. Set the LCS mode to "Private".


PROBLEM	PROBABLE CAUSE	SOLUTION
The ALARM indicator on the front of the cabinet turns on red.	A major system error occurs in the Hybrid IP-PBX.	<ul style="list-style-type: none">• See the error log using the KX-TDA30 Maintenance Console (refer to "4.1.5 Troubleshooting by Error Log").

4.1.2 Connection


Connection between the Hybrid IP-PBX and a PT:

Can you dial an extension?


No

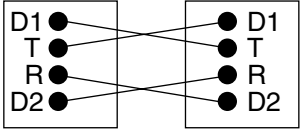CAUSE	SOLUTION
<p>The T/R is connected to the D1/D2.</p>  <p>Hybrid IP-PBX Extension</p>	<p>Use the correct cord (the inner 2 wires are for T/R and the outer 2 wires are for D1/D2).</p>

Connection between the Hybrid IP-PBX and an SLT:

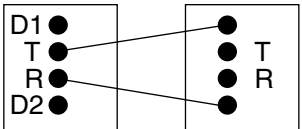CAUSE	SOLUTION
<p>The T/R is connected to the D1/D2.</p>  <p>Hybrid IP-PBX Extension</p>	<p>Use the correct cord (the inner 2 wires are for T/R).</p> <ul style="list-style-type: none"> If a telephone equipped with an A-A1 relay is connected to the Hybrid IP-PBX, set the A-A1 relay switch of the telephone to "OFF".

Connection between the Hybrid IP-PBX and an SLT that is polarity-sensitive:

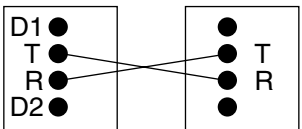CAUSE	SOLUTION
<p>The "T" is connected to the "R".</p>  <p>Hybrid IP-PBX Extension</p>	<p>Reverse the connections of the T/R.</p>

Yes



(Continued on the next page.)

Connection between the trunk and the Hybrid IP-PBX:

(Continued from the previous page.)

Can you dial out on a trunk?

No

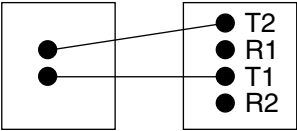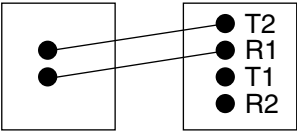CAUSE	SOLUTION
<p>Trunk is connected to the T2/T1.</p>  <p>Trunk Hybrid IP-PBX</p>	<p>Reconnect the trunk to the T1/R1 or T2/R2 of the telephone jack using 2-conductor wiring.</p>
<p>Trunk is connected to the T2/R1.</p>  <p>Trunk Hybrid IP-PBX</p>	

4.1.3 Operation

PROBLEM	PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> When using the speakerphone on an APT, nothing is audible. When using the speakerphone/monitor mode with a DPT, nothing is audible. 	<ul style="list-style-type: none"> The HANDSET/HEADSET selector is set to the "HEADSET" position. The "HEADSET" mode is selected by Personal Programming, "Handset/Headset Selection". 	<ul style="list-style-type: none"> When the headset is not used, set the HANDSET/HEADSET selector to the "HANDSET" position. When the headset is not used, select the "HANDSET" mode by Personal Programming.
<ul style="list-style-type: none"> The PT does not ring. 	<ul style="list-style-type: none"> The ringer volume is off. 	<ul style="list-style-type: none"> Turn on the ringer volume.
<ul style="list-style-type: none"> During a power failure, extensions connected to ports 1 and 2 of Super Hybrid Ports do not operate. 	<ul style="list-style-type: none"> A DPT or APT is connected to the extension port. The dialling mode (tone or pulse) is incorrect. 	<ul style="list-style-type: none"> Disconnect the DPT or APT and connect an SLT. Set the Tone/Pulse switch to the other position.
<ul style="list-style-type: none"> Originating an outside call, call transfer, or conference cannot be performed. 	<ul style="list-style-type: none"> The corresponding CO button does not exist on the PT. 	<ul style="list-style-type: none"> Programme the CO button. Refer to "1.19.2 Flexible Buttons" in the Feature Guide.
<ul style="list-style-type: none"> Cannot register the PS. 	<ul style="list-style-type: none"> Wrong Personal Identification Number (PIN) is registered to the PS. CS is not connected properly. 	<ul style="list-style-type: none"> Register the PIN set to the Hybrid IP-PBX into the PS. Make sure that the cable is connected properly with correct pin assignments. Also, make sure that the cable does not make short circuits. Switch all DIP switches off.
<ul style="list-style-type: none"> PS becomes out of range. Cannot make calls using the PS. 	<ul style="list-style-type: none"> CS is not working. Location of CS is not good. Access system of the PS is not properly set. 	<ul style="list-style-type: none"> Make sure that the cable is connected properly with correct pin assignments. Also, make sure that the cable does not make short circuits. Switch all DIP switches off. Locate the CS properly (refer to "2.7.5 Site Survey Using the KX-TCA255/KX-TD7590" or "2.8.5 Site Survey"). Change the access system setting of the PS to the appropriate system or automatic.
<ul style="list-style-type: none"> Noise is frequent while using the PS. Conversations disconnect while using the PS. 	<ul style="list-style-type: none"> Call handover is not working. PS is out of CS coverage area. 	<ul style="list-style-type: none"> Locate the CS properly (refer to "2.7.5 Site Survey Using the KX-TCA255/KX-TD7590" or "2.8.5 Site Survey").
<ul style="list-style-type: none"> PS stays out of service when the CS status is changed from Out of Service to In Service. 	<ul style="list-style-type: none"> It may take about 10 s for CS to start up after the status has been changed to In Service. 	<ul style="list-style-type: none"> Wait until the CS starts up.

4.1.4 Using the Reset Button

If the Hybrid IP-PBX does not operate properly, use the Reset Button. Before using the Reset Button, try the system feature again to confirm whether there definitely is a problem or not.

CAUTION

In order to avoid possible corruption of data on the SD Memory Card, please ensure that the "SD ACCESS" LED is off before pressing the Reset Button.


Notes

- When the System Initialise Switch is set to "NORMAL", pressing the Reset Button causes the following:
 - Camp-on is cleared.
 - Calls on hold are terminated.
 - Calls on exclusive hold are terminated.
 - Calls in progress are terminated.
 - Call park is cleared.
 Other data stored in memory, except the above, are not cleared.
- When the Reset Button is pressed with the System Initialise Switch in the "SYSTEM INITIALIZE" position, all data stored in memory are cleared.

Operation

If the Hybrid IP-PBX does not operate properly:

1. Set the System Initialise Switch to the "NORMAL" position.
2. Press the Reset Button.

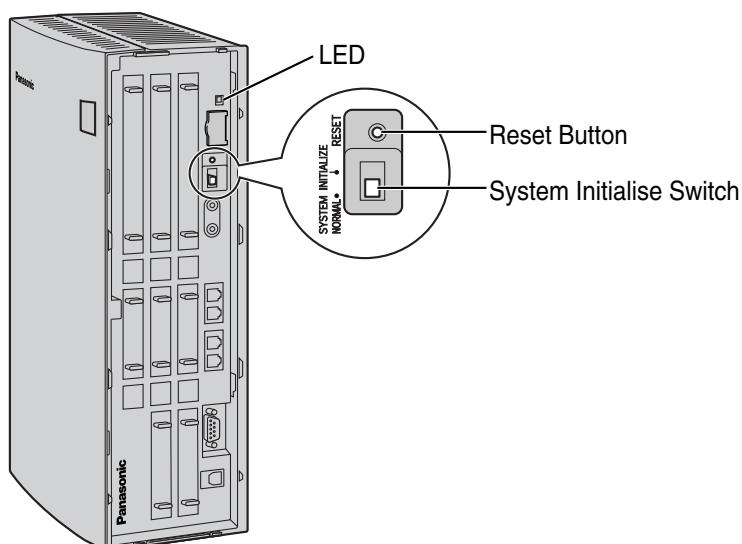


4.1.5 Troubleshooting by Error Log

When a major system error occurs in the Hybrid IP-PBX, the ALARM indicator on the front of the cabinet turns on red, and the system logs the error information.

Error Log Display Format

Below is the display format of the error log. To see the error log using the KX-TDA30 Maintenance Console, refer to the on-line help of the KX-TDA30 Maintenance Console.

Example: KX-TDA30 Maintenance Console

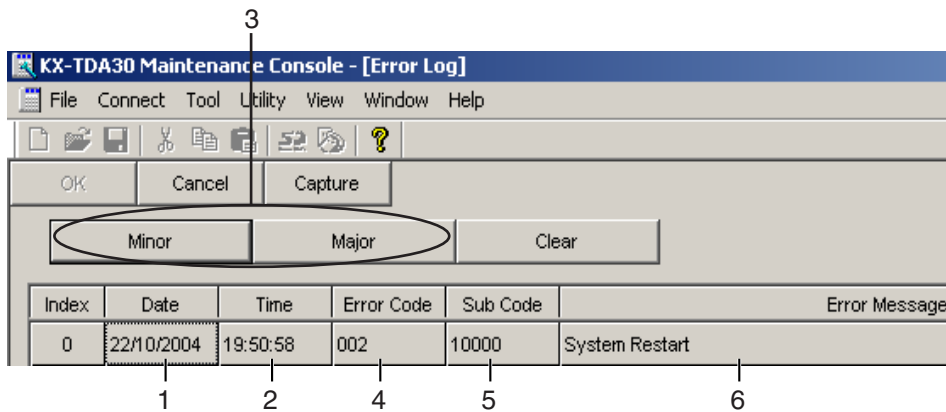

Example: Station Message Detail Recording (SMDR)

```

04/01/01 10:37AM MJ ALM #000 10000 MPR WDT overflow
04/01/01 11:07AM MN ALM #010 10000 AC power down
04/01/01 03:55PM MN ALM #392 10401 Clock master card selected
    
```

Brackets at the bottom of the text label columns 1 through 6.

Description

	Item	Description
1	Date	Date of the error detection
2	Time	Time of the error detection
3	Level	Major Alarm (MJ ALM): Errors that affect the whole system operation, or result in system failure Minor Alarm (MN ALM): Errors that affect certain part of system operation
4	Error Code	Three-digit error code

	Item	Description
5	Sub Code	<p>Five-digit sub code (1XXYY)</p> <p>1: Cabinet number</p> <p>XX: Slot number</p> <p>00 to 11 (00: MPR; 01: Super hybrid ports; 02 to 11: Slots for optional service cards)</p> <p>YY: Physical port number (01 to 16)</p> <p>For optional service cards that are installed in Slots 08 to 11, sub slot number + port number will be displayed.</p> <p>Sub slot 1: 11 to 14</p> <p>Note</p> <p>When there is no parameter for slot and physical port number, XX and YY will be displayed as "00".</p> <p>Example: Sub code for MPR = 10000</p>
6	Error Message	Error description

List of Errors and Solutions

The tables below list the errors and their solutions.

When an error whose error code is indicated with "*" occurs in the Hybrid IP-PBX, the ALARM indicator on the front of the cabinet turns on red, and the system logs the error information.

When the error conditions indicated by the error codes "021", "091", "092", "230", and "510" are recovered, the ALARM indicator will turn off automatically, indicating successful troubleshooting. When other errors are logged, the ALARM indicator will turn off only when the log for major or minor errors is cleared from the KX-TDA30 Maintenance Console.

In other words, the ALARM indicator will turn off under the following conditions:

- **When the errors "021", "091", "092", "230", and "510" are logged:** when the error conditions are recovered
- **When other errors are logged:** when the log for major or minor errors is cleared from the KX-TDA30 Maintenance Console

Optional Service Card Initial Self Diagnosis

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
212	Echo canceller access error	<ul style="list-style-type: none"> Optional service card malfunction: ECHO 	<ul style="list-style-type: none"> See if the corresponding optional service card is installed properly Pull out and re-insert the corresponding optional service card Press the Reset Button Replace the corresponding optional service card
215	Framer IC access error	<ul style="list-style-type: none"> Optional service card malfunction: BRI 	
216	MSG card DSP error	<ul style="list-style-type: none"> Optional service card malfunction: MSG 	
217	MSG card data error	<ul style="list-style-type: none"> Optional service card malfunction: MSG Erroneous recording of messages 	<ul style="list-style-type: none"> See if the corresponding optional service card is installed properly Pull out and re-insert the corresponding optional service card Press the Reset Button Re-record the messages Replace the corresponding optional service card

System Start-up and On-line Operation

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
000*	MPR WDT overflow	<ul style="list-style-type: none"> Main Board (MPR) malfunction Erroneous processing of Main Board (MPR) software Software error due to external factors 	<ul style="list-style-type: none"> Press the Reset Button Reprogramme the Hybrid IP-PBX Replace the Hybrid IP-PBX
001	SDRAM bit error		

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
002	System Restart	<ul style="list-style-type: none"> Reset Button is pressed Power failure Main Board malfunction Erroneous processing of Main Board software Software error due to external factors 	<ul style="list-style-type: none"> Ignore if not frequent Press the Reset Button Reprogramme the Hybrid IP-PBX Replace the Hybrid IP-PBX
010	AC power down	<ul style="list-style-type: none"> AC power down Bad connection or breaking of AC cord 	<ul style="list-style-type: none"> Check the power supply system See if the AC cord is connected properly Check the AC cord Replace the AC cord (be sure to turn off the Hybrid IP-PBX when replacing)
011	DC power down	<ul style="list-style-type: none"> AC power down Power supply circuit (Main Board) malfunction Detection of over current (short circuit on optional service cards) 	<ul style="list-style-type: none"> Check the power supply system See if the AC cord is connected properly Check the AC cord Replace the AC cord (be sure to turn off the Hybrid IP-PBX when replacing) Replace the Hybrid IP-PBX Remove the optional service cards and restart the Hybrid IP-PBX
012*	MPR RAM battery low	<ul style="list-style-type: none"> Battery out Main Board (MPR) malfunction 	<ul style="list-style-type: none"> Replace the Hybrid IP-PBX
013	Additional AC power down	<ul style="list-style-type: none"> Additional AC power down Bad connection or breaking of additional AC cord 	<ul style="list-style-type: none"> Check the power supply system See if the additional AC cord is connected properly Check the additional AC cord Replace the additional AC cord (be sure to turn off the Hybrid IP-PBX when replacing)
017	BRI port overload	<ul style="list-style-type: none"> Defective cable Defective ISDN terminal equipment Optional service card malfunction: BRI 	<ul style="list-style-type: none"> Check the cable Replace the defective terminal equipment Check the number of connected terminal equipment Replace the corresponding optional service card

4.1 Troubleshooting

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
019	Additional AC power on	<ul style="list-style-type: none"> Additional AC power on Bad connection or breaking of additional AC cord 	<ul style="list-style-type: none"> Check the power supply system See if the additional AC cord is connected properly Check the additional AC cord Replace the additional AC cord (be sure to turn off the Hybrid IP-PBX when replacing)
020*	SD file access error	<ul style="list-style-type: none"> SD Memory Card malfunction Bad connection of SD Memory Card Main Board malfunction 	<ul style="list-style-type: none"> Press the Reset Button Reprogramme the Hybrid IP-PBX Replace the SD Memory Card Replace the Hybrid IP-PBX
021*	SD Memory Card disconnected	<ul style="list-style-type: none"> SD Memory Card not installed Bad connection of SD Memory Card SD Memory Card malfunction Main Board malfunction 	
022	Not enough free space on SD card	<ul style="list-style-type: none"> Not enough memory space available to save the system data, or to upload system files from the KX-TDA30 Maintenance Console 	<ul style="list-style-type: none"> Delete the files whose file names start with "\$" from SD Memory Card <p>Note Do not delete the "PSMPR" file; it is the programme file of the Main Board (MPR).</p>
023	System data file version error	<ul style="list-style-type: none"> Old system files on SD Memory Card Defective system files on SD Memory Card 	<ul style="list-style-type: none"> Restore the backup files Re-install the software
024	System initialization file version error		
025	Card initialization file version error		
026	LCD file version error		
027	System data file checksum error		
028	System initialization file checksum error		
029	Card initialization file checksum error		
030	LCD file checksum error		

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
031*	System data file not found	<ul style="list-style-type: none"> SD Memory Card not installed Bad connection of SD Memory Card SD Memory Card malfunction Main Board malfunction 	<ul style="list-style-type: none"> Press the Reset Button Reprogramme the Hybrid IP-PBX Replace the SD Memory Card Replace the Hybrid IP-PBX
032*	System initialization file not found		
033*	Card initialization file not found		
034*	LCD file not found		
035	System data file access error		
036*	System initialization file access error		
037*	Card initialization file access error		
038*	LCD file access error		
039*	SD file access error		
090	Over Card Limitation	<ul style="list-style-type: none"> Too many optional service cards installed 	<ul style="list-style-type: none"> Reduce the number of optional service cards
091*	PT connection over	<ul style="list-style-type: none"> Too many PTs connected 	<ul style="list-style-type: none"> Reduce the number of PTs
092*	CS connection over	<ul style="list-style-type: none"> Too many CSs connected 	<ul style="list-style-type: none"> Reduce the number of CSs
230*	Card disconnected	<ul style="list-style-type: none"> Optional service card not installed properly Optional service card malfunction Main Board malfunction 	<ul style="list-style-type: none"> See if the corresponding optional service card is installed properly Pull out and re-insert the corresponding optional service card Press the Reset Button Replace the corresponding optional service card Replace the Hybrid IP-PBX
234	DPLL clock failure	<ul style="list-style-type: none"> Optional service card malfunction: DLC, BRI, IP-GW Main Board (MPR) malfunction 	<ul style="list-style-type: none"> See if the corresponding optional service card is installed properly Pull out and re-insert the corresponding optional service card Press the Reset Button Replace the corresponding optional service card Replace the Hybrid IP-PBX

4.1 Troubleshooting

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
251	MSG DSP failure	<ul style="list-style-type: none"> Optional service card malfunction: MSG 	<ul style="list-style-type: none"> See if the corresponding optional service card is installed properly Replace the corresponding optional service card
305*	Data Link failure	<ul style="list-style-type: none"> Data link between the CS and Hybrid IP-PBX failed Data link between the network and BRI/IP-GW card failed 	<ul style="list-style-type: none"> Check the connection between the CS and Hybrid IP-PBX Check the connection between the network and BRI/IP-GW card
307	LAN No Carrier	<ul style="list-style-type: none"> IP-GW card not connected to the LAN 	<ul style="list-style-type: none"> Check the connection between the LAN and IP-GW card
308	IP-GW LAN Loop back Error	<ul style="list-style-type: none"> Detection of IP-GW LAN Loop back Test error 	<ul style="list-style-type: none"> Replace the corresponding optional service card Collect the log data of IP-GW (refer to the documentation for the IP-GW card)
309	IP-GW Core Data Link Error	<ul style="list-style-type: none"> Detection of IP-GW Core data Link error 	<ul style="list-style-type: none"> Press the Reset Button Collect the log data of IP-GW (refer to the documentation for the IP-GW card)
310*	Port Link Failure	<ul style="list-style-type: none"> Voice Processing System malfunction Ports defective on optional service card: DLC 	<ul style="list-style-type: none"> Check the Voice Processing System See if the corresponding optional service card is installed properly Replace the corresponding optional service card
320	IP-GW H.323 Dummy Call Test Error	<ul style="list-style-type: none"> Detection of IP-GW H.323 Dummy Call Test error 	<ul style="list-style-type: none"> Replace the corresponding optional service card Collect the log data of IP-GW (refer to the documentation for the IP-GW card)
321	IP-GW Gatekeeper Error	<ul style="list-style-type: none"> Detection of Gatekeeper access error 	<ul style="list-style-type: none"> Check the IP address setting of Gatekeeper Check whether the Gatekeeper is connected to the network and work properly Check the route to the Gatekeeper
322	IP-GW Gatekeeper Registration Error	<ul style="list-style-type: none"> Gatekeeper Registration is failed 	<ul style="list-style-type: none"> Check the Gatekeeper setting
323	IP-GW SDRAM Failure	<ul style="list-style-type: none"> Detection of IP-GW SDRAM error 	<ul style="list-style-type: none"> Replace the corresponding optional service card
324	IP-GW DPRAM Failure	<ul style="list-style-type: none"> Detection of IP-GW DPRAM error 	<ul style="list-style-type: none"> Replace the corresponding optional service card
325	IP-GW LAN Chip Failure	<ul style="list-style-type: none"> Detection of IP-GW LAN Chip failure 	<ul style="list-style-type: none"> Replace the corresponding optional service card Collect the log data of IP-GW (refer to the documentation for the IP-GW card)

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
326	IP-GW Stop	<ul style="list-style-type: none"> IP-GW is stopped from a remote maintenance PC 	<ul style="list-style-type: none"> This information is logged when IP-GW is stopped from a remote maintenance PC
330	Loop current detection error	<ul style="list-style-type: none"> Detection of LCOT loop current error 	<ul style="list-style-type: none"> Change the corresponding trunk status back to In Service Enter the feature number to clear Busy Out status The trunk status is automatically changed back to In Service by system diagnosis performed at a preprogrammed time every day
370	IP-GW Rebooted by Maintenance Console	<ul style="list-style-type: none"> IP-GW is rebooted from a remote maintenance PC 	<ul style="list-style-type: none"> This information is logged when IP-GW is rebooted from a remote maintenance PC
371	IP-GW Rebooted	<ul style="list-style-type: none"> Optional service card malfunction: IP-GW 	<ul style="list-style-type: none"> Check whether the software version of the IP-GW card is correct
372	NDSS message over IPGW notification - caused by IPGW Tx resource limitation	<ul style="list-style-type: none"> Optional service card malfunction: IP-GW 	<ul style="list-style-type: none"> Ignore if not frequent Change the IP-GW card status to Out of Service, and then back to In Service
373	NDSS message over IPGW notification - caused by IPGW Rx resource limitation		
374	NDSS message over IPGW notification - caused by shortage of IPGW resource		
375	NDSS message over IPGW notification - caused by Network side	<ul style="list-style-type: none"> Network malfunction 	<ul style="list-style-type: none"> Ignore if not frequent Consult your network administrator

4.1 Troubleshooting

Error Code	Error Message	PROBABLE CAUSE	SOLUTION
391	Data Link established	<ul style="list-style-type: none"> Connection with PC Phone/ PC Console or Voice Processing System (DPT Integration) established or restored 	<ul style="list-style-type: none"> This information is logged when connection with PC Phone/PC Console or Voice Processing System (DPT Integration) is established, and does not indicate an error condition that needs to be solved. However, if this is logged frequently (with "305 Data Link failure"), check the connection as it may not be done properly.
392	Clock master card selected	<ul style="list-style-type: none"> Clock master card has been changed to the one indicated by the sub code 	<ul style="list-style-type: none"> Check if the proper card is selected as the new clock master card
393	LAN Carrier detected	<ul style="list-style-type: none"> IP-GW card connected to the LAN 	<ul style="list-style-type: none"> This information is logged when synchronisation of LAN is established
394	IP-GW Core Data Link established	<ul style="list-style-type: none"> IP-GW Core Data Link established 	<ul style="list-style-type: none"> This information is logged when IP-GW Core Data Link is recovered
395	IP-GW Gatekeeper Error Cleared	<ul style="list-style-type: none"> Connection to the Gatekeeper is recovered 	<ul style="list-style-type: none"> This information is logged when connection to the Gatekeeper is recovered
396	IP-GW Run	<ul style="list-style-type: none"> IP-GW is started from a remote maintenance PC 	<ul style="list-style-type: none"> This information is logged when IP-GW is started from a remote maintenance PC
510*	SMDR disconnect	<ul style="list-style-type: none"> RS-232C cable not connected Breaking of RS-232C cable Printer (terminal equipment) malfunction 	<ul style="list-style-type: none"> Check the RS-232C cable Check the terminal equipment

Section 5
Appendix

5.1 Revision History

5.1.1 MPR Version 1.1

New Options

- System Components Table
- KX-TDA3182 3-Port DID Card (DID3)
- KX-TDA3183 2-Port Analogue Trunk Card (LCOT2)
- KX-TDA3105 Memory Expansion Card (MEC)

Changed Contents

- 1.4.3 System Capacity

5.1.2 MPR Version 2.0

New Options

- System Components Table
- KX-TDA3283 1-Port BRI Card (BRI1)
- KX-TDA3820 SD Memory Card for Software Upgrade
- KX-TDA3920 SD Memory Card for Software Upgrade to Enhanced Version

Changed Contents

- 1.4.3 System Capacity
- 2.9.1 Connection of Doorphones, Door Openers, External Sensors, and External Relays

5.1 Revision History

Index

Numerics

- 1-Port BRI Card (KX-TDA3283) 22, 71
- 2-Channel Message Card (KX-TDA3191) 21, 88
- 2-Port Analogue Trunk Card (KX-TDA3183) 21, 65
- 2-Port BRI Card (KX-TDA3280) 22, 68
- 2-Port Doorphone Card (German Type) (KX-TDA3162) 21, 84
- 3-Port DID Card (KX-TDA3182) 21, 67
- 4-Channel VoIP Gateway Card (KX-TDA3480) 22, 74
- 4-Port Analogue Trunk Card (KX-TDA3180) 21, 63
- 4-Port Caller ID Card (KX-TDA3193) 21, 66
- 4-Port Digital Extension Card (KX-TDA3171) 21, 76
- 4-Port Doorphone Card (KX-TDA3161) 21, 81
- 4-Port Single Line Telephone Extension Card (KX-TDA3173) 21, 78
- 8-Channel Echo Canceller Card (KX-TDA3166) 21, 87
- 8-Port Digital Extension Card (KX-TDA3172) 21, 79
- 8-Port Single Line Telephone Extension Card (KX-TDA3174) 21, 80

A

- About the Other Manuals 9
- AC Adaptor Capability 29
- AC Adaptor Selection (With BRI Extension Port) 28
- AC Adaptor Selection (Without BRI Extension Port) 28
- Additional AC Adaptor (KX-A236) 22
- After Site Survey 119, 142
- Appendix 197

B

- Backup Batteries Connection 41
- Basic System Construction 18
- Before Installation 32
- Before Site Survey 111, 136
- BRI1 Card 71
- BRI2 Card 68
- Built-in Small Call Centre Features 16

C

- Calculation Example 27, 29
- Changed Contents 198, 199
- Characteristics 25
- CID4 Card 66
- Computer Telephony Integration (CTI) Features 16
- Confirming the Trunk Connection 172
- Connecting a Cell Station to the Hybrid IP-PBX 120, 143
- Connection 175, 184
- Connection Diagram for External Sensors and External Relays 83, 86
- Connection of 2.4 GHz Portable Stations 129
- Connection of DECT Portable Stations 103
- Connection of Doorphones, Door Openers, External Sensors, and External Relays 152
- Connection of Extensions 94
- Connection of Peripherals 163
- Construction of Main Unit 18
- CTI—First Party Call Control 102
- CTI—Third Party Call Control 166

D

- DID3 Card 67
- Digital EXtra Device Port (Digital XDP) Connection 97

- Digital XDP 97
- DLC4 Card 76
- DLC8 Card 79
- Door Opener 81, 84, 152
- Doorphone 81, 84, 152
- DPH2 Card 84
- DPH4 Card 81

E

- ECHO8 Card 87
- EXT-CID Card 89
- Extension Caller ID Card (KX-TDA3168) 21, 89
- EXtra Device Port (XDP) Mode 95, 97

F

- First Party Call Control CTI Connection 102
- Frame Earth Connection 40

G

- General Description 23
- Guide for the KX-TDA30 Maintenance Console 173

H

- Handling of the Cables 48
- Hospitality Features 17


I

- Installation 31
- Installation of the Extension Cards 76
- Installation of the Hybrid IP-PBX 34
- Installation of the KX-TDA30 Maintenance Console 177
- Installation of the Other Cards 81
- Installation of the SD Memory Card 39
- Installation of the Trunk Cards 63
- Installation Precautions 32
- Installing and Starting the KX-TDA30 Maintenance Console 177
- Installing the KX-TDA30 Maintenance Console 178
- Installing/Removing the Optional Service Cards 42
- IP-GW4 Card 74

K

- KX-A236 (Additional AC Adaptor) 22
- KX-TDA3105 (Memory Expansion Card) 21, 90
- KX-TDA3161 (4-Port Doorphone Card) 21, 81
- KX-TDA3162 (2-Port Doorphone Card (German Type)) 21, 84
- KX-TDA3166 (8-Channel Echo Canceller Card) 21, 87
- KX-TDA3168 (Extension Caller ID Card) 21, 89
- KX-TDA3171 (4-Port Digital Extension Card) 21, 76
- KX-TDA3172 (8-Port Digital Extension Card) 21, 79
- KX-TDA3173 (4-Port Single Line Telephone Extension Card) 21, 78
- KX-TDA3174 (8-Port Single Line Telephone Extension Card) 21, 80
- KX-TDA3180 (4-Port Analogue Trunk Card) 21, 63
- KX-TDA3182 (3-Port DID Card) 21, 67
- KX-TDA3183 (2-Port Analogue Trunk Card) 21, 65
- KX-TDA3191 (2-Channel Message Card) 21, 88
- KX-TDA3193 (4-Port Caller ID Card) 21, 66
- KX-TDA3196 (Remote Card) 22, 92
- KX-TDA3280 (2-Port BRI Card) 22, 68

- KX-TDA3283 (1-Port BRI Card) 22, 71
 KX-TDA3480 (4-Channel VoIP Gateway Card) 22, 74
 KX-TDA3820 (SD Memory Card for Software Upgrade) 22, 39
 KX-TDA3920 (SD Memory Card for Software Upgrade to Enhanced Version) 22, 39
- L**
- LCOT2 Card 65
 LCOT4 Card 63
- M**
- Main Unit 18
 Maximum Cabling Distances of the Extension Wiring (Twisted Cable) 94
 Maximum Terminal Equipment 26
 Maximum Trunk and VoIP Line 26
 MEC Card 90
 MEC Card Calculation 27
 Memory Expansion Card (KX-TDA3105) 21, 90
 MPR Version 1.1 198
 MPR Version 2.0 199
 MSG2 Card 88
- N**
- Names and Locations 35
 Networking Features 16
 New Options 198, 199
- O**
- Opening/Closing the Covers 36
 Operation 186
 Options 21
 Overview 103, 129, 174
- P**
- Parallel Connection of the Extensions 95
 Parallel Mode 95, 97
 Paralleled Telephone Features 17
 Password Security 177
 PC Phone/PC Console Features 17
 Portable Station (PS) Features 17
 Power Failure Connections 167
 Procedure Overview 105, 130
- R**
- Remote Card (KX-TDA3196) 22, 92
 Removing/Attaching the Front Cover 37
 Revision History 198
 RF Specification 103
 RMT Card 92
- S**
- Safety Installation Instructions 32
 SAFETY REQUIREMENTS 4
 SD Memory Card 39
 SD Memory Card for Software Upgrade (KX-TDA3820) 22, 39
 SD Memory Card for Software Upgrade to Enhanced Version (KX-TDA3920) 22, 39
- Site Planning 107, 132
 Site Survey 138
 Site Survey Using the KX-TCA255/KX-TD7590 115
 SLC4 Card 78
 SLC8 Card 80
 Slot Position 42
 Slot Restrictions 42
 Specifications 23
 Starting the Hybrid IP-PBX 169
 Starting the KX-TDA30 Maintenance Console and Assigning the Basic Items (Quick Setup) 178
 Surge Protector Installation 60
 System Capacity 26
 System Components Table 2
 System Connection Diagram 19
 System Highlights 16
 System Outline 15
- T**
- The Structure of this Manual 9
 Troubleshooting 181, 182
 Troubleshooting by Error Log 188
 Turning off the Hybrid IP-PBX 172
 Types of Connectors 52
- U**
- Unpacking 34
 Using a Modular T-Adaptor 95, 97, 99
 Using an EXtra Device Port 96
 Using the Reset Button 187
- V**
- Voice Mail Features 16
- W**
- Wall Mounting (AC Adaptor) 57
 Wall Mounting (CS) 127, 150
 Wall Mounting (KX-TDA30) 54
 Wiring Precautions 32

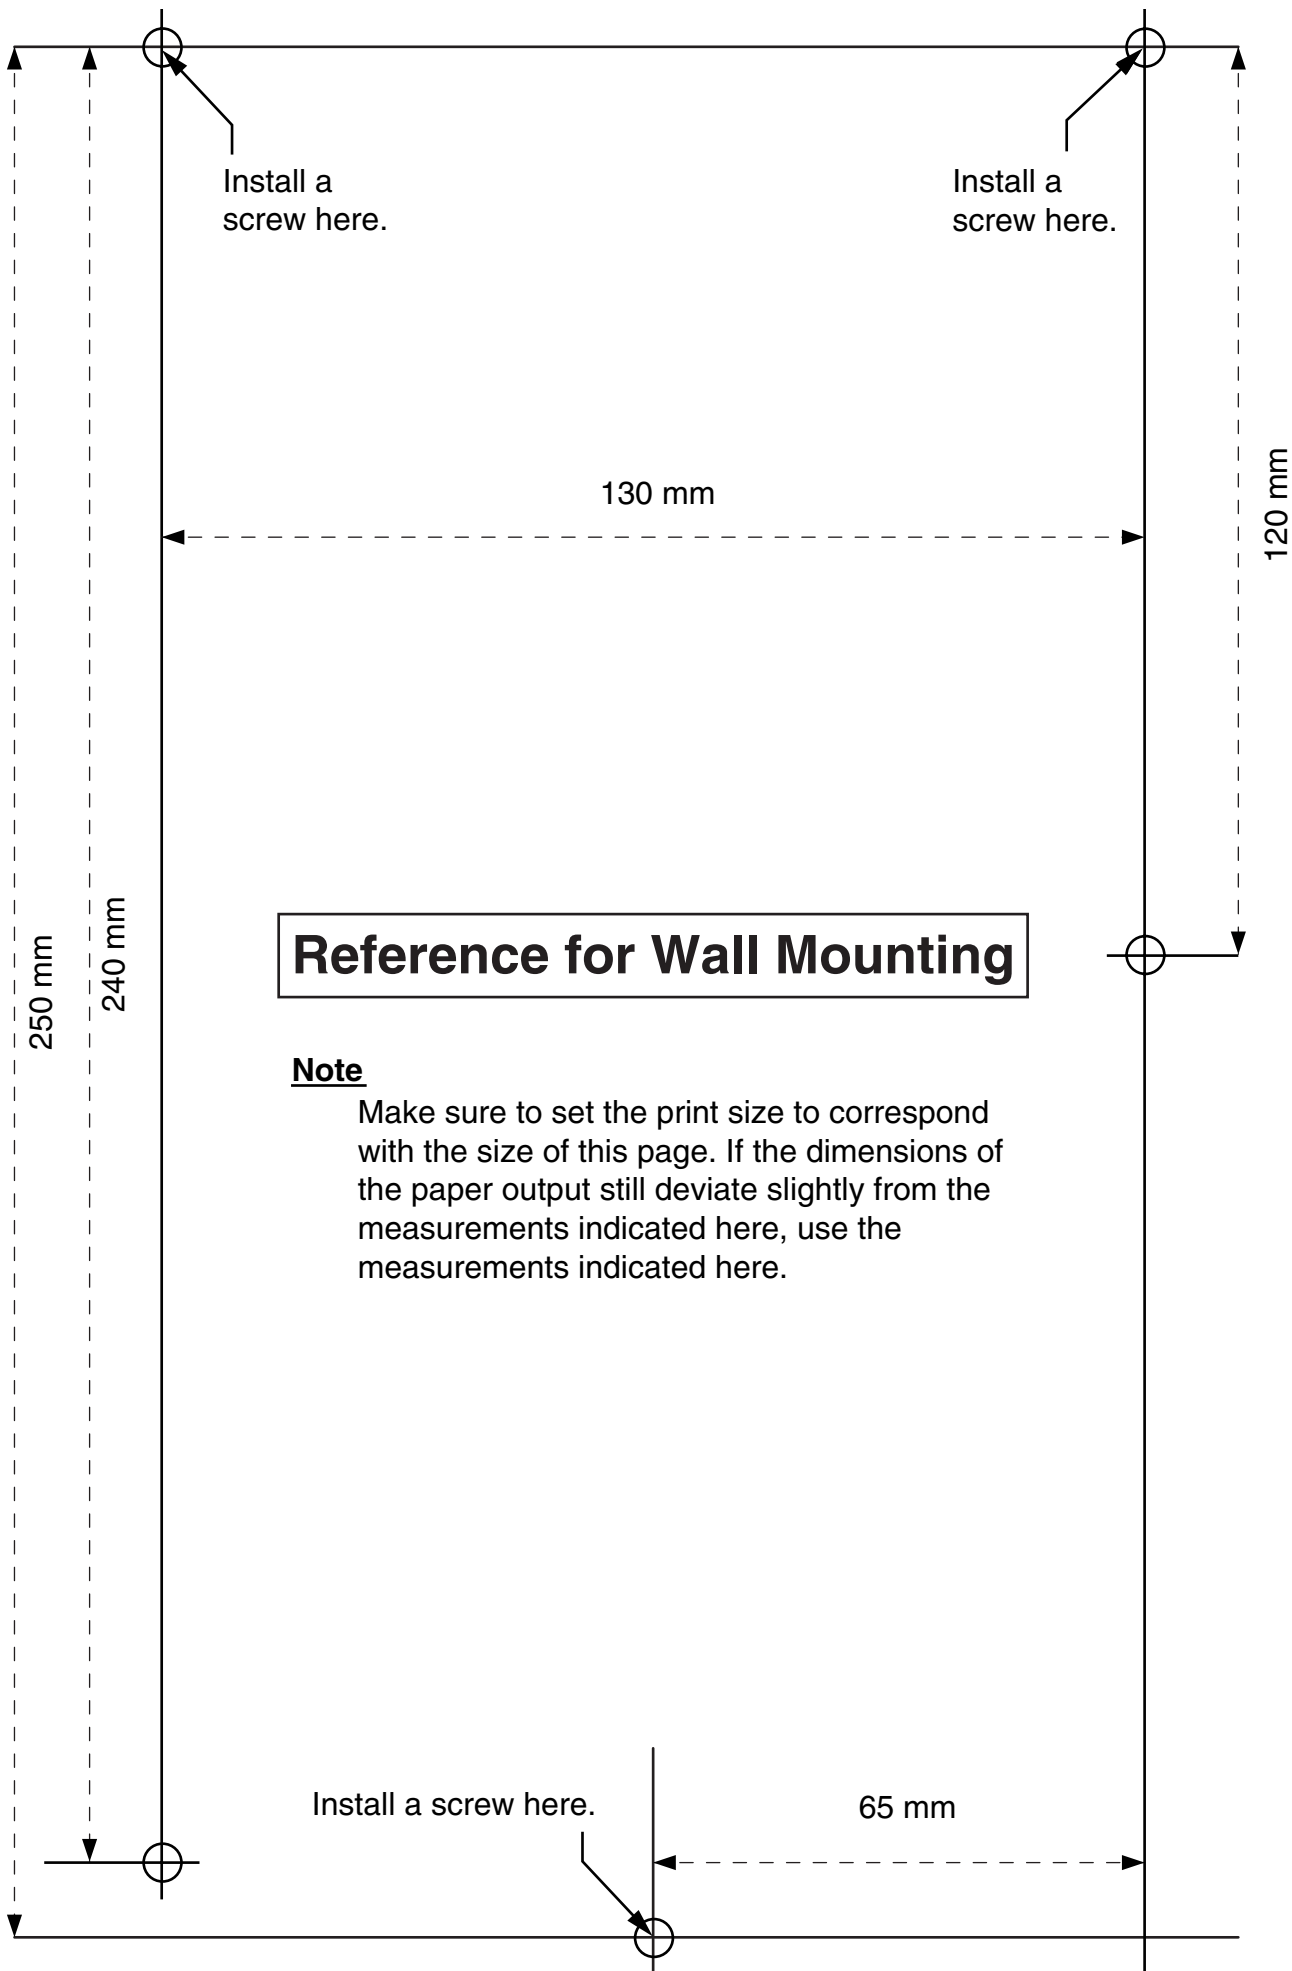

Reference for Wall Mounting

Note

Make sure to set the print size to correspond with the size of this page. If the dimensions of the paper output still deviate slightly from the measurements indicated here, use the measurements indicated here.

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan

Copyright:

This material is copyrighted by Panasonic Communications Co., Ltd., and may be reproduced for internal use only. All other reproduction, in whole or in part, is prohibited without the written consent of Panasonic Communications Co., Ltd.

© 2004 Panasonic Communications Co., Ltd. All Rights Reserved.